

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Edifier](#) /

› [Edifier W820NB Hybrid Active Noise Cancelling Headphones - Instruction Manual](#)

Edifier W820NB

Edifier W820NB Hybrid Active Noise Cancelling Headphones - Instruction Manual

Model: W820NB

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Edifier W820NB Hybrid Active Noise Cancelling Headphones. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.



Image: Front view of the Edifier W820NB Hybrid Active Noise Cancelling Headphones in black.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. A full charge takes approximately 1.5 hours.

- Connect the provided USB Type-C cable to the charging port on the headphone.
- Connect the other end of the cable to a USB power source (e.g., computer USB port, wall adapter).
- The indicator light will show charging status (refer to LED indicator section for details).

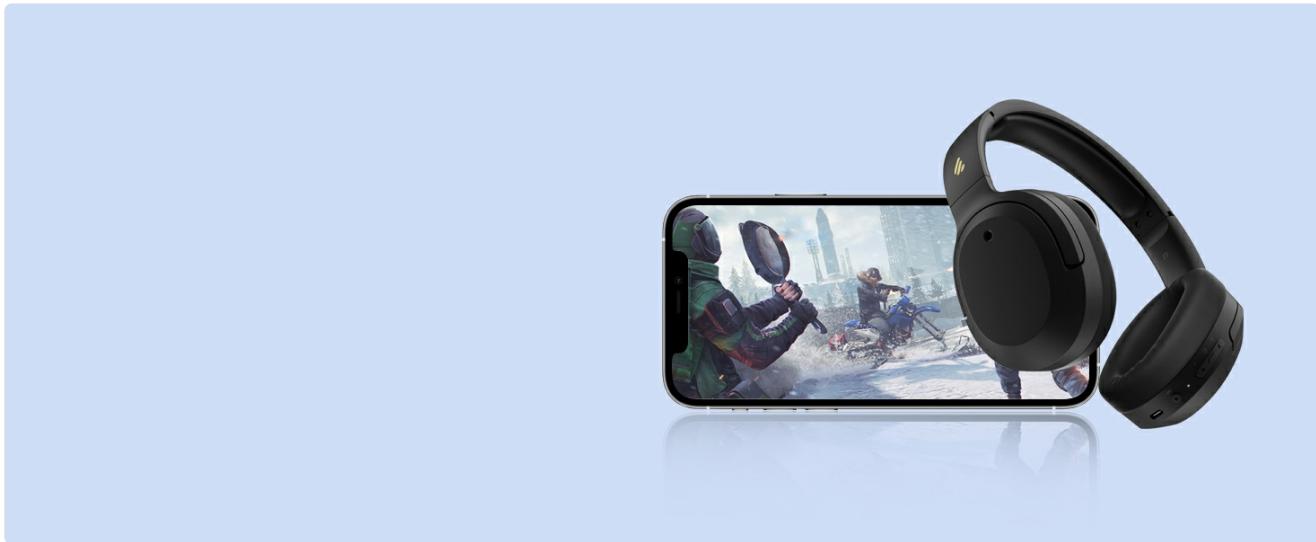


Image: Diagram illustrating the USB-C charging port on the Edifier W820NB headphones and a charging cable connected, indicating a 1.5-hour charging time.

2. Bluetooth Pairing

To connect your headphones to a device via Bluetooth:

1. Ensure the headphones are powered off.
2. Press and hold the power button until the indicator light flashes rapidly (usually blue and red), indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "EDIFIER W820NB" from the list.
5. Once connected, the indicator light will flash slowly or remain solid blue.

The headphones support Bluetooth 5.2 for a stable connection up to 10 meters.

Your browser does not support the video tag.

Video: A user demonstrating how the Edifier W820NB headphones can lay flat, making them convenient for travel and storage. This feature enhances portability.

OPERATING INSTRUCTIONS

Controls Overview

The right earcup features several buttons for controlling playback, volume, and modes:

- **Power Button:** Press and hold to power on/off. Short press for play/pause.
- **Volume Up (+):** Increase volume.

- **Volume Down (-):** Decrease volume.
- **Multi-function Button (M):** Switches between Active Noise Cancellation (ANC), Ambient Sound Mode, and ANC Off.

Hybrid Active Noise Cancellation



Image: Close-up view of the right earcup of the Edifier W820NB headphones, highlighting the power, volume, and multi-function buttons, along with the USB-C port.

Active Noise Cancellation (ANC)

The W820NB headphones feature Hybrid Active Noise Cancellation to reduce ambient noise.

- Press the **Multi-function Button (M)** to cycle through modes: ANC On, Ambient Sound Mode, and ANC Off.
- ANC is most effective at reducing low-frequency, constant noises (e.g., airplane engines, fan hum).

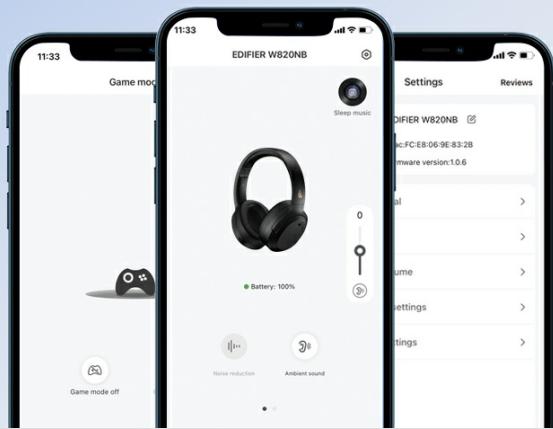


Image: Graphic illustrating the Hybrid Active Noise Cancellation feature, showing external sound waves being cancelled out by the headphone technology.

Ambient Sound Mode

This mode allows you to hear your surroundings without removing the headphones, useful for announcements or conversations.

- Press the **Multi-function Button (M)** to activate Ambient Sound Mode.

Ambient Sound Mode

Allows you to hear environmental sounds such as traffic or flight announcements



Image: A person wearing Edifier W820NB headphones in a public setting, with visual cues indicating environmental sounds passing through, demonstrating Ambient Sound Mode.

Phone Calls

The headphones include built-in microphones with DNN (Deep Neural Network) noise cancellation for clear hands-free calling.

- **Answer/End Call:** Short press the Power button.
- **Reject Call:** Press and hold the Power button.

CLEAR HAND-FREE CALLING

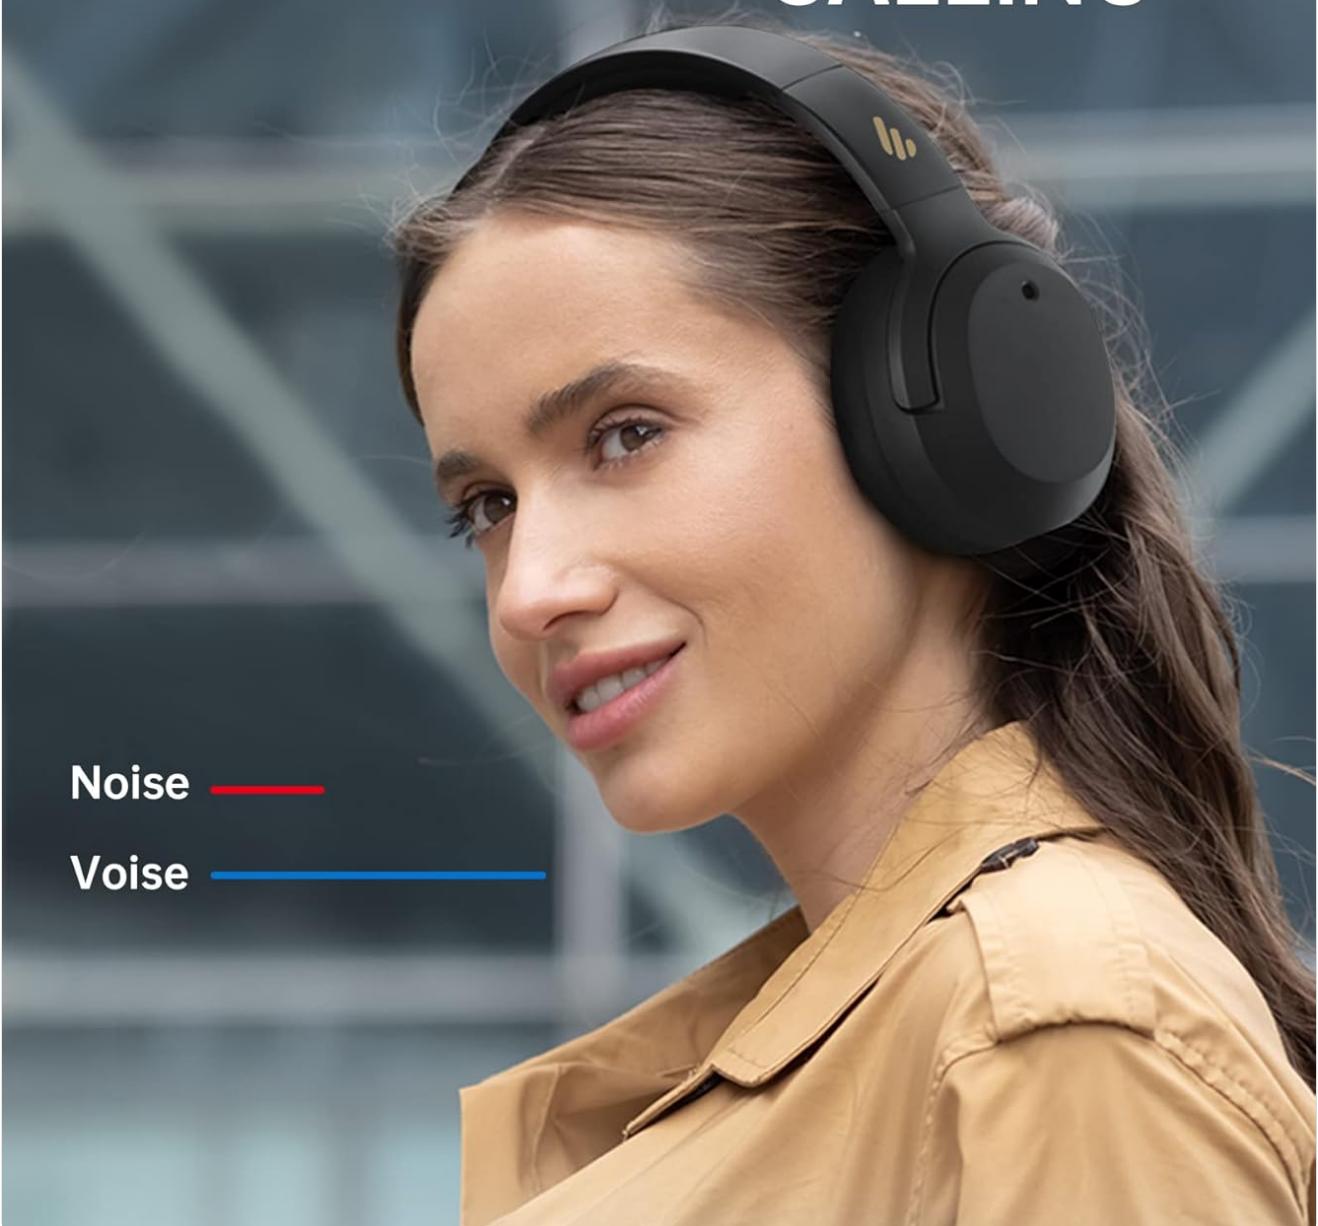


Image: A woman wearing Edifier W820NB headphones, with a graphic illustrating the separation of voice from noise during a phone call, highlighting clear hands-free calling capabilities.

Game Mode

For an immersive gaming experience with low latency:

- Activate Game Mode via the Edifier Connect App.

Your browser does not support the video tag.

Video: A detailed review of the Edifier W820NB Plus Wireless Noise Cancelling Headphones, covering various features, sound quality, and user experience. This video provides a comprehensive overview of the product's capabilities.

MAINTENANCE

- Clean the headphones with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Store the headphones in a cool, dry place when not in use. The earcups can swivel 90 degrees to fold flat for easier storage.
- Do not attempt to disassemble or repair the headphones yourself. Contact authorized service personnel.



Image: Edifier W820NB headphones folded flat on a desk, showcasing their compact design for convenient storage or travel.

TROUBLESHOOTING

Problem	Solution
No sound/Low volume	Ensure headphones are powered on and charged. Check device volume and headphone volume. Ensure headphones are correctly paired to the device. Try re-pairing the headphones.
Cannot pair via Bluetooth	Ensure headphones are in pairing mode (rapid flashing indicator). Move headphones closer to the device. Clear Bluetooth history on your device and try again. Restart both headphones and the device.
Poor call quality	Ensure microphone is not obstructed. Check network signal strength on your phone. Move to a quieter environment.
ANC not effective	Ensure ANC is activated (Multi-function button). Adjust headphone fit to ensure a good seal around the ears. ANC is less effective against high-frequency or irregular sounds.

SPECIFICATIONS

- Model:** W820NB
- Brand:** Edifier
- Noise Control:** Hybrid Active Noise Cancellation
- Audio Driver Type:** Dynamic Driver
- Audio Driver Size:** 40 mm
- Frequency Response:** 20 Hz - 40 kHz (Hi-Res Audio Certified)
- Connectivity Technology:** Wireless (Bluetooth 5.2), Wired (USB Type-C)
- Bluetooth Range:** 10 Meters
- Battery Life:** Up to 49 hours (ANC Off), Up to 29 hours (ANC On)
- Charging Time:** Approximately 1.5 hours
- Item Weight:** 220 Grams (7.8 ounces)
- Special Features:** Hi-Res Audio Certified, Ambient Sound Mode, Microphone with DNN Noise Cancellation, Game Mode
- Included Components:** USB Type-C Charging Cable

STUNNING CLARITY AND DETAIL



Image: A person wearing Edifier W820NB headphones, with a "Hi-Res Audio" logo prominently displayed, emphasizing the high-fidelity sound capabilities.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Edifier website or contact their customer service directly. Keep your proof of purchase for warranty claims.

Manufacturer: Edifier

Date First Available: July 5, 2021

UPC: 875674005701, 767531549803

Related Documents - W820NB



W820NB

EDIFIER WIRELESS HEADPHONE

EN 1. Product description and accessories

Accessories: Headset x1, Charging cable x1, User manual x1

Notes:

- Images are for illustrative purposes only and may differ from the actual product.
- To enjoy Hi-Fi audio, please connect this headset to audio output devices with a type-C data cable.

2. Power on/off

• Power on:
Press and hold the power button for around 3 seconds, and the blue light will turn on.
• Power off:
Press and hold the power button for around 3 seconds, and the blue light will turn off and then turn on.

3. Charge

• Charge the headset:
- Connect the headset for charging with the power adapter.
- Red and green lights steady. If - charging
- Red and green lights off - fully charged

Input: 5V 2A 1A

Warning: The rechargeable batteries that provide power to this product must be disposed properly for recycling. Do not dispose of batteries in the fire prevent or asbestos.

4. User guide

• Bluetooth connection

• For initial use, press and hold the power button for around 3 seconds to power on the headset with the blue and green lights flashing alternately and then connect to the device for the first time. Set mobile phone to search for and connect to the headset. If the connection fails, please turn off the headset and then turn it on again. Connect to new Bluetooth device. When the headset is powered on, press and hold the power button for around 3 seconds to connect to the device connection, and the blue and green lights will flash alternately and rapidly.

• Restore to factory settings:
When the headset is powered on, press and hold the " + " and " - " buttons simultaneously for around 10 seconds until the blue light flashes 10 times rapidly to be set to factory settings.

• Music playback

• Call

• Mode switch/Bluetooth pairing

5. FAQs

Red light instead of blue light flashes:
The headset is at low battery level, please recharge the headset.

No sound:
• Check if the headset is operating.
• Check if the headset volume is at an appropriate level.
• Check if the connection between the headset and mobile phone is stable.
• Check if the headset is operating in a normal working range.

The call quality of the headset is not good:
• Check if the connection between the headset and mobile phone is stable.
• Please ensure the headset is within effective distance (10m) and no obstacle.

Model: EDF200046
Edifier International Limited
P.O. Box 6264
General Post Office
Hong Kong
www.edifier.com
©2011 Edifier International Limited. Tutti i diritti riservati.
Stampato in Cina

COMUNICAZIONE:
Per necessità di miglioramenti tecnici e aggiornamenti delle informazioni, qui contenute possono essere soggette a modifica senza preavviso.
I prodotti EDIFIER vengono personalizzati per applicazioni.
Le immagini mostrate in questo manuale possono differire leggermente dal prodotto reale. In caso di eventuali differenze il prodotto reale.

PT 1. Descrição do produto e acessórios

Botão multilinhas

Porta de carregamento

Acessórios: Fone de ouvido x1, Cabo de carregamento x1, Manual do utilizador x1

- As imagens são apenas ilustrativas e podem diferir da produto real.
- Para desfrutar o Hi-Fi do Audí, conecte este fone de ouvido a clipe de saída de fones com um cabo de áudio Tipo C.

- **Ligar/desligar**

AVISO: As baterias recarregáveis que alimentam este produto têm de ser devidamente eliminadas para reciclagem. Não elimine as baterias m para evitar uma explosão.

- Para o uso inicial, pressione e segure a bateria de energia por cerca de 10 segundos logo acione a lanterna com as luzes azul e verde alternadamente e rapidamente, iniciando automaticamente no arranque inicial Bluetooth.
- Configure o celular para procurar e conectar a "TDFIR_WiFi00000000000000000000000000000000" para conexão bem sucedida, aí as luzes azul e verdes irão piscar rapidamente, e a barra de conexão do dispositivo ficará visível.
- Conectar a mesma dispositivo Bluetooth. Quando o fone de ouvido estiver ligado, pressione e segure a bateria de energia por cerca de 10 segundos logo acione a lanterna com as luzes azul e verde piscando alternadamente e rapidamente.

5. FAQs

A luz permanece plena em vez da luz azul.
- indica que a lente de faróis é transparente ou está feita, recupere-a.

Não é emitido nemhuma sinal no fone de ouvido.
- Verifique se o fone de ouvido está funcionando.
- Verifique se o volume do fone de ouvido está num nível apropriado.
- Verifique se o fone de ouvido está corretamente conectado ao sistema.
- Verifique se o fone de ouvido está dentro da memória de alcance.

A qualidade de chamada da fone de ouvido é ruim.
- verifique se de cue a seu smartphone está dentro de um alcance.

Verifique se a cue a fone de ouvido está dentro da distância e que não existem obstruções entre o fone de ouvido e smartphone.

Ao reproduzir música, não é possível controlar a passagem de reprodução.
- verifique se a unidade de reprodução encontra-se suporta o tipo de reprodução.

6. Manutenção

- Se não for usado por longo período, carregue a produto com barra a cada três meses.
- Manterá a previsão de vida útil de 10 anos.
- Não coloque o produto em local exposto ao sol ou com temperatura elevada.
- As temperaturas altas diminuem a vida útil dos componentes.
- Nunca coloque a bateria e deflamas os componentes de plástico.
- Nunca use o produto em locais frios para evitar avaria.
- Não desmonte o produto. Se uma pessoa não profissional tiver pedido para desmontá-lo:
- Não tente carregar a bateria.
- Não a use quando estiver com a bateria baixa.
- Não use produtos para encher buracos de interstício.
- Não use produtos de limpeza para limpar o produto.
- Não use ejetos frios para não riscar a superfície do produto e causar danos.

Modell. EDF200046
Edifier International Limited
P.O. Box 6264
General Post Office
Hong Kong
www.edifier.com
D93111 Edifier International Limited. Trade or Direct sale

EDIFIER



W820NB

Wireless Over-Ear Headphones

Headset with 40mm drivers, 32 hours battery life, and 100 hours with the case.

EN 1. Product description and accessories

Accessories: Headset x1, Charging cable x1, User manual x1

Note:

- Images are for illustrative purposes only and may differ from the actual product.
- To enjoy the best audio, please connect this headset to audio output devices with a 3.5mm audio cable.

2. Power on/off

Power on:

- Press and hold the power button for around 2 seconds, and the blue light will turn on.
- Power off:

 - Press and hold the power button for around 2 seconds, and the light will turn off.



3. Charge

Charge the headset:

- Connect the headset for charging with the included charging cable.
- Red and green lights flash = charging.
- Red and green lights off = fully charged.

Head: 99 cm 1A

Warning: The rechargeable batteries that provide power for this product must be disposed of properly for recycling. Do not dispose of batteries in fire as they may explode.

4. User guide

Bluetooth connection

For initial use, after a full charge, connect the headset to a device. Turn on the power via the button with the blue and green light flashing alternately and rapidly, indicating Bluetooth pairing. Connect the headset to a device via the "EDIFIER W820NB" after pairing is successful, the blue light will flash twice. For subsequent use, the headset will automatically connect to the last paired device. Connect to new Bluetooth devices. When the headset is powered on, press and hold the power button for 2 seconds until the blue and green lights and blue alternately flash rapidly. The blue and green lights and blue alternately flash rapidly.

Restore to factory settings:

- When the headset is powered on, press and hold the "+" and "-" buttons simultaneously for around 2 seconds until the blue light flashes 10 times rapidly to clear existing memory.

Music playback



 
Volume up: single press
Next track: press and hold
Pause/Play: single press
Voice assistant: double press
Volume down: single press
Previous track: press and hold

Call



Accept/end a call: single press
Define a call: double press

Mode switch/Bluetooth pairing



Mode switch: single press
Ambient sound mode: press and hold
Standby mode: double press
Game mode: double press
Bluetooth pairing: press and hold for 3 seconds

5. FAQs

Red light instead of blue light flashes:

- If the light is red and the battery level is low, please recharge the headset.

No sound:

- Check if the headset is operating.
- Check if the volume is at an appropriate level.
- Check if the headset is correctly connected with mobile phone.
- Check if the mobile phone is connected with the correct earphone jack.

The call quality of the headset is not good:

- Check if mobile phone is in a area with strong signal.
- Please make sure the mobile phone and the headset are close together between the headset and mobile phone.

When playing music, cannot control previous/next/previous track/next track:

- Please ensure the paired device supports A2DP/AVRCP/AVR/Video Remote Control profile profile.

6. Maintenance

Product care:

- It is not used for long periods of time, please charge the product with lithium battery every three months.
- Please do not use the headphones in a place exposed to sun or high temperature, high humidity, or high pressure, as this may cause damage to the headphones.
- Do not put the product in places exposed to sun or high temperature, high humidity, or high pressure, as this may cause damage to the headphones.
- Do not use sharp objects to scratch the product surface to avoid damaging the shell.
- Do not damage the product. Non-professional personnel may damage the product.
- Do not drop, smash, or vibration, strike the product with hard object to avoid damaging internal circuit.
- Do not use sharp objects to scratch the product surface to avoid damaging the shell.
- Do not use sharp objects to scratch the product surface to avoid damaging the shell.

Los productos EDIFIER se personalizan para distintas aplicaciones. La apariencia exterior del producto descrita en este manual pueden ser ligeramente distintas del producto real. Si se encuentra alguna diferencia, prevalece el producto real.

DE 1. Produktbeschreibung und Zubehör



Zubehör: Ohrhaken x1, Ladekabel x1, Bedienungsanleitung x1

Hinweis:
• Die Abtasttasten dienen ausschließlich zur Verschaltung und können nicht für die Tastatur oder die Maus verwendet werden.
• Um in die Audio zu geladen, schließen Sie diese Headset Seite mit einem Typ-C-Kabel oder Audio-Kabel an.

2. Einschalten/Ausschalten

a. Einschalten:
Halten Sie die On/Off-Taste etwas 3 Sekunden lang gedrückt. Das blaue und grüne Licht leuchtet auf.
b. Ausschalten:
Halten Sie die On/Off-Taste etwas 3 Sekunden lang gedrückt. Das rote Licht leuchtet auf und erlischt wieder.



3. Aufladen



Achtung: Die aufgeladenen Batterien, die Strom für dieses Produkt zur Verfügung stellen müssen, kann für das Recycling entsorgt werden. Wählen Sie Ablösung mit Ihrer umweltfreundlichen Recyclinganwendung.

4. Bedienungsanleitung

a. Bluetooth-Kopplung



Haben Sie die Ohrhörer eingeschaltet und für mindestens etwas 3 Sekunden lang gedrückt, um den Bluetooth einzuschalten. Das blaue und grüne Licht blinken abwechselnd und erlischt und beginnt automatisch die Verbindung zu einem Gerät. Wenn die Verbindung mit dem Gerät besteht, ist die Melodieblase an, eins, eins, eins, JEDER EDIFIER wird unter der Verbindung mit dem Gerät aktualisieren. Wenn die Verbindung mit dem Gerät unterbrochen ist, wird das blaue und grüne Licht wieder blinken. Wenn die Verbindung wieder hergestellt wird, wird das blaue und grüne Licht wieder abwechselnd und erlischt.

a. Mikrofonfunktionen und -bedienelemente

• Wenn die Headset eingeschaltet ist, halten Sie die Tasten „-“ und „+“ gleichzeitig etwas 3 Sekunden gedrückt, bis die blaue Licht erlischt und funktionieren beide Tasten für die nächsten 3 Minuten.

a. Musikwiedergabe

- Lautstärke erhöhen: Einmal drücken
- Hörer/Tast gestrichen halten
- Pause/Wiedergabe: Einmal drücken
- Sprachsteuerung: zweimal drücken
- Lautstärke verringern: Einmal drücken
- Verhinderung: Tast gestrichen halten

a. Anruftätigkeit

- Aufnehmen/endeinen: Einmal drücken
- Aus dichten zweimal drücken

a. Mediensteuerung (Bluetooth-Kopplung)

- Mediensteuerung: Einmal drücken
Umgebungssensormodus (Standardmodus)
- Sprachsteuerung: zweimal drücken
- Bluetooth-Kopplung: halten Sie die Tasten 3 Sekunden lang gedrückt

5. FAQs

Antwort: Das Headset leuchtet blau die rote Leuchte.
• Wie kann das Headset Ohrhörer während des Laufens für die Ohrhörer wieder auf?

Karte Test:
• Lassen Sie die Ohrhörer eingeschaltet und, prüfen Sie, ob die Leuchte der Ohrhörer auf einen angestrahlten Punkt zeigt.
• Kontrollieren Sie, ob die Ohrhörer ordnungsgemäß mit Ihren Mobiltelefonen verbunden sind.
• Vergewissern Sie sich, dass sich die Ohrhörer innerhalb der maximalen Verbindungsdistanz befinden.

Die Gesprächsqualität der Ohrhörer ist unzureichend.

• Überprüfen Sie die Verbindungsdistanz zwischen dem Ohrhörer und Ihrem Mobiltelefon weniger als 10 m befindet und entfernen Interferenzen innerhalb der Verbindungsdistanz.

• Wählen Sie die Musikwiedergabe, können sich die Bedienelemente.

Wiedergabe/Verhindern Tastenhinter Tast nicht wie vorgesehen über die Verbindung mit dem Gerät.

• Stellen Sie sicher, dass das gewünschte Gerät ein A2DP-Profil (Audio Video Remote Control Profile) unterstützt (nur für Bluetooth-Verbindung).

• Wenn Sie das Headset nicht in einem Ohr auf, um Schaden an den inneren Leitstrukturen zu verhindern.

• Überprüfen Sie die Verbindungsdistanz, um Verlust der Leistung zu verhindern.

• Lassen Sie das Headset nicht an einem Ort, wo es leicht beschädigt werden kann.

• Verhindern Sie, dass das Headset auf die Oberfläche des Produkts, Schalen an Geklebte und Beschädigungen des Zuhörer-Ersatzteils zu verhindern.

Model: EDF20094
Edifier International Limited
P.O. Box 4244
Grosvenor Office
Hong Kong
www.edifier.com
©2018 Edifier International Limited. Alle Rechte vorbehalten.
Gedruckt in China

HINWEIS:
Aufgrund technischen oder herstellungsbedingten Unterschieden können die Ihnen entnahmene Informationen jedoch und ohne vorherige Ankündigung geändert werden.
Produkte von EDIFIER werden für verschiedene Anwendungen entsprechend angepasst. Die in dieser Bedienungsanleitung vorgenommenen Angaben und Anweisungen können von den tatsächlichen Produkten unterscheiden. Bei vorhandenem

Edifier W820NB User Manual - Bluetooth Headphones Guide

Comprehensive user manual for the Edifier W820NB Active Noise Cancelling Bluetooth Stereo Headphones. Learn about setup, features, troubleshooting, and maintenance.

W820NB (双耳版)
头戴式蓝牙主动降噪耳机

▼ 产品说明及配件

■ 配件: 耳机 x 1, Type-C数据线 x 1, 洁净书 x 1, 保修卡 x 1
■ 注意: 本说明中的图片均为示意图, 可能与实物有偏差, 请以实物为准。

▼ 开关机

■ **开机** 长按电源键约1秒, 蓝灯亮起;
■ **关机** 长按电源键约1秒, 红黄黄灯后熄灭。

▼ 充电

■ **耳机充电**
• 将耳机的充电线插入充电器。
• 将充电器的充电线插入电源插座。
• 将耳机充电线插入充电器, 然后将充电器插入电源插座, 电源指示灯亮起, 表示耳机正在充电。
• 充电完成后, 将充电器从电源插座上拔出, 然后将充电器从耳机上拔出。
■ **注意事项**
• 本产品可使用充电线为电源线。
• 请勿将充电线插入电源插座。
■ **操作说明**

■ **蓝牙配对**

■ **音乐播放**
• 按住电源键约1秒, 然后长按“音量+”或“音量-”约5秒开机, 此时蓝绿灯交替闪烁, 表示正在搜索。
• 手机搜索“EDIFIER W820NB 蓝牙配对”, 选择连接, 成功后蓝牙图标亮起, 同时使用麦克风指示灯每1秒闪烁一次, 表示已成功配对。
• 按住蓝牙图标, 耳机进入下一段或多段键约3秒, 蓝灯交替闪烁, 表示正在配对。
■ **恢复出厂设置**
• 长按电源键约1秒, 然后长按“音量+”和“音量-”约5秒同时按住, 直到听到双次长鸣声, 表示恢复出厂设置。

■ **音乐播放**
• 音量加: 单击
• 下一曲: 长按
• 音量减: 单击
• 语音搜索: 单击
• 音量减: 单击
• 上一曲: 长按

■ **通话**
• 挂机/接听: 单击
• 录音: 双击

■ **模式切换/蓝牙配对**
• 蓝牙切换: 单击
• 续航模式: 双击
• 蓝牙配对: 长按3秒

Ps:更多个性化设置请使用Edifier Connect APP开启

▼ 常见问题解答

■ **红色指示灯代替蓝色指示灯闪烁。**
• 表示耳机电量低, 需要再次对耳机充电。

■ **耳机听不到声音。**
• 耳机未处于工作状态。
• 耳机未连接到设备。
• 耳机连接线未插好或未正常连接。
• 耳机未正确插入工作状态。

■ **耳机通话效果不好。**
• 耳机未开启语音增强功能。
• 耳机没有使用距离约为10米, 请确认耳机在有效使用范围内, 且耳机与手机无遮挡物阻挡。

■ **为什么播放音乐时, 耳机不能进行暂停、恢复、下一曲操作。**
• 此功能需要与手机同时连接的设备支持AVC(Audio/Video Remote Control)功能。

▼ 保养与维修

■ **保养和维护**
• 请使用干的产品若长时间不使用, 请至少确保三个月一次充电。
• 保持产品干燥, 避免潮湿的地方, 以免影响产品正常使用。
• 请勿将产品置于直射阳光下, 或者避免靠近热源, 避免产品过热而损坏, 或者避免靠近冷源, 以免产品过冷而损坏。
• 请勿将产品放在水中, 以免损坏产品。
• 请勿将产品丢弃, 如若不慎丢失, 可能会损坏产品。
• 请勿拆卸、维修, 请勿用溶剂擦洗产品, 以免损坏耳机内部机构。
• 请勿使用化学漂白剂, 清洁耳机连接线。
• 请勿用尖锐物品在产品表面上划, 以免划伤外观影响美观。

北京麦瑞电子有限公司
地址: 北京市海淀区中关村大街
邮编: 100080
电话: 010-82600000
传真: 010-82600000
E-mail: sales@edifier.com
网址: www.edifier.com
北京麦瑞电子有限公司
地址: 北京市海淀区中关村大街
邮编: 100080
电话: 010-82600000
传真: 010-82600000
E-mail: sales@edifier.com
网址: www.edifier.com

扫描二维码, 更多信息

	<p>Edifier W820NB Active Noise Cancelling Bluetooth Headphones User Guide</p> <p>Comprehensive user guide for the Edifier W820NB Active Noise Cancelling Bluetooth Stereo Headphones, covering functional operation, Bluetooth connection, and factory reset procedures.</p>
	<p>EDIFIER ES850NB Active Noise Cancelling Headphones User Manual</p> <p>Comprehensive user manual for the EDIFIER ES850NB active noise cancelling over-ear headphones, covering setup, pairing, controls, charging, and troubleshooting.</p>
	<p>Edifier W820NB Active Noise Cancelling Bluetooth Stereo Headphones User Guide</p> <p>User guide for Edifier W820NB headphones, detailing functional operations, Bluetooth connectivity, pairing, and factory reset procedures. Includes compliance information.</p>