

Amazon B09BSQ8PRD

Kindle Scribe User Manual

Model: B09BSQ8PRD (Premium Pen 64 GB)

INTRODUCTION

The Amazon Kindle Scribe is a versatile e-reader and digital notebook designed for reading, writing, and document annotation. It combines the glare-free display of a Kindle with the functionality of a digital notepad, allowing users to write directly on books, documents, and dedicated notebooks using the included Premium Pen.

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Kindle Scribe. Please read it thoroughly to ensure optimal use of your device.

 
WHAT'S INCLUDED

Your Kindle Scribe package includes the following components:

- Wi-Fi enabled Kindle Scribe device
- Premium Pen
- USB-C charging cable
- 5 replacement pen tips
- Tip replacement tool
- Built-in rechargeable battery (integrated into the device)

kindle scribe

A Kindle and a notebook, all in one
Une liseuse Kindle et un carnet de notes, tout-en-un

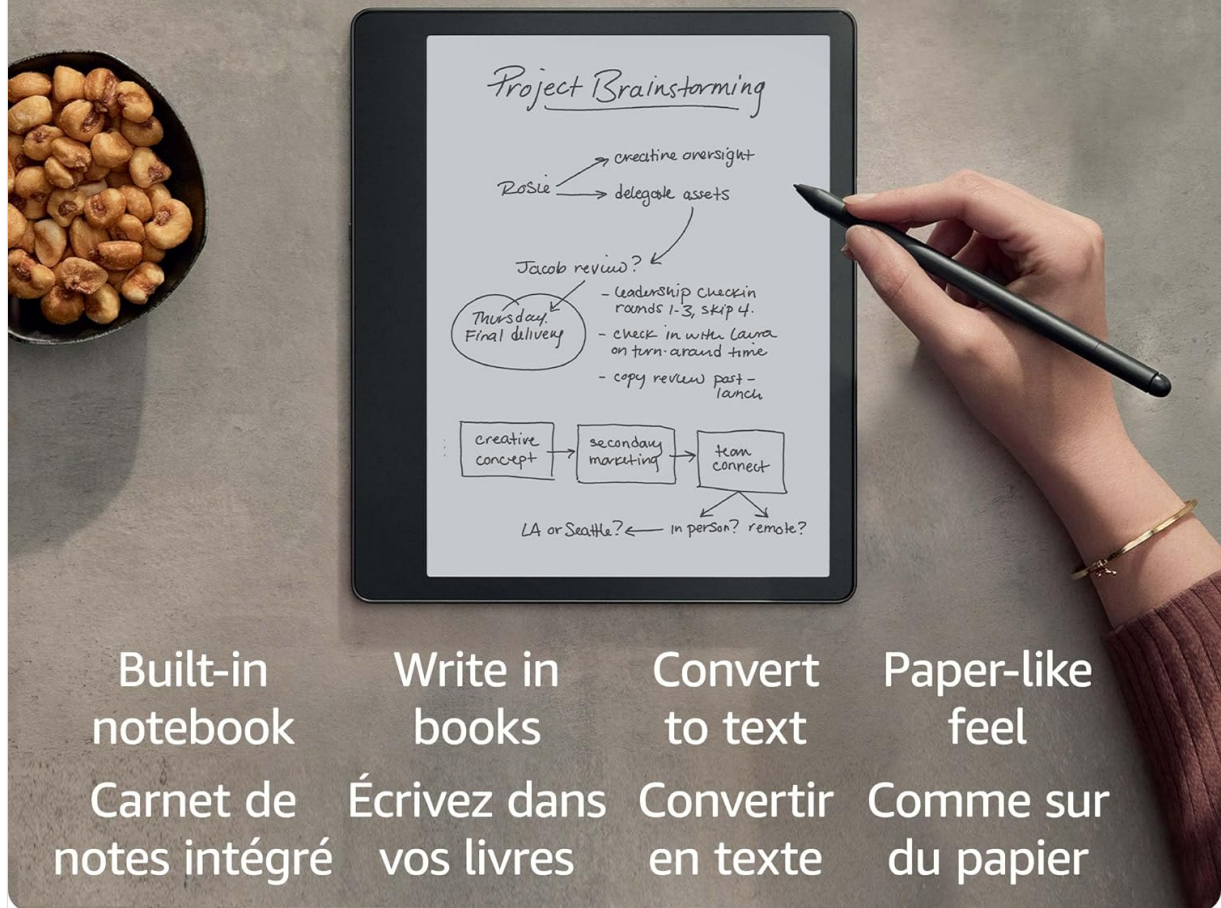

Built-in
notebook

Write in
books

Convert
to text

Paper-like
feel

Carnet de
notes intégré

Écrivez dans
vos livres

Convertir
en texte

Comme sur
du papier

Image: The Kindle Scribe device with its Premium Pen, illustrating its dual functionality as a Kindle and a notebook.

SETUP

1. Initial Charge

Before first use, fully charge your Kindle Scribe. Connect the included USB-C cable to the device and a power source (computer USB port or 5W USB-C power adapter, sold separately). A full charge takes approximately 7 hours via computer or 3.5 hours with a 5W adapter.

2. Power On

Press and hold the power button located on the side of the device until the screen illuminates.

3. Wi-Fi Connection

Follow the on-screen prompts to connect to a Wi-Fi network. The Kindle Scribe supports 2.4 GHz and 5.0 GHz networks with WEP, WPA, WPA2, and WPA3 security. Amazon Wi-Fi simple setup can automatically connect to your home network.

4. Register Your Device

Register your Kindle Scribe to your Amazon account to access your Kindle library, purchase new content, and utilize cloud features.

OPERATING YOUR KINDLE SCRIBE

Reading Books

Navigate your library using the touch screen. Tap on a book cover to open it. While reading, tap the right side of the screen to turn the page forward, or the left side to go back. Tap the top of the screen to access reading options and menus.


Writing and Annotating

The Premium Pen allows for precise writing and drawing. It attaches magnetically to the side of the Kindle Scribe for storage.

- **Writing in Books:** When reading, you can write directly on the page. Active Canvas will create space for your notes.
- **Creating Notebooks:** Access the Notebooks section to create new digital notebooks. You can journal, sketch, or take meeting notes.
- **Importing Documents:** Review and take notes directly on documents and PDFs. Send documents to your Kindle Scribe via the "Send to Kindle" service.



Image: The Kindle Scribe used for journaling, demonstrating the natural writing experience.

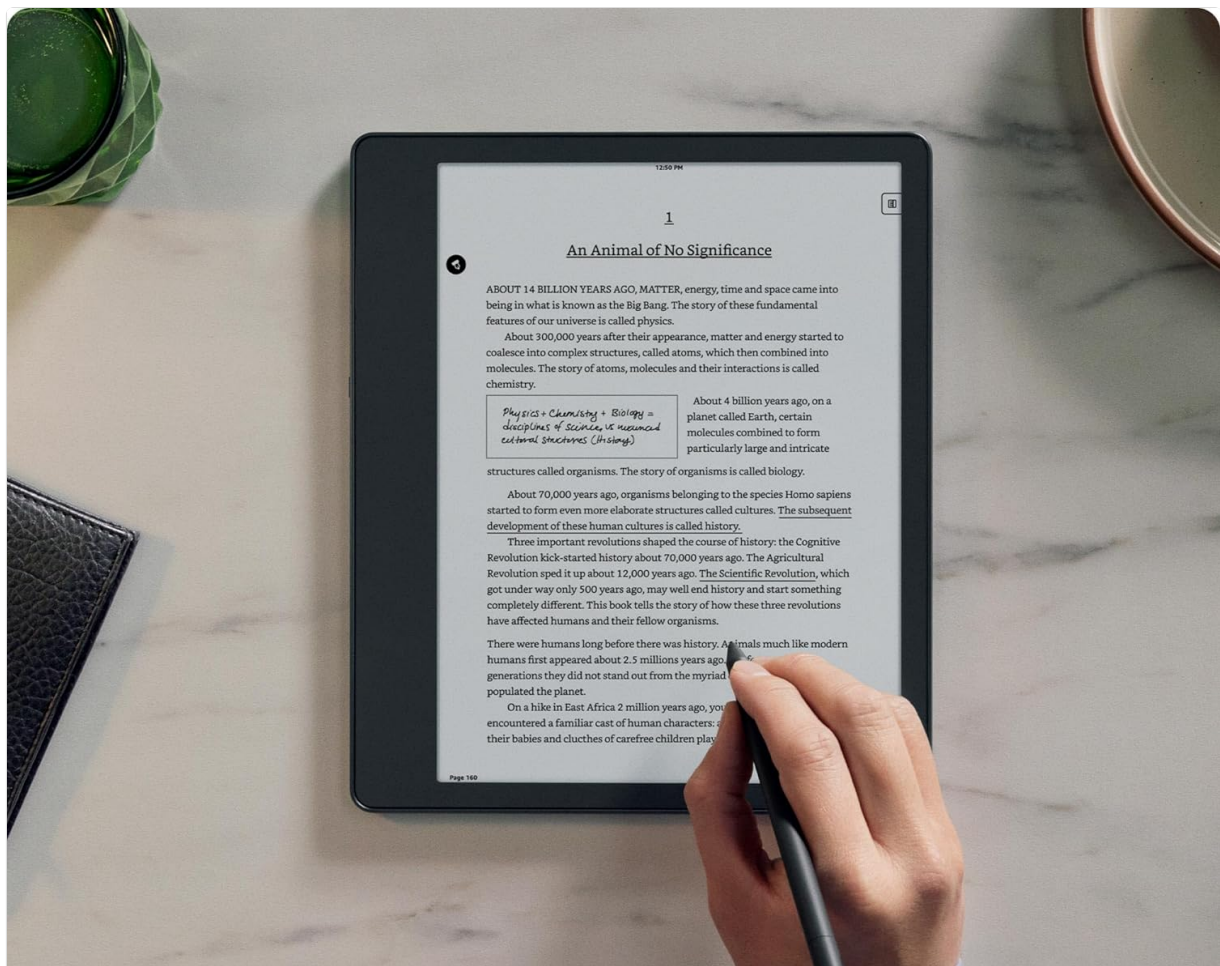

Write directly in books, documents, and PDFs

Écrivez directement dans les livres,
les documents et les PDF

Image: Writing directly on books, documents, and PDFs on the Kindle Scribe.



Write notes and to-do lists, or
journal in the built-in notebook

Écrivez à la main des notes et des listes de tâches, ou
tenez un journal dans le carnet de notes intégré

Image: The Kindle Scribe displaying a notebook with handwritten notes and to-do lists.



Read and write as naturally as you do
on paper, distraction-free

Lisez et écrivez aussi naturellement
que sur du papier, sans distraction

Image: The paper-like feel of writing on the Kindle Scribe.

MAINTENANCE

Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your Kindle Scribe. Do not use abrasive cleaners or solvents. Avoid getting moisture into any openings.

Battery Life

The Kindle Scribe offers extended battery life. For reading, a single charge can last up to 12 weeks (based on 30 minutes of reading per day with wireless off and light setting at 13). For writing, a single charge lasts up to 3 weeks (based on 30 minutes of writing per day with wireless off and light setting at 13). Battery life varies based on usage and other factors.

Pen Tip Replacement

If your Premium Pen tip wears down, use the included replacement tips and tool. Gently pull out the old tip with the tool and insert a new one until it clicks into place.

TROUBLESHOOTING

Device Not Responding

If your Kindle Scribe is unresponsive, try a forced restart. Press and hold the power button for 40 seconds until the device restarts. If the issue persists, ensure the device is charged.

Wi-Fi Connection Issues

Ensure your Wi-Fi router is on and within range. Try restarting your router and then attempting to reconnect your Kindle Scribe. Verify your Wi-Fi password is correct.

Pen Not Writing

Check if the pen tip is properly seated. If the tip is worn, replace it. Ensure the pen is not damaged. The Premium Pen does not require charging.

Content Not Appearing

Ensure your device is connected to Wi-Fi and registered to the correct Amazon account. Sync your Kindle Scribe to refresh your library. For sent documents, confirm they were sent to the correct device and format.

SPECIFICATIONS

Feature	Detail
Display	Amazon's 10.2" Paperwhite display technology with built-in light, 300 ppi, optimized font technology, 16-level gray scale.
Device Size	7.7" x 9.0 x .22" (196 x 230 x 5.8mm excluding feet)
Premium Pen Size	6.4" x .35" x .33" (162 x 8.8 x 8.4 mm)
Device Weight	15.3oz (433g)
Premium Pen Weight	.49oz (14g)
On-Device Storage	64 GB (for this model)
Wi-Fi Connectivity	Supports 2.4 GHz and 5.0 GHz networks with WEP, WPA, WPA2 and WPA3 security.
Content Formats Supported	Kindle Format 8 (AZW3), Kindle (AZW), TXT, PDF, unprotected MOBI, PRC natively; PDF, DOCX, DOC, HTML, EPUB, TXT, RTF, JPEG, GIF, PNG, BMP through conversion.
Battery Life (Reading)	Up to 12 weeks (0.5 hr/day, wireless off, light 13)

Battery Life (Writing)	Up to 3 weeks (0.5 hr/day, wireless off, light 13)
Charge Time	~7 hours (USB-C to computer); ~3.5 hours (5W USB-C power adapter)
Generation	Kindle Scribe 1st generation - 2022 release
Available Colours	Tungsten

ACCESSIBILITY FEATURES

The Kindle Scribe includes features to enhance accessibility:

 
 
- **VoiceView Screen Reader:** Available over Bluetooth audio, provides spoken feedback for navigation and text-to-speech (English only).
- **Display Adjustments:** Ability to invert black and white, adjust font size, font face, line spacing, and margins.


 


WARRANTY AND SUPPORT

Your Kindle Scribe comes with a 1-year limited warranty and service. Optional extended warranties (1-year, 2-year, or 3-year) may be available for purchase separately in certain regions (e.g., CA customers). For further assistance, refer to the [Kindle User Guide](#) or visit Amazon's support website. Software security updates are guaranteed for at least four years after the device is last available for purchase as a new unit on Amazon websites.

© 2024 Amazon. All rights reserved.

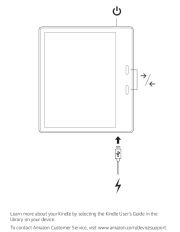Related Documents - B09BSQ8PRD

	<p>Kindle Scribe Quick Start Guide: Setup and Pen Tip Replacement</p> <p>Learn how to set up your Amazon Kindle Scribe, identify its components, and replace the pen tips with this concise guide.</p>
	<p>Amazon Kindle E-Reader Quick Start and Support</p> <p>Get started with your Amazon Kindle e-reader. Find information on device usage, access the Kindle User's Guide, and contact Amazon Customer Service for support.</p>

 <p>getting to know your kindle</p> <p>To charge your Kindle, connect it to the USB charging cable as shown. Connect the opposite end of the USB charging cable to a Kindle. PowerFast accelerated charging technology (sold separately) on other USB power adapters. To learn more about charging accessories, visit www.kindle.com/support/charging.</p> <p>To start your Kindle, press the power button. To unlock your Kindle, touch the lock icon and drag the slider bar across the screen to the left. To learn more about your Kindle, open the Help & Feedback app. For Kindle customer support, visit www.kindle.com/support.</p>	<p>Amazon Kindle Fire HD Quick User Guide</p> <p>A quick user guide for the Amazon Kindle Fire HD, detailing device features, charging, unlocking, and important product information including terms, policies, and warranty.</p>
 <p>What's in the box</p> <p>Kindle Kids Edition</p> <p>1. Kindle Kids Edition</p> <p>2. Amazon FreeTime Unlimited subscription card</p>	<p>Kindle Kids Edition Quick Start Guide</p> <p>Get started with your Amazon Kindle Kids Edition. This guide covers what's included in the box and the initial setup process, including registration and claiming your 1-year Amazon FreeTime Unlimited subscription.</p>
 <p>Kindle 2 SIM Card Replacement</p> <p>Replace the SIM Card in your Kindle 2.</p> <p>Written By: Clayton Scott</p>	<p>Kindle 2 SIM Card Replacement Guide - iFixit</p> <p>Step-by-step guide from iFixit on how to replace the SIM card in an Amazon Kindle 2 (DTP-600W) with detailed textual descriptions of images and instructions.</p>
 <p>kindle oasis</p>	<p>Amazon Kindle Oasis Quick Start Guide and Information</p> <p>Concise guide for the Amazon Kindle Oasis e-reader, covering device overview, multilingual support information, and links to further resources. Optimized for accessibility and SEO.</p>