

[Manuals.plus](#) /

› [AFMAT](#) /

› AFMAT Effortless Desktop Stapler User Manual

AFMAT ES10

AFMAT Effortless Desktop Stapler

USER MANUAL

Product Overview

The AFMAT ES10 Effortless Desktop Stapler is designed for efficient and comfortable stapling in office, home, or school environments. It features a 50-sheet capacity, reduced effort operation, and a convenient built-in staple remover. Its ergonomic design allows for both desktop and handheld use.



Figure 1: AFMAT Effortless Desktop Stapler (Model ES10)

Setup

Loading Staples

1. Locate the red release button on the side of the stapler.
2. Press the release button firmly to open the staple tray. The tray will pop out from the front of the stapler.
3. Insert a strip of compatible staples into the open tray. Ensure the staples are facing the correct direction (points down).
4. Gently push the staple tray back into the stapler until it clicks securely into place.

Compatible Staple Types:

- For 20-25 sheets: #23/6, #24/6, #26/6 (1/4 inch leg)
- For 40-50 sheets: #23/8 (5/16 inch leg)

Note: Staples are not included with the stapler.



Easily Reload

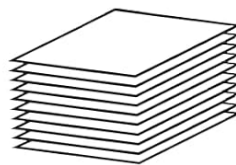 


Figure 2: Easy Staple Reloading

 
Suitable Staple Types & Sheets of Stapling

Select the staple type according to your need


Kindly Reminder:
Staples are not included.



70 gsm paper

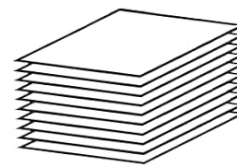

80 gsm paper

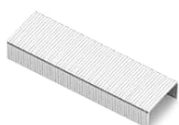 

Standard Staples
#26/6 Staples
(1/4 inch leg)

25 Sheets

25 Sheets



#24/6 Staples
(1/4 inch leg)

20 Sheets

 
20 Sheets



#23/6 Staples
(1/4 inch leg)

30 Sheets

25 Sheets

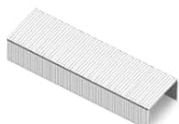

#23/8 Staples
(5/16 inch leg)

50 Sheets

40 Sheets

Figure 3: Suitable Staple Types and Sheet Capacities

Operation

Stapling Documents

The AFMAT ES10 stapler is designed for reduced effort, allowing for one-finger operation. It can be used as both a desktop stapler and a handheld stapler.

1. Gather the papers you wish to staple, ensuring they are aligned neatly.
2. Insert the corner of the paper stack into the stapler's opening.
3. Press down firmly on the top of the stapler until the staple pierces through the papers and clinches underneath.
Ensure you press down deep enough before releasing to prevent incomplete stapling.

Tip: For optimal performance and to avoid jams, ensure the stapler is pressed down completely during each use.



Figure 4: Reduced Effort Stapling

Staple up to 50 Sheets at a Time



NOTE: Staples not included

Figure 5: Stapling up to 50 Sheets



Figure 6: Dual-Use: Handheld and Desktop Stapling

Using the Built-in Staple Remover

The stapler includes a convenient staple remover integrated into its design.

1. Locate the metal claw-like protrusion at the back of the stapler.
2. Slide the claw underneath one side of the staple you wish to remove.
3. Gently lift the stapler, using the claw to pry up the staple legs.
4. Repeat on the other side if necessary, then remove the staple from the paper.

Built-in Staple Remover



Figure 7: Built-in Staple Remover in Use

Maintenance

To ensure the longevity and optimal performance of your AFMAT stapler, follow these simple maintenance guidelines:

- Keep the stapler clean by wiping it with a soft, dry cloth.
- Avoid exposing the stapler to excessive moisture or extreme temperatures.
- Store the stapler in a dry, dust-free environment when not in use.

Troubleshooting

Stapler Jamming

While the AFMAT stapler features JAM-FREE technology, occasional jams can occur. Follow these steps to clear a jam:

1. Press the release button to open the staple tray.

- 2. Gently remove any jammed staples from the mechanism using a pair of pliers or tweezers. Be careful not to bend or damage internal components.
- 3. Remove and discard a few staples near the staple outlet from the strip to ensure smooth feeding.
- 4. Push the staple tray back into place.

Important: If the staple tray cannot be opened, gently pry it open with pliers to clear the jam. Do not force the stapler if it is jammed, as this may cause damage. Always use the correct staple type for the stapler.

What to do if the stapler is jammed?

1 Press the release button to open the staple tray



2 Gently catch and remove the jammed staples with a clamp



3 Remove and discard a few staples near the staple outlet



What to do if the staple tray is jammed?

1 Press the button, the staple tray cannot be opened



2 Gently pry the staple tray to get rid of the jam



3 Press the button, the staple tray can be opened



Tips: 1. When the stapler is jammed, please stop stapling to avoid damage to the stapler.
2. Please do not try to staple through hard paper cards to avoid damage to the stapler.
3. Please refer to the product page to use the correct staple type for this stapler.

Figure 8: Troubleshooting Stapler Jams

Specifications

Brand	AFMAT
Model Number	ES10
Color	Black
Material Type	Sturdy Plastic, Metal
Item Weight	11.4 ounces
Product Dimensions	5.3 x 1.4 x 0.04 inches
Number of Fasteners	50 (sheets capacity)
ASIN	B09BTVB8DV

Warranty and Support

AFMAT products are manufactured with quality and durability in mind. For any questions, concerns, or support regarding

your AFMAT Effortless Desktop Stapler, please refer to the seller's return policy and contact information on the platform where the product was purchased.

You may also visit the official AFMAT Store for more information and product updates[AFMAT Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question