

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Galanz](#) /

› [Galanz GLCMKZ09RDR09 Retro Countertop Microwave Oven User Manual](#)

## Galanz GLCMKZ09RDR09

# Galanz GLCMKZ09RDR09 Retro Countertop Microwave Oven User Manual

Model: GLCMKZ09RDR09 | Brand: Galanz

## 1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your new Galanz GLCMKZ09RDR09 Retro Countertop Microwave Oven. Please read all instructions carefully before use and retain this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions before using the appliance.
- Do not operate the oven if the door or door seals are damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Regularly inspect the appliance for any damage.

## 3. PRODUCT OVERVIEW

The Galanz GLCMKZ09RDR09 is a 0.9 cubic feet countertop microwave oven designed for convenience and style. It features a retro aesthetic with modern functionalities.



Figure 1: Front view of the Galanz GLCMKZ09RDR09 Retro Countertop Microwave Oven, showcasing its red finish, pull handle, and digital display.

## 4. SETUP AND INSTALLATION

### 4.1 Unpacking

Carefully remove the microwave oven from its packaging. Ensure all packing materials, including the glass turntable and turntable ring, are removed from the oven cavity. Inspect the oven for any damage.

### 4.2 Placement

Place the microwave oven on a flat, stable surface that can support its weight. Ensure there is adequate ventilation around the oven: at least 4 inches (10 cm) of space at the back, 8 inches (20 cm) on the top, and 2 inches (5 cm) on the sides. Do not block any ventilation openings.

### 4.3 Turntable Installation

Place the turntable ring in the center of the oven cavity. Position the glass turntable securely on top of the turntable ring. Ensure it rotates freely.

### 4.4 Dimensions and Capacity

# CLEANING AND CARE



Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth.



Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. Wipe the door and window on both sides. Do not use abrasive cleaner.



When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.



It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.

Figure 2: Diagram illustrating the exterior dimensions (19.0" W x 14.9" D x 10.8" H) and interior dimensions (12.88" W x 13.31" D x 9.19" H) of the microwave oven, with a 0.9 cu ft capacity.

The compact size of this microwave makes it suitable for various kitchen spaces, including apartments, kitchenettes, and dorms.

## 5. OPERATING INSTRUCTIONS

### 5.1 Control Panel Overview

The microwave features an intuitive control panel with an LED display, push buttons, and a quick start dial.

# 10 Auto Reheat Modes



Figure 3: Detailed view of the control panel, highlighting the LED display and various function buttons.

## 5.2 Setting the Clock

To set the clock, press the 'CLOCK/TIMER' button once. Use the dial to adjust the hour, then press 'CLOCK/TIMER' again. Use the dial to adjust the minutes, then press 'CLOCK/TIMER' to confirm.

## 5.3 Time Cook

To cook by time, press the 'TIME COOK' button. Use the dial to set the desired cooking time. You can adjust the power level by pressing the 'POWER LEVEL' button and selecting a percentage using the dial. Press 'START/+30 SEC' to begin cooking.

## 5.4 Quick Start (+30 Seconds)

For quick heating, simply press the 'START/+30 SEC' button. Each press will add 30 seconds of cooking time at full power. You can also turn the dial to quickly add time in 30-second increments.

## 5.5 Defrost Functions

The microwave offers two defrost options:

- **Time Defrost:** Press 'DEFROST/TIME/WEIGHT' once, then use the dial to set the defrosting time. Press 'START/+30 SEC'.
- **Weight Defrost:** Press 'DEFROST/TIME/WEIGHT' twice, then use the dial to enter the weight of the food.

Press 'START/+30 SEC'.

## 5.6 Auto Cook Programs

The oven includes 7 pre-programmed auto cook menus for common food items:



Figure 4: The 7 Auto Cook Menus, providing convenient presets for various foods.

To use, press the 'AUTO COOK/REHEAT' button repeatedly until the desired program appears on the display, then press 'START/+30 SEC'.

## 5.7 Auto Reheat Programs

The microwave also features 10 auto reheat programs for quick and easy reheating of meals and beverages.

## Vintage & Retro look



Figure 5: An illustration of the microwave's capability to reheat various dishes with its 10 Auto Reheat Modes.

To use, press the 'AUTO COOK/REHEAT' button repeatedly until the desired program appears on the display, then press 'START/+30 SEC'.

### 5.8 Power Levels

The microwave offers 11 power levels to suit different cooking needs. Press the 'POWER LEVEL' button and use the dial to select the desired power percentage (e.g., 100% for high, 50% for medium).



Figure 6: Visual representation of the 11 available power levels for precise cooking control.

## 5.9 Child Safety Lock

To activate the child safety lock, press and hold the 'CANCEL' button for 3 seconds. The display will show a lock icon. To deactivate, press and hold the 'CANCEL' button again for 3 seconds.

## 6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your microwave oven.



Figure 7: Visual guide for cleaning and care of the microwave oven.

- **Interior Cleaning:** Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth.
- **Exterior Cleaning:** Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. Wipe the door and window on both sides. Do not use abrasive cleaners.
- **Control Panel:** When cleaning the control panel, leave the oven door open to prevent the oven from accidentally turning on.
- **Glass Turntable:** It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.

## 7. TROUBLESHOOTING

If you experience issues with your microwave oven, refer to the following common troubleshooting tips:

- **Oven not starting:** Ensure the power cord is securely plugged into an electrical outlet. Check if the door is closed properly. Verify that a cooking time has been set.
- **Food not heating:** Check the power level setting. Ensure the door is fully closed. Make sure the turntable is correctly placed and rotating.
- **Unusual noise during operation:** This could be due to improper placement of the turntable or food items. Reposition the turntable and ensure dishes are not touching the oven walls.
- **Display not working:** Unplug the microwave for a few minutes, then plug it back in to reset the system.

For persistent issues, please contact Galanz customer support.

## 8. SPECIFICATIONS

<b>Brand</b>	Galanz
<b>Model Info</b>	GLCMKZ09RDR09
<b>Capacity</b>	0.9 Cubic Feet
<b>Wattage</b>	900 watts
<b>Voltage</b>	120 Volts
<b>Product Dimensions</b>	14.9 x 19 x 10.8 inches
<b>Item Weight</b>	25.8 pounds
<b>Material Type</b>	Stainless Steel
<b>Inner Material Type</b>	Glass
<b>Installation Type</b>	Countertop
<b>Special Feature</b>	Auto Cook, Defrost

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Galanz website. Keep your purchase receipt as proof of purchase for any warranty claims.

### Related Documents - GLCMKZ09RDR09

	<a href="#"><u>Galanz Retro Microwave Oven User Manual</u></a> Comprehensive user manual for the Galanz Retro Microwave Oven (Models GLCMKZ07BKR07, GLCMKZ07RDR07, GLCMKZ07GNR07, GLCMKZ07BER07, GLCMKZ07WER07), detailing safety, installation, operation, cleaning, and warranty information.
	<a href="#"><u>Galanz GLCMKZ09 Retro Microwave Oven User Manual - Safety, Operation, Specifications</u></a> Official user manual for the Galanz GLCMKZ09 Retro Microwave Oven. Find detailed information on safety precautions, installation, operating instructions, cooking modes, cleaning, care, and product warranty. Includes model numbers GLCMKZ09BKR09, GLCMKZ09RDR09, GLCMKZ09GNR09, GLCMKZ09BER09, GLCMKZ09WER09.
	<a href="#"><u>Galanz ExpressWave GEWWD16S1SV11 User Manual</u></a> Official user manual for the Galanz ExpressWave microwave oven, model GEWWD16S1SV11. Learn about safety, operation, cooking modes (Inverter Technology, Sensor Cook, Defrost), cleaning, troubleshooting, and warranty from Galanz Americas Limited Company.
	<a href="#"><u>Galanz SpeedWave Microwave Oven User Manual</u></a> Comprehensive user manual for the Galanz SpeedWave microwave oven (Model# GSWWA16S1SA10), covering safety instructions, operation, cooking modes, troubleshooting, and warranty information.

	<p><a href="#"><u>Galanz Microwave Oven Operation Instructions and Warranty</u></a>  Comprehensive guide to operating a Galanz microwave oven, including auto reheat, popcorn function, child lock, troubleshooting, cleaning, and warranty information.</p>
	<p><a href="#"><u>Galanz ExpressWave GEWW22S1SV125 Microwave Oven User Manual</u></a>  Comprehensive user manual for the Galanz ExpressWave GEWW22S1SV125 microwave oven, covering safety instructions, installation, operation, troubleshooting, cleaning, and warranty information.</p>