

TopWit T618

TOPWIT 1.0L Electric Kettle with Tea Infuser (Model T618)

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the TOPWIT Electric Kettle. Retain this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Always ensure the lid is securely closed during operation.
- This kettle is equipped with an automatic shut-off feature and boil-dry protection. Do not attempt to override these safety mechanisms.

- The kettle is designed for boiling water only. Do not fill with other liquids.
- Ensure the kettle is placed on a firm, flat, heat-resistant surface.

2. PRODUCT OVERVIEW

The TOPWIT 1.0L Electric Kettle (Model T618) is designed for efficient water boiling and tea brewing. It features a durable glass body, a removable tea infuser, and safety functions.



Image 2.1: Overview of the TOPWIT 1.0L Electric Kettle.

Components:

- **Kettle Body:** Made of BPA-free borosilicate glass with a double-wall structure for safe handling.
- **Lid:** Securely fits on top of the kettle.
- **Removable Stainless Steel Infuser:** For brewing loose leaf tea or tea bags.
- **Gooseneck Spout:** Provides precise and steady pouring.
- **Water Window:** Allows for easy monitoring of water level and measurement.
- **Handle:** Ergonomically designed for comfortable grip.
- **Power Base:** 360-degree rotational base with power cord.
- **Power Switch:** Located on the handle for easy operation.

Key Features:

- **Dual-Purpose Design:** Functions as a water boiler and a tea maker with the included infuser.
- **Double Wall Structure:** Provides a safe-to-touch exterior and helps maintain water temperature.
- **Food Grade Materials:** Constructed with 304 stainless steel and borosilicate glass for safety and taste preservation.
- **Fast Heating:** Quickly boils water.
- **Automatic Shut-off:** Kettle turns off automatically once water reaches boiling point.
- **Boil-Dry Protection:** Automatically shuts off if the kettle is accidentally switched on without water.



Image 2.2: Detailed view of key features: Cool Touch Handle, Visible Water Window, and Food Grade Stainless Steel Lid.

3. SETUP AND FIRST USE

3.1 Unpacking:

1. Carefully remove all packaging materials from the kettle and its components.
2. Ensure all parts are present: kettle body, lid, infuser, and power base.

3. Inspect the kettle for any signs of damage. Do not use if damaged.

3.2 Initial Cleaning:

Before first use, it is recommended to clean the kettle to remove any manufacturing residues.

1. Fill the kettle with clean water up to the MAX line.
2. Boil the water (refer to Section 4: Operating Instructions).
3. Discard the boiled water.
4. Repeat this process 2-3 times.
5. Wipe the exterior of the kettle with a damp cloth.

4. OPERATING INSTRUCTIONS

4.1 Boiling Water:

1. Ensure the kettle is unplugged from the power outlet.
2. Open the lid and fill the kettle with fresh water. Do not fill below the MIN mark or above the MAX mark indicated on the water window.
3. Close the lid securely.
4. Place the kettle firmly on the power base.
5. Plug the power cord into a standard electrical outlet.
6. Press the power switch located on the handle to the "ON" position. The indicator light will illuminate.
7. The kettle will begin to heat the water. Once the water boils, the kettle will automatically shut off, and the indicator light will extinguish.
8. Carefully lift the kettle from the base and pour the hot water.



Image 4.1: Illustration of fast heating and automatic shut-off.

4.2 Using the Tea Infuser:

The removable stainless steel infuser allows you to brew your favorite loose leaf tea directly in the kettle.

1. Remove the lid and the infuser from the kettle.
2. Add your desired amount of loose leaf tea or tea bags into the infuser.
3. Place the infuser back into the kettle, ensuring it is properly seated.
4. Fill the kettle with fresh water, ensuring the water level is appropriate for your tea and does not exceed the MAX line.
5. Close the lid securely.
6. Place the kettle on the power base and turn it on as described in Section 4.1.
7. Once the water boils and the kettle shuts off, allow the tea to steep for the desired duration.
8. Carefully remove the infuser using its handle to prevent over-steeping.
9. Pour and enjoy your freshly brewed tea.



Image 4.2: Inserting the removable tea infuser.

Dual Purpose Design

Removable Infuser for Making Fruit Tea



Image 4.3: Kettle pouring brewed tea.



Image 4.4: Kettle used for making fruit-infused water.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your TOPWIT Electric Kettle.

5.1 Daily Cleaning:

1. Always unplug the kettle and allow it to cool completely before cleaning.
2. Remove the infuser and rinse it under running water. Use a soft brush if necessary to remove tea residues.
3. The wide opening of the kettle allows for easy access to the interior. Wipe the inside with a soft, damp cloth.
4. Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. Never immerse the power base, cord, or plug in water.

5.2 Descaling (Removing Limescale):

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can

affect performance and taste. Descale regularly.

1. Fill the kettle with a mixture of 1 part white vinegar and 2 parts water.
2. Bring the mixture to a boil.
3. Allow the solution to soak in the kettle for at least 30 minutes, or longer for heavy deposits.
4. Discard the solution and rinse the kettle thoroughly with fresh water several times.
5. If necessary, boil fresh water in the kettle and discard it to remove any residual vinegar smell or taste.
6. Alternatively, commercial descaling solutions designed for kettles can be used following their specific instructions.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	<ul style="list-style-type: none">◦ Not plugged in.◦ Power switch not engaged.◦ No power at outlet.◦ Kettle not properly seated on base.	<ul style="list-style-type: none">◦ Ensure power cord is securely plugged into a working outlet.◦ Press the power switch to the "ON" position.◦ Test the outlet with another appliance.◦ Ensure the kettle is correctly placed on the power base.
Water is not boiling.	<ul style="list-style-type: none">◦ Insufficient water.◦ Lid not closed properly.	<ul style="list-style-type: none">◦ Ensure water level is above the MIN mark.◦ Close the lid firmly.
Kettle shuts off prematurely.	<ul style="list-style-type: none">◦ Boil-dry protection activated (no water).◦ Limescale buildup.	<ul style="list-style-type: none">◦ Add water to the kettle.◦ Descale the kettle as described in Section 5.2.
Unpleasant taste/odor in water.	<ul style="list-style-type: none">◦ New appliance odor.◦ Limescale buildup.	<ul style="list-style-type: none">◦ Perform initial cleaning steps (Section 3.2) again.◦ Descale the kettle as described in Section 5.2.

7. SPECIFICATIONS

Brand: TopWit

Model Name: Topwit Electric Kettle

Item Model Number: T618

Capacity: 1.0 Liter (approximately 1.1 Quarts)

Material: Borosilicate Glass, 304 Stainless Steel

Color: White

Product Dimensions: 7.48"L x 7.48"W x 10.63"H

Item Weight: 2.61 pounds

Special Features: Electric Glass Kettle, Electric Tea Kettle, Tea Infuser, Visible Water Window, Double Wall, Gooseneck Spout, Auto Shut-off, Boil-Dry Protection

Included Components: Kettle, Base & Power Cord

Care Instructions: Hand Wash (for kettle body and infuser)

8. WARRANTY AND SUPPORT




TOPWIT products are manufactured with quality and performance in mind. While specific warranty details are not provided in this manual, we recommend retaining your proof of purchase for any warranty claims.



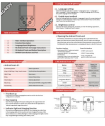
For product support, troubleshooting assistance, or to inquire about warranty information, please contact TOPWIT customer service through the retailer where the product was purchased or visit the official TOPWIT website.

We are committed to providing high-quality and innovative home appliances and products.

Online Support: For additional resources and FAQs, please visit the [TopWit Store on Amazon](#).

Related Documents - T618

	<p>T618 Instrument Instruction Manual: Features, Operation, and Troubleshooting</p> <p>A comprehensive guide for the T618 instrument, detailing its product introduction, performance characteristics, specifications, interface functions, operational procedures for connectivity (CarPlay, Android Auto), software upgrades, customization options, and a troubleshooting guide.</p>
	<p>10.1-inch T618 4G Android Tablet PC Specifications</p> <p>Comprehensive technical specifications for the 10.1-inch T618 4G Android Tablet PC, detailing hardware, software, connectivity, and pre-installed applications.</p>
	<p>T618 Instrument Instruction Manual: Features, Operation, and Troubleshooting</p> <p>A comprehensive guide for the T618 instrument, detailing its product introduction, performance characteristics, specifications, interface functions, operational procedures for connectivity (CarPlay, Android Auto), software upgrades, customization options, and a troubleshooting guide.</p>

 HPad 1 User Guide	<p>HEADWOLF HPad 1 User Guide</p> <p>Comprehensive user guide for the HEADWOLF HPad 1 tablet, covering setup, features, technical specifications, troubleshooting, and safety information.</p>
	<p>ALLDOCUBE T1020S iPlay40 Tablet Specifications and Features</p> <p>Detailed specifications for the ALLDOCUBE T1020S iPlay40 tablet, including hardware, I/O interface, technical specifications, and packaging information. Features UNISOC T618 processor, 8GB RAM, 128GB storage, and a 10.4-inch display.</p>
	<p>Anbernic RG405V User Manual: Guide to Interface, Settings, and Usage</p> <p>Comprehensive user guide for the Anbernic RG405V handheld retro game console. Learn about system navigation, button functions, language and brightness settings, front-end usage, and hardware ports for an enhanced gaming experience.</p>