



Manuals.plus /

› SHOKZ /

› SHOKZ OpenRun Pro User Manual

SHOKZ S810

SHOKZ OpenRun Pro User Manual

Model: S810

INTRODUCTION

Welcome to the SHOKZ OpenRun Pro user manual. These open-ear Bluetooth bone conduction sport headphones are designed to provide a premium listening experience while maintaining situational awareness. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your OpenRun Pro headphones.

The OpenRun Pro features 9th generation bone conduction technology with Shokz TurboPitch for enhanced bass, a lightweight titanium frame for a secure fit, and up to 10 hours of battery life with quick charge capability. They are also IP55 water-resistant, making them suitable for various activities.

WHAT'S IN THE BOX

- OpenRun Pro Wireless Stereo Bone Conduction Headphones
- Magnetic Induction Charging Cable
- Hard Shell Carrying Case
- Sport Headband
- User Guide (this manual)

Secure Fit in Motion

Steady even during intense workouts



Image: The OpenRun Pro headphones, magnetic charging cable, hard shell carrying case, and a sport headband, as typically included in the product packaging.

SETUP

1. Charging Your Headphones

Before first use, fully charge your OpenRun Pro headphones. Use the provided magnetic induction charging cable. Connect the magnetic end to the charging port on the headphones and the USB-A end to a compatible USB power source.

- A full charge takes approximately 1 hour.
- A 5-minute quick charge provides up to 1.5 hours of listening time.
- The LED indicator will show charging status.

Crystal-Clear Premium Sound

 9th TurboPitch™



Image: A close-up of the SHOKZ OpenRun Pro headphones showing the magnetic charging port and the magnetic charging cable connected.

2. Powering On/Off

To power on, press and hold the Power/Volume+ button for 2 seconds until the LED indicator flashes blue and Audrey says "Welcome to Shokz."

To power off, press and hold the Power/Volume+ button for 3 seconds until the LED indicator flashes red and Audrey says "Power off."

3. Pairing Your Headphones

1. Start with the headphones powered off.
2. Press and hold the Power/Volume+ button for 5 seconds until the LED indicator flashes red and blue alternately, and Audrey says "Pairing."
3. Open your device's Bluetooth settings and select "OpenRun Pro by Shokz."
4. Audrey will say "Connected" when pairing is successful.


Your browser does not support the video tag.

Video: An unboxing video for the OpenRun Pro, demonstrating the initial setup and components. This video is provided by the official Shokz seller.

OPERATING YOUR HEADPHONES

Controls

Function	Action
Play/Pause Music	Press the Multi-function button once.
Next Track	Press the Multi-function button twice.
Previous Track	Press the Multi-function button three times.
Volume Up	Press the Volume+ button.
Volume Down	Press the Volume- button.
Answer Call	Press the Multi-function button once during an incoming call.
End Call	Press the Multi-function button once during a call.
Reject Call	Press and hold the Multi-function button for 2 seconds during an incoming call.
Activate Voice Assistant	Press and hold the Multi-function button for 2 seconds.

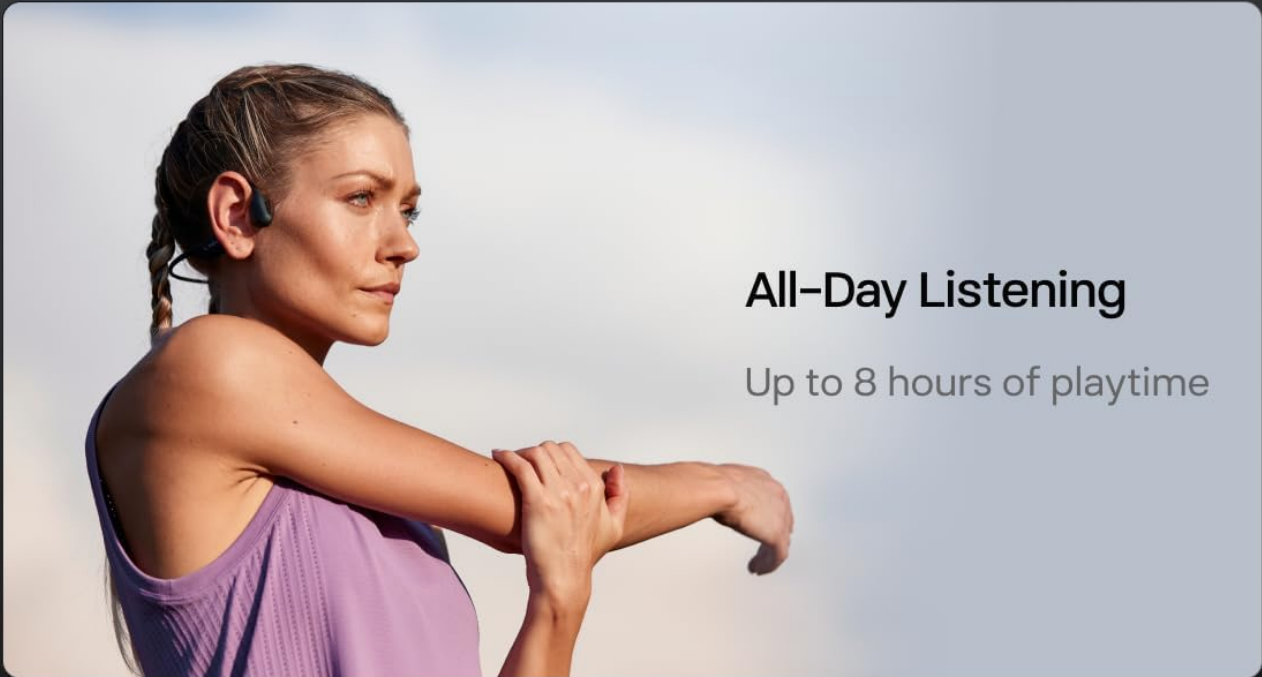

All-Day Listening

Up to 8 hours of playtime



Fast and Stable Connection

Bluetooth 5.1

Crystal-Clear Phone Call

2 noise-cancelling mics



Quick Charge

Get 1.5 hours of playtime in 5 minutes

Image: A detailed view of the SHOKZ OpenRun Pro headphones highlighting the location of the multi-function button and volume controls for intuitive operation.

Wearing Your Headphones

Place the transducers on your cheekbones, just in front of your ears. The band should rest comfortably behind your neck. Ensure the transducers are in full contact with your skin for optimal sound quality.

Open-Ear Listening for All-Day Comfort



Image: A woman wearing the SHOKZ OpenRun Pro headphones, demonstrating the open-ear design and how the headphones sit comfortably on the cheekbones.

Find Your Perfect Fit

Standard for most header

Mini for smaller head sizes or a tighter fit

*Only the band sizes are different, specifications are totally the same.

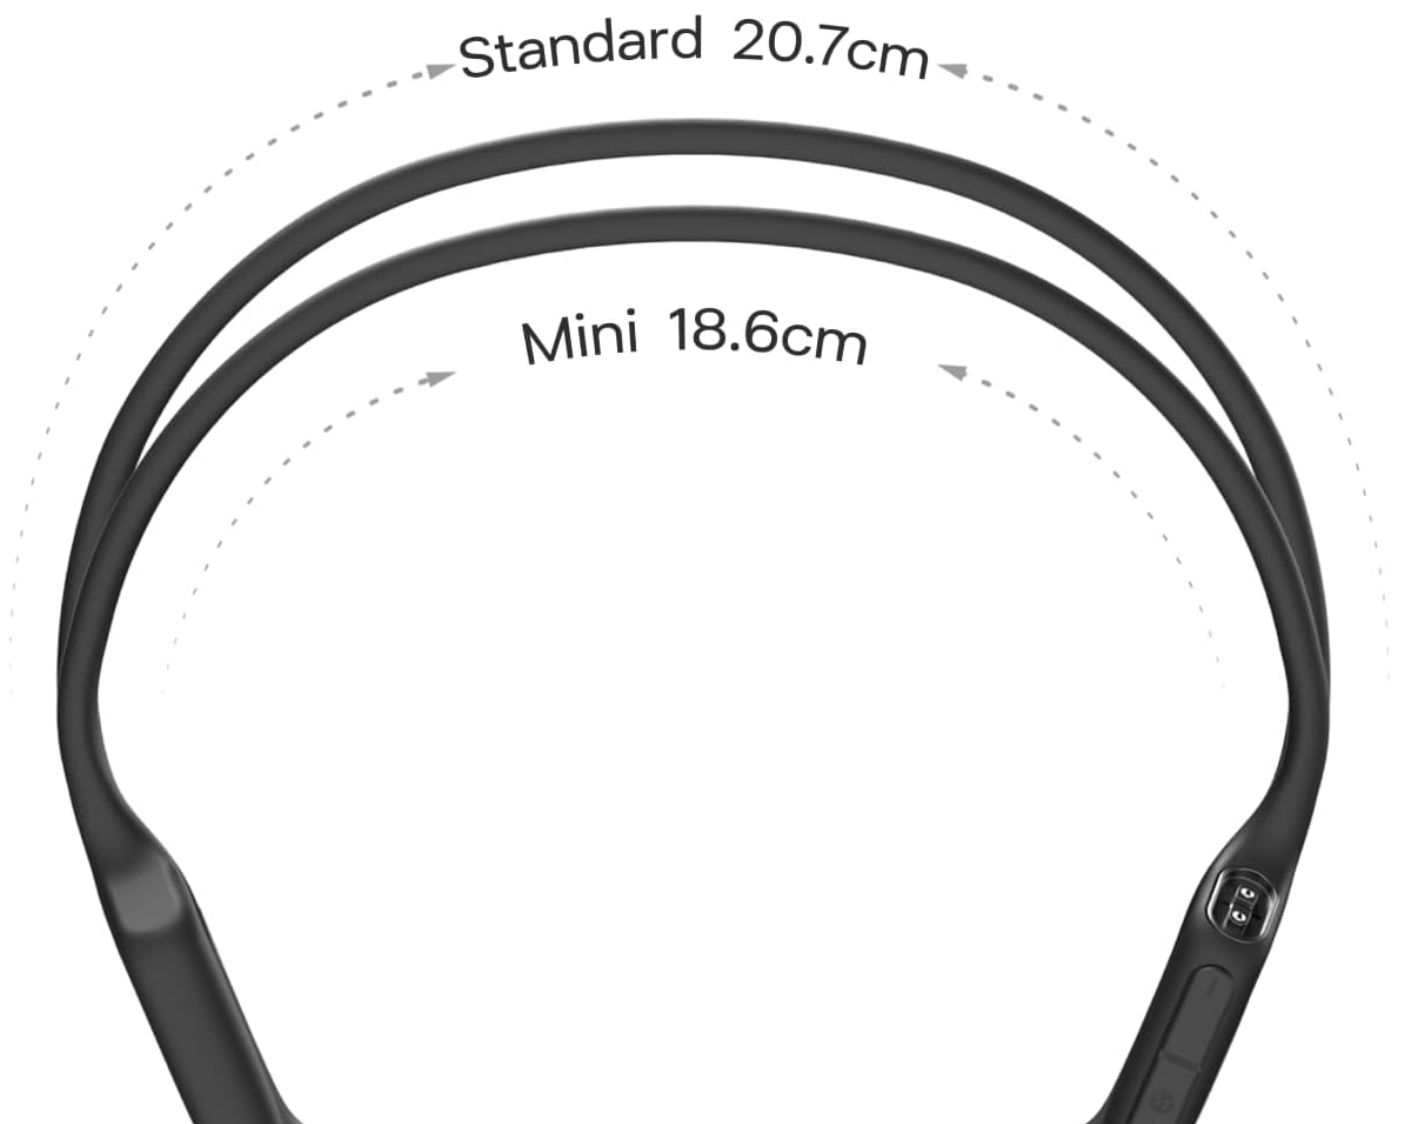


Image: A diagram illustrating the two available sizes for the OpenRun Pro headphones: Standard (20.7cm) and Mini (18.6cm), to help users find their perfect fit.

MAINTENANCE

Cleaning

Wipe the headphones with a soft, damp cloth after each use, especially after workouts, to remove sweat and dirt. Do not use abrasive cleaners or submerge the headphones in water.

Storage

Store your OpenRun Pro headphones in the provided hard shell carrying case when not in use to protect them from damage. Avoid storing them in extreme temperatures or direct sunlight.

Water Resistance

The OpenRun Pro headphones are IP55 water-resistant, meaning they are protected against dust and low-pressure water jets from any direction. They are suitable for resisting sweat and light rain but should not be submerged in water or used for swimming.

TROUBLESHOOTING

Problem	Possible Solution
Headphones won't turn on.	Ensure the headphones are charged. Connect to the charging cable and check the LED indicator.
Cannot pair with device.	Make sure headphones are in pairing mode (alternating red/blue LED). Turn off and on Bluetooth on your device. Try forgetting the device in your Bluetooth settings and re-pairing.
No sound or low volume.	Increase volume on both headphones and connected device. Ensure transducers are properly placed on cheekbones. Check if headphones are connected to the correct device.
Poor call quality.	Ensure the microphone is not obstructed. Move closer to your connected device. Avoid noisy environments.
Bluetooth connection drops.	Ensure your device is within the 33 feet (10 meter) Bluetooth range. Avoid obstacles between headphones and device.

SPECIFICATIONS

- **Model Name:** OpenRun Pro
- **Model Number:** S810
- **Connectivity Technology:** Wireless (Bluetooth 5.1)
- **Bluetooth Range:** Up to 33 feet (10 meters)
- **Audio Driver Type:** Bone Conduction Driver (9th generation with Shokz TurboPitch)
- **Battery Life:** Up to 10 hours of music and calls
- **Charging Time:** Approximately 1 hour (5-minute quick charge for 1.5 hours playtime)
- **Water Resistance Level:** IP55 (Sweat and water-resistant)
- **Item Weight:** 29 Grams (1.02 ounces)
- **Material:** Nickel-Titanium Alloy, Silicone, Plastic
- **Included Components:** Headphones, Magnetic Induction Charging Cable, Hard Shell Carrying Case, Sport Headband, User Guide
- **Microphone:** Dual noise-cancelling mics
- **Frequency Range:** 20-20000 hertz
- **Sensitivity:** 105 dB
- **Impedance:** 8.5 Ohm

WARRANTY AND SUPPORT

Warranty Information

SHOKZ products typically come with a standard warranty. Please refer to the official SHOKZ website or your purchase documentation for specific warranty terms and conditions applicable to your region and product model.

Customer Support

For further assistance, technical support, or warranty claims, please visit the official SHOKZ support website or contact their customer service. You can often find contact information and FAQs on the SHOKZ Store on Amazon or their main company website.

A PDF version of the user guide is also available for download: [Download User Guide \(PDF\)](#).