

[Manuals.plus](#) /

› [SHOKZ](#) /

› SHOKZ OpenRun Bone Conduction Sport Headphones User Manual

SHOKZ S803


SHOKZ OpenRun Bone Conduction Sport Headphones User Manual

Model: S803 | Brand: SHOKZ

INTRODUCTION

The SHOKZ OpenRun headphones utilize advanced 8th generation bone conduction technology to deliver audio through your cheekbones, leaving your ears open to your surroundings. This design ensures maximum situational awareness, making them ideal for workouts, running, and daily activities where staying connected to your environment is crucial. Enjoy comfortable, earbud-free listening with premium sound quality.

WHAT'S IN THE BOX

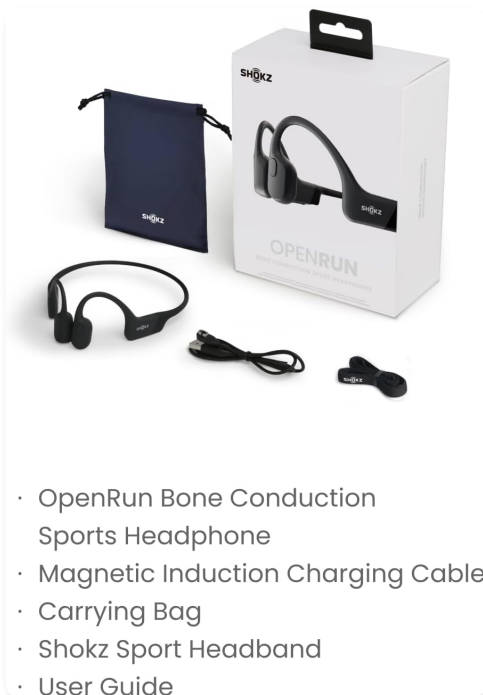

Your SHOKZ OpenRun package includes:

- OpenRun Bone Conduction Sports Headphone
- Magnetic Induction Charging Cable

- Carrying Bag
- Shokz Sport Headband
- User Guide

SETUP

Charging Your Headphones



Before first use, fully charge your OpenRun headphones. Use the provided magnetic induction charging cable. Connect the magnetic end to the charging port on your headphones and the USB end to a power source. A full charge takes approximately 1 hour. A 10-minute quick charge provides up to 1.5 hours of battery life. The headphones offer up to 8 hours of continuous music and calls on a full charge.

Pairing with a Device


To pair your SHOKZ OpenRun headphones with a Bluetooth-enabled device (e.g., smartphone, PC, watch, Mac, Android device):

1. Ensure your headphones are powered off.
2. Press and hold the power button until the LED indicator flashes red and blue, indicating pairing mode.
3. On your device, enable Bluetooth and search for "OpenRun" in the list of available devices.
4. Select "OpenRun" to connect. Once connected, the LED indicator will flash blue.

The headphones support Bluetooth 5.1 and have a wireless range of up to 33 feet (10 meters).

OPERATING YOUR HEADPHONES

Wearing the Headphones

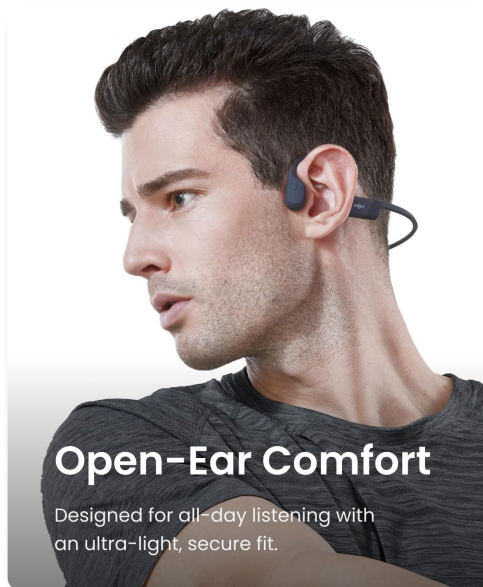


Open-Ear Comfort

Designed for all-day listening with an ultra-light, secure fit.

Place the headphones so the transducers rest on your cheekbones, just in front of your ears. The band should wrap around the back of your head. The open-ear design allows you to hear your surroundings while enjoying audio.

Controls

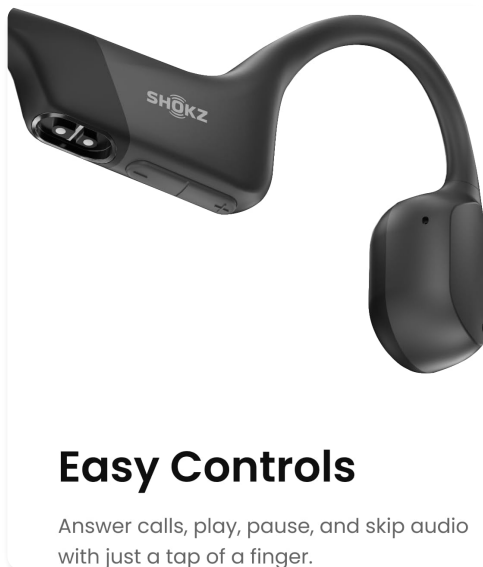

Easy Controls


Answer calls, play, pause, and skip audio with just a tap of a finger.

The OpenRun headphones feature intuitive button controls for various functions:

- **Volume Control:** Use the dedicated volume buttons to adjust audio levels.
- **Play/Pause:** Press the multifunction button to play or pause audio.
- **Skip Tracks:** Double-press the multifunction button for next track, triple-press for previous track.
- **Answer/End Calls:** Press the multifunction button to answer or end a call.
- **Voice Assistant:** Press and hold the multifunction button to activate your device's voice assistant.

MAINTENANCE

Water Resistance

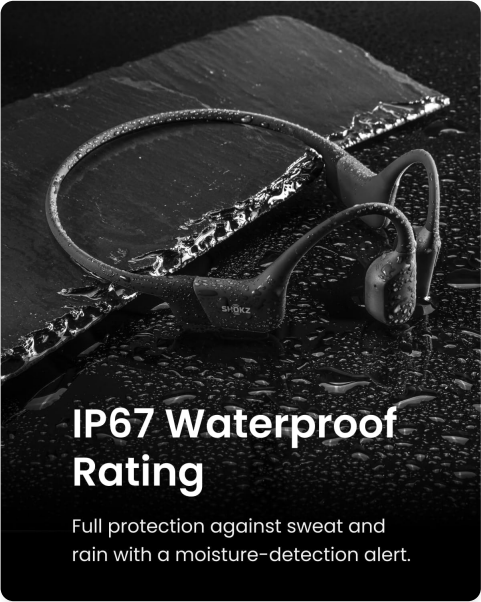

The OpenRun headphones are IP67 waterproof rated, providing full protection against sweat and rain. They are suitable for intense workouts and outdoor activities. A moisture detection alert is included for safe charging. **Note:** These headphones are not designed for swimming or submersion.

Cleaning and Storage

To maintain your headphones, wipe them with a soft, damp cloth after each use, especially after workouts. Ensure the charging port is dry before charging. Store them in the provided carrying bag in a cool, dry place away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

- **No Power:** Ensure the headphones are fully charged. Connect to the magnetic charging cable and check the LED indicator.
- **Cannot Pair:** Make sure the headphones are in pairing mode (LED flashing red and blue). Turn off and on your device's Bluetooth. If issues persist, try resetting the headphones (refer to the full user guide for specific reset instructions).
- **Poor Sound Quality:** Ensure the transducers are positioned correctly on your cheekbones. Adjust the volume on both the headphones and your connected device. Check for any obstructions or interference.
- **Intermittent Connection:** Ensure your device is within the 33-foot Bluetooth range. Avoid environments with strong Wi-Fi or other wireless interference.

For more detailed troubleshooting, please refer to the official SHOKZ user guide available on the manufacturer's website or the PDF linked in the product documentation.

SPECIFICATIONS

Feature	Detail
Model Name	OpenRun
Model Number	S803
Connectivity Technology	Wireless (Bluetooth 5.1)

Bluetooth Range	33 Feet (10 meters)
Battery Life	Up to 8 Hours
Charging Time	1 Hour (10-min quick charge for 1.5 hours)
Water Resistance Level	IP67 (Sweat and Water Resistant)
Item Weight	26 Grams (0.917 ounces)
Material	Nickel-Titanium Alloy, Silicone, Plastic
Control Type	Volume Control, Button
Recommended Uses	Running, Exercise, Sports, Fitness
UPC	850033806007

WARRANTY AND SUPPORT

SHOKZ OpenRun headphones come with a **2-Year Warranty**, ensuring peace of mind regarding manufacturing defects and performance issues. For warranty claims or technical support, please visit the official SHOKZ website or contact their customer service.

You can also refer to the comprehensive User Guide (PDF) for detailed information and support:

[Download User Guide \(PDF\)](#)

For additional product information and accessories, visit the official [SHOKZ Store on Amazon](#).

© 2024 SHOKZ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question