

[Manuals.plus](#) /

> [AEG](#) /

> AEG AZE155 PetPro+ Pet Hair Nozzle User Manual

AEG AZE155

AEG AZE155 PetPro+ Pet Hair Nozzle User Manual

Model: AZE155

Brand: AEG

1. INTRODUCTION

The AEG AZE155 PetPro+ Pet Hair Nozzle is an advanced accessory designed to significantly improve the pet hair removal capabilities of your compatible AEG vacuum cleaner. Featuring a motorized brush and double rubber strips, this nozzle is engineered for deep cleaning and efficient collection of pet hair, dander, pollen, and mites from various surfaces such as upholstery, sofas, and car seats. Its design prioritizes thorough cleaning and ease of maintenance.

2. SAFETY INFORMATION

- Always ensure the vacuum cleaner is turned off and unplugged from the power outlet before attaching, detaching, or cleaning the PetPro+ nozzle.
- Do not use the nozzle on wet surfaces or to pick up liquids, as this may cause electrical shock or damage to the device.
- Keep hair, loose clothing, fingers, and all parts of the body away from the rotating brush roller during operation.
- Inspect the nozzle regularly for any damage or blockages. Do not operate if damaged.
- This nozzle is intended for household use only and should not be used for commercial or industrial purposes.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x AEG AZE155 PetPro+ Pet Hair Nozzle



Figure 3.1: The AEG PetPro+ Pet Hair Nozzle as packaged.

4. SETUP

Follow these steps to attach the PetPro+ nozzle to your vacuum cleaner:

1. Ensure your AEG vacuum cleaner is turned off and unplugged from the power source.
2. Locate the connection point on your vacuum cleaner's hose or extension wand.
3. Align the connector of the PetPro+ nozzle with the vacuum cleaner's connection point.
4. Push the nozzle firmly onto the vacuum cleaner's hose or wand until it clicks securely into place. Ensure a tight fit to prevent loss of suction.



Figure 4.1: The PetPro+ nozzle properly attached to a compatible AEG vacuum.

5. OPERATING INSTRUCTIONS

The PetPro+ nozzle is designed for effective removal of pet hair and debris from various surfaces.

1. Once the PetPro+ nozzle is securely attached, plug in your vacuum cleaner (if corded) or ensure it is charged

(if cordless).

2. Turn on your vacuum cleaner. The motorized brush within the nozzle will begin to rotate.
3. Move the nozzle slowly and steadily over the surface you wish to clean, such as upholstery, carpets, rugs, or car interiors. The double rubber strips and rotating brush work together to agitate and lift embedded pet hair and dirt.
4. For heavily soiled areas, pass the nozzle over the area multiple times in different directions to ensure thorough cleaning.



Figure 5.1: The PetPro+ nozzle effectively removing pet hair and other allergens from fabric surfaces.



Figure 5.2: Demonstrating the PetPro+ nozzle's ability to clean surfaces with accumulated pet hair.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your PetPro+ nozzle.

6.1 Cleaning the Brush Roller

The brush roller can accumulate hair and debris, affecting performance. Clean it regularly:

1. Turn off and unplug the vacuum cleaner.
2. Locate the brush roller access on the underside of the nozzle.
3. Utilize the push-and-pull function (if available on your model) or carefully remove the brush roller as per your vacuum cleaner's main manual.
4. Remove any tangled hair, threads, or debris from the brush bristles and the rubber strips. A pair of scissors can be used to cut through tightly wound hair.
5. Once clean, reinsert the brush roller securely.



Figure 6.1: Detaching the brush roller for cleaning.

6.2 General Cleaning

- Wipe the exterior of the nozzle with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no moisture enters the internal components.
- Allow the nozzle to air dry completely before reattaching it to the vacuum cleaner.

7. TROUBLESHOOTING

If you encounter issues with your PetPro+ nozzle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Nozzle not picking up hair effectively	Brush roller tangled with hair or debris Nozzle not properly attached Vacuum cleaner suction issue	Clean the brush roller (refer to Section 6.1) Ensure the nozzle is securely attached to the vacuum Check your vacuum cleaner's dustbin, filters, and hose for blockages
Brush roller not spinning	Hair or debris obstructing the brush Nozzle not receiving power (if motorized) Internal fault	Clean the brush roller thoroughly Ensure the nozzle is correctly connected and the vacuum is powered on Contact customer support if the issue persists after cleaning
Nozzle making unusual noises	Debris caught in the brush mechanism Worn parts	Inspect and clean the brush roller and surrounding areas for foreign objects If noise persists, contact customer support

8. SPECIFICATIONS

Key technical specifications for the AEG AZE155 PetPro+ Pet Hair Nozzle:

- **Model Name:** PetPro+
- **Model Number:** AZE155
- **Brand:** AEG
- **Manufacturer:** Electrolux
- **Color:** Black

- **Product Dimensions:** 7.09"L x 8.54"W x 3.23"H (18cm L x 21.7cm W x 8.2cm H)
- **Item Weight:** 1.12 pounds (0.51 kg)
- **Recommended Uses:** Removal of pet hair on upholstery and in vehicles
- **Included Components:** Nozzle
- **Style:** Accessories PetPro nozzle



Figure 8.1: The AEG AZE155 PetPro+ Pet Hair Nozzle.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your main AEG vacuum cleaner or visit the official AEG (Electrolux) website. Keep your proof of purchase for any warranty claims. For technical assistance or spare parts, please contact AEG customer service directly. Contact details can typically be found on the manufacturer's website or in the main vacuum cleaner manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09BW2N99B>

More documents and user manuals: <https://manuals.plus/>