

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fisher-Price](#) /

› [Fisher-Price HHG30 2-in-1 Terrazzo Infant-to-Toddler Rocker Instruction Manual](#)

## Fisher-Price HHG30

# Fisher-Price HHG30 2-in-1 Terrazzo Infant-to-Toddler Rocker Instruction Manual

Model: HHG30

## INTRODUCTION

---

The Fisher-Price 2-in-1 Terrazzo Infant-to-Toddler Rocker is designed to grow with your child, offering comfort and entertainment from infancy through toddlerhood. It functions as a stationary bouncer or rocking seat for infants and easily converts into a rocking chair for toddlers. This manual provides essential information for safe assembly, operation, and maintenance of your rocker.



Image: The Fisher-Price 2-in-1 Terrazzo Infant-to-Toddler Rocker in infant bouncer mode, featuring a baby and the attached toy bar with hanging toys.

## SAFETY INFORMATION

---

**WARNING:** Use this product only for children up to 18 kg (40 lbs). Always ensure the product is stable and follow all instructions for safe use. Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave child unattended.
- Always use the restraint system.
- Do not use this product if it is damaged or broken.
- Do not use this product for a child who can sit up unassisted.
- Never use this product on an elevated surface (e.g., a table).
- Always place the rocker on a flat, level surface.
- Keep away from open flames and other heat sources.

## PACKAGE CONTENTS

Please check that all components are present before assembly:

- Rocker Frame (left and right sides)
- Seat Pad
- Toy Bar with 2 Hanging Toys
- Kickstand
- Instruction Manual

## ASSEMBLY INSTRUCTIONS

While the rocker requires minimal assembly, please follow these steps carefully to ensure proper setup.

1. **Attach Frame Components:** Connect the left and right rocker frame components securely until you hear a click.
2. **Install Seat Pad:** Drape the seat pad over the assembled frame, ensuring all straps and loops align with the frame's attachment points. Secure the seat pad firmly.
3. **Attach Toy Bar (Infant Mode):** Insert the ends of the toy bar into the designated slots on the rocker frame. Ensure it clicks into place. The toy bar is removable for toddler mode.
4. **Battery Installation (for Vibrations):** Locate the battery compartment, typically on the underside of the seat. Open the compartment, insert the required batteries (not included), and close securely.



Image: Product packaging illustrating the rocker's conversion from infant bouncer to toddler rocking chair.



Image: Detailed view of the lion and monkey hanging toys that attach to the toy bar.

## OPERATING INSTRUCTIONS

---

### Infant Bouncer Mode (up to 9 kg / 20 lbs)

- Ensure the toy bar is securely attached.
- Place your infant in the seat and fasten the restraint system.
- To activate soothing vibrations, press the vibration button located on the side of the frame. Press again to turn off.
- Adjust the seat recline to one of the two available positions by pressing the recline buttons on the sides of the seat.
- For stationary use, extend the kickstand located at the front of the rocker base. Retract it for rocking motion.



Image: A hand demonstrating how to activate the soothing vibration feature by pressing the button on the rocker's frame.

### **Toddler Rocking Chair Mode (up to 18 kg / 40 lbs)**

- Once your child can sit up unassisted, remove the toy bar by pressing the release buttons and lifting it off.
- The rocker now functions as a comfortable rocking chair for your toddler.
- Ensure the kickstand is retracted for rocking motion.



Image: A baby enjoying the Fisher-Price rocker, showcasing the comfortable seat and restraint system.

## MAINTENANCE AND CARE

- **Seat Pad:** The seat pad is machine-washable. Remove it from the frame, wash in cold water on a gentle cycle, and tumble dry on low heat. Do not bleach.
- **Frame:** Wipe the frame and plastic components with a damp cloth and mild soap. Rinse thoroughly and air dry.
- **Toys:** Wipe hanging toys with a damp cloth. Do not immerse in water.
- **Storage:** When not in use, store the rocker in a clean, dry place away from direct sunlight.

## TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Vibrations not working	Check battery installation. Ensure batteries are fresh and correctly oriented. Replace if necessary.
Rocker does not rock smoothly	Ensure the kickstand is fully retracted. Check for any obstructions under the rocker base.
Toy bar not staying in place	Ensure both ends of the toy bar are fully inserted into the frame slots and have clicked into position.
Seat pad feels loose	Verify all straps and loops of the seat pad are correctly attached to the frame.

## SPECIFICATIONS

---

- **Model Number:** HHG30
- **Product Dimensions (L x W x H):** 68.6 x 51.5 x 55.9 cm (27 x 20.3 x 22 inches)
- **Product Weight:** 3.08 kg (6.79 lbs)
- **Maximum Weight Capacity:** 18 kg (40 lbs)
- **Main Material:** Plastic
- **Recline Positions:** 2
- **Batteries Required:** Yes (for vibration unit, not included)

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation included with your purchase or visit the official Fisher-Price website. For customer support, product registration, or to inquire about replacement parts, please contact Fisher-Price customer service through their official channels.