

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Barbie](#) /

› [Barbie Dream Camper \(Model HCD46\) Instruction Manual](#)

Barbie HCD46

Barbie Dream Camper (Model HCD46) Instruction Manual

This manual provides essential information for the setup, operation, and care of your Barbie Dream Camper playset.

IMPORTANT SAFETY INFORMATION

- **WARNING: CHOKING HAZARD** - Small Parts. Not for children under 3 years.
- Adult supervision is recommended during assembly and play.
- Keep all packaging materials away from children.
- Inspect all parts regularly for damage. Discontinue use if any part is broken.

WHAT'S IN THE Box

The Barbie Dream Camper (Model HCD46) includes the following components and accessories:

- Barbie Dream Camper vehicle
- 1 pool
- 1 car seat
- 1 firepit
- 1 kitchen piece
- 4 stools
- 1 table
- 1 camera
- 1 brush
- 1 pair of binoculars
- 1 flashlight
- 1 dog bed
- 1 popcorn carton
- 1 coffee pot
- 1 muffin tray
- 2 mugs
- 1 milk carton
- 1 cushion

- 1 juice carton
- 1 canteen
- 1 pan
- 1 egg carton
- 1 shampoo bottle
- 1 bag of dog food
- 2 dog figures
- 2 toothbrushes
- 1 toothpaste tube
- 4 cups
- 1 dog bowl
- 1 hat
- 1 waist bag
- 2 marshmallow sticks
- 12 flatware pieces
- 2 dog bones
- 4 plates
- 2 blankets
- 1 towel
- 1 shower curtain
- Sticker sheet

SETUP AND ASSEMBLY

Unpacking

Carefully remove all components from the packaging. Ensure all listed items in the 'What's in the Box' section are present. Discard packaging responsibly.

Initial Assembly

The Barbie Dream Camper is designed for easy transformation. To set up the playset:

1. Open the camper doors to reveal the interior play areas.
2. Extend the roof to reveal the upper sleeping area and the ladder.
3. Attach the purple slide to the roof and extend it to the blue pool accessory.
4. Place the pool on a flat surface at the end of the slide.
5. Use the provided sticker sheet to customize the camper's interior and exterior as desired.



DOLLS SOLD SEPARATELY. SUBJECT TO AVAILABILITY.

The Barbie Dream Camper in its fully expanded state, showcasing the main vehicle, the extended slide, and the separate pool. A young girl is actively playing with the dolls and accessories, highlighting the interactive nature of the playset.



The product packaging for the Barbie Dream Camper, detailing its key features such as over 60 pieces and 7 distinct play areas, providing a visual overview of the playset's contents and capabilities.

OPERATING THE DREAM CAMPER

Transforming the Camper

The Dream Camper easily transforms to create various play scenarios:

- **Driving Mode:** Close all doors and fold in the slide and roof for a compact vehicle ready for travel. The two-seater cab allows dolls to 'drive'.
- **Expanded Play Mode:** Open the camper to reveal seven distinct play areas: a kitchen, dining area, sleeping area, bathroom, pool, slide, and a den with a TV.
- **Slide and Pool Fun:** Dolls can climb the ladder to the roof, then slide down into the detachable pool for a splash.

Play Areas Overview

Explore the detailed features of each area:

- **Kitchen:** Equipped with a sink, stove, and storage for cooking accessories.
- **Dining Area:** Features a table and stools for dolls to enjoy meals.
- **Sleeping Area:** Includes blankets and pillows for a cozy rest.
- **Bathroom:** Complete with a toilet and a shower with a curtain.
- **Den:** A comfortable space with a TV for relaxation.



Outdoor dining & firepit!

An outdoor dining scene with Barbie dolls, featuring a round table, chairs, and a firepit, illustrating one of the many imaginative play scenarios possible with the Dream Camper.



DOLL SOLD SEPARATELY. SUBJECT TO AVAILABILITY.

Bathroom with shower!

A detailed view of the Barbie Dream Camper's bathroom area, complete with a functional-looking shower with a colorful curtain and a compact toilet, designed for doll play.



DOLLS SOLD SEPARATELY. SUBJECT TO AVAILABILITY.

Sleeping bag for 2 dolls!

The sleeping area of the Barbie Dream Camper, showing two Barbie dolls comfortably resting on a star-patterned sleeping bag, emphasizing the playset's capacity for multiple dolls and pet accessories.

Your browser does not support the video tag.

This official video from Mattel demonstrates the full functionality of the Barbie Dream Camper, illustrating how it transforms from a compact vehicle into an expansive playset with multiple interactive zones, including the exciting slide and pool.

CARE AND MAINTENANCE

- Cleaning:** Wipe the camper and accessories with a damp cloth and mild soap. Do not immerse electronic parts (if any) in water.
- Storage:** For compact storage, fold the camper back into its vehicle form, ensuring all accessories are securely stored inside or in a separate container.
- Accessory Care:** Keep small accessories in a designated bag or compartment to prevent loss.



A close-up of the numerous small accessories that come with the Barbie Dream Camper, including miniature kitchen tools, pretend food, pet items, and a sheet of customizable stickers, enhancing the play experience.

TRROUBLESHOOTING

- **Missing Parts:** If any parts are missing upon unboxing, please contact Mattel customer service.
- **Difficulty Transforming:** Ensure all internal components are correctly positioned before attempting to fold or expand the camper. Do not force parts.
- **Slide Not Attaching:** Verify the slide is aligned with the designated attachment points on the camper's roof.

PRODUCT SPECIFICATIONS

Product Name	Barbie Dream Camper
Model Number	HCD46
Brand	Barbie (Mattel)
Product Dimensions	23.5 x 9 x 12.75 inches
Item Weight	8.81 pounds
Manufacturer Recommended Age	3 years and up
Release Date	March 1, 2022

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please visit the official Mattel customer service website or contact their support team directly.

You can find more information and support at the [Mattel Customer Service Portal](#).