

[Manuals.plus](#) /

› [caSino187](#) /

› caSino187 Side Brush Module Installation and Maintenance Guide for Roomba 500, 600, 700, 800, 900, i, and e Series

caSino187 caSino187

caSino187 Side Brush Module Installation and Maintenance Guide

For Roomba 500, 600, 700, 800, 900, i, and e Series Robot Vacuums

1. PRODUCT OVERVIEW

This caSino187 Side Brush Module is a replacement component designed to restore the functionality of your Roomba robot vacuum's side brush system. It features improved spiral gear teeth to enhance durability and a redesigned brush and screw to prevent hair entanglement.

Compatibility

This module is compatible with the following Roomba series:

- Roomba 500 Series
- Roomba 600 Series
- Roomba 700 Series
- Roomba 800 Series
- Roomba 900 Series
- Roomba i Series (i3, i4, i5, i6, i7, i8)
- Roomba e Series (e5, e6)



Figure 1: The caSino187 Side Brush Module, featuring its three-pronged brush assembly and gray housing.

2. INSTALLATION INSTRUCTIONS

Before beginning installation, ensure your Roomba is powered off and disconnected from its charging base. It is recommended to perform this procedure on a clean, flat surface.

1. **Prepare the Roomba:** Turn your Roomba robot vacuum upside down to access the bottom panel.
2. **Remove Side Brush:** Unscrew and remove the existing side brush. This usually involves one screw in the center of the brush.
3. **Remove Bottom Cover:** Locate and unscrew the four (or more, depending on model) screws securing the Roomba's bottom cover. Carefully remove the cover.
4. **Locate and Remove Old Module:** Identify the old side brush module. It is typically secured by a few screws. Unscrew these fasteners and gently lift out the old module.
5. **Install New Module:** Position the new caSino187 Side Brush Module into the designated slot. Ensure it sits flush. Secure it with the screws removed in the previous step.
6. **Replace Bottom Cover:** Carefully place the bottom cover back onto the Roomba, aligning all tabs and screw holes. Secure it with the screws removed in step 3.
7. **Reattach Side Brush:** Reinstall the side brush onto the new module, securing it with its central screw.



Figure 2: Internal view of the module, highlighting the improved spiral gear teeth designed for enhanced durability.

3. OPERATION

Once installed, the caSino187 Side Brush Module operates automatically as part of your Roomba's cleaning cycle. The side brush will rotate to sweep debris from edges and corners into the main cleaning path of the robot vacuum.

4. MAINTENANCE

Regular maintenance of the side brush module ensures optimal performance and extends its lifespan.

- **Clean the Side Brush:** Periodically remove the side brush and clear any accumulated hair, dust, or debris from the bristles and the brush post.
- **Inspect for Wear:** Check the side brush bristles for signs of wear or damage. Replace the brush if bristles are bent, frayed, or missing.
- **Check Module Area:** Ensure the area around the side brush module on the Roomba's chassis is free of obstructions.



Figure 3: Top view of the caSino187 Side Brush Module, illustrating the brush assembly that requires periodic cleaning.

5. TROUBLESHOOTING

If you encounter issues with your side brush module, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Side brush not spinning or spinning intermittently.	Hair or debris tangled around the brush or module gears. Module not properly seated.	Remove the side brush and clean thoroughly. Ensure the module is securely installed and screws are tightened.
Side brush detaches during operation.	Side brush screw is loose or stripped. Brush itself is damaged.	Ensure the side brush screw is tightened. If the screw or brush is damaged, replace the side brush.
Module makes unusual noises.	Internal gears obstructed or damaged.	Disassemble and inspect the module for debris or visible damage to the gears. If damaged, replacement may be necessary.

6. PRODUCT SPECIFICATIONS

Brand: caSino187
Model Number: caSino187
UPC: 759687168625
Item Weight: 2.39 ounces

Package Dimensions: 4.88 x 3.74 x 2.01 inches

7. SUPPORT AND CONTACT INFORMATION

For further assistance or inquiries regarding your caSino187 Side Brush Module, please visit the official caSino187 store or contact customer support through your purchase platform.

caSino187 Store: [Visit the caSino187 Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09BXXTG55>

More documents and user manuals: **<https://manuals.plus/>**