

[Manuals.plus](#) /

> [VigorFun](#) /

> VigorFun Deluxe Wooden Art Set Instruction Manual (Model VIACASBN21083+2-1)

VigorFun VIACASBN21083+2-1

VigorFun Deluxe Wooden Art Set Instruction Manual

MODEL: VIACASBN21083+2-1

1. Product Overview

The VigorFun Deluxe Wooden Art Set is a comprehensive collection of art supplies designed for artists of all skill levels, from beginners to experienced individuals. This set provides a variety of mediums including acrylic paints, watercolor paints, oil paints, oil pastels, and colored pencils, all housed in a sturdy, portable wooden case. It is intended to support creative expression across different artistic techniques.



Image: The VigorFun Deluxe Wooden Art Set opened, showcasing the organized arrangement of paints, pastels, pencils, and sketch pads.

Included Components:

- 8 x Acrylic Paints
- 8 x Watercolor Paints
- 8 x Oil Paints
- 24 x Oil Pastels
- 10 x Colored Pencils
- 12 x Watercolor Cakes
- 3 x Canvas Panels (5.7"x 8.27")
- 2 x Sketch Pads (50 sheets each)
- 5 x Paint Brushes
- 2 x HB Pencils
- 1 x Palette
- 1 x Eraser
- 1 x Sharpener
- 1 x Wooden Box

2. Setup

To begin using your VigorFun Deluxe Wooden Art Set, carefully unpack all components from the wooden case. The case features foldable trays designed for organized storage and easy access to your supplies.



Image: A detailed view of the art set's contents, highlighting the arrangement of various art supplies within the wooden case.

Preparing Your Workspace:

1. Open the wooden case by unlatching the clasps.
2. Gently lift the top trays to reveal additional layers of supplies.
3. Arrange your chosen paints, pastels, and pencils on a clean, flat surface.
4. Prepare your sketch pads or canvas panels for immediate use.
5. Have a cup of water ready for cleaning brushes if using water-based paints.

Your browser does not support the video tag.

Video: Demonstration of the VigorFun Art Set in its wooden case, highlighting the organized storage and various art supplies.

3. Operating Instructions

This art set offers a diverse range of mediums. Below are general guidelines for using each type of supply:

Using Paints (Acrylic, Watercolor, Oil):

- **Acrylic Paints:** These paints are water-soluble when wet but dry quickly to a permanent, water-resistant finish. Use brushes to apply directly to canvas or mix on the palette. Clean brushes with water immediately after use.
- **Watercolor Paints & Cakes:** Activate watercolor cakes with a wet brush. For tube watercolors, squeeze a small amount onto the palette and dilute with water. Apply in thin layers for transparent effects. Clean brushes with water.
- **Oil Paints:** Oil paints dry slowly, allowing for extended blending time. Use oil-specific brushes and mediums (not included) for best results. Clean brushes with appropriate solvents (not included).

Using Drawing Mediums (Oil Pastels, Colored Pencils, HB Pencils):

- **Oil Pastels:** Apply directly to paper or canvas. They offer vibrant colors and a creamy texture, suitable for blending and layering.
- **Colored Pencils:** Use for detailed work, shading, and adding texture. Layer colors to create new hues and depths.
- **HB Pencils:** Ideal for sketching outlines, preliminary drawings, and detailed line work.


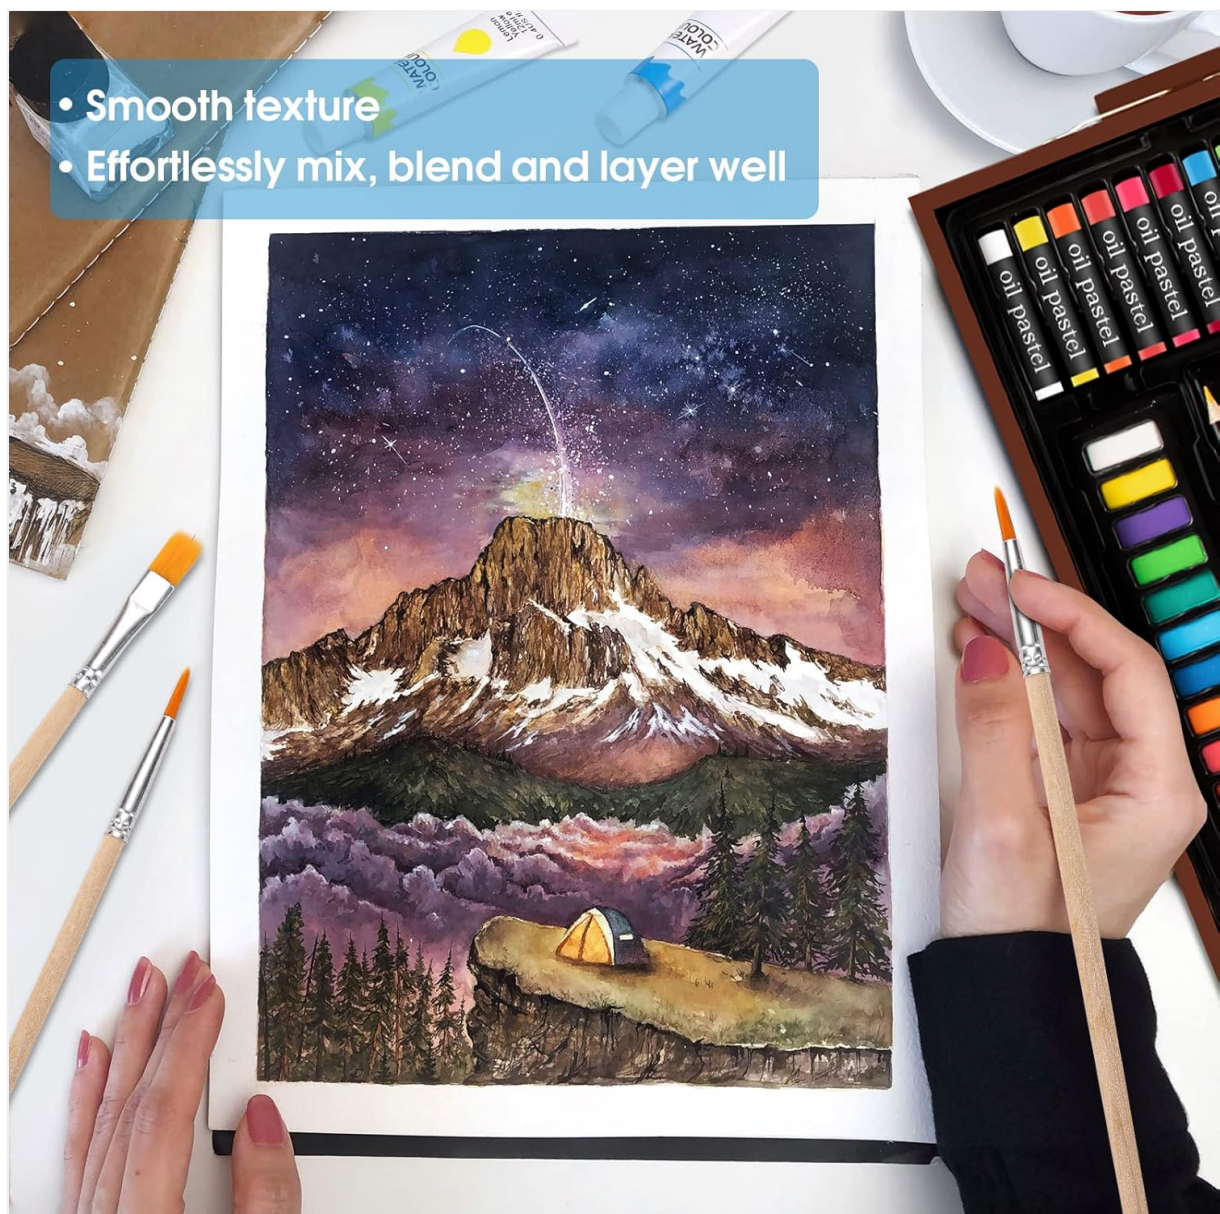 



Image: An artist actively engaged in painting a landscape, demonstrating the use of brushes and watercolors from the set.

Luxury Wooden Gift Box

 
Portable & Sturdy

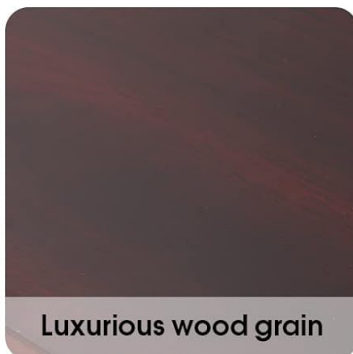

Luxurious wood grain

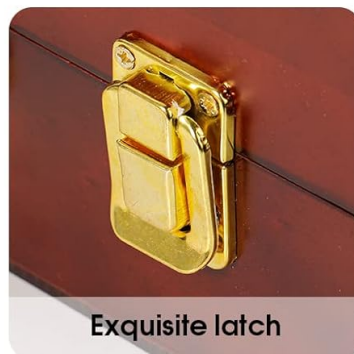 

Exquisite latch

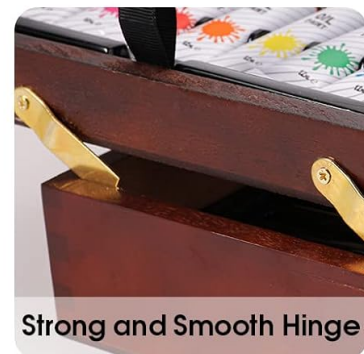 

Strong and Smooth Hinge

Image: A visual guide showcasing diverse artistic works created with the various mediums included in the VigorFun art set.

4. Maintenance and Care

Proper maintenance ensures the longevity of your art supplies and the wooden case.

Cleaning and Storage:

- **Brushes:** After using water-based paints (acrylics, watercolors), clean brushes thoroughly with water and mild soap. Reshape bristles and allow to air dry. For oil paints, clean with appropriate brush cleaner or mineral spirits.
- **Paints:** Ensure caps are tightly secured on paint tubes to prevent drying. Store in a cool, dry place.
- **Pastels & Pencils:** Keep oil pastels and colored pencils organized in their designated trays to prevent breakage and smudging. Use the sharpener as needed for pencils.
- **Wooden Case:** Wipe the wooden case with a soft, dry cloth to remove dust or smudges. Avoid exposing it to excessive moisture or direct sunlight to preserve the wood finish.

Unleash
your
Creativity



Image: The closed wooden art set, illustrating its compact and durable design, complete with dimensions and close-ups of its features.

5. Troubleshooting

Encountering issues with your art supplies can be frustrating. Here are some common problems and their solutions:

- **Dried Acrylic Paint:** If acrylic paint in tubes has slightly dried, try adding a few drops of water and mixing. For severely dried paint, it may need to be replaced. Always ensure caps are tightly sealed.
- **Hardened Brushes:** If brushes have hardened due to dried paint, soak them in warm water (for acrylics/watercolors) or appropriate solvent (for oils) for a few hours, then gently work out the paint.
- **Pencil Breakage:** Excessive pressure during sharpening or use can cause pencil leads to break. Use the included sharpener carefully and avoid dropping pencils.
- **Oil Pastel Crumbling:** If oil pastels crumble, they may be too cold. Warm them slightly in your hands before use.

6. Specifications

Feature	Detail
---------	--------

Brand	VigorFun
Model Number	VIACASBN21083+2-1
Age Range	Kid, Adult
Color	Brown
Material	Wood
Number of Pieces	85
Paint Type	Acrylic, Oil, Watercolor
Item Weight	6.16 pounds (2.8 Kilograms)
Package Dimensions	15.31 x 10.43 x 4.13 inches

7. Safety Information

Please observe the following safety guidelines when using the VigorFun Deluxe Wooden Art Set:

- **Age Recommendation:** This product is recommended for ages 8 and up. Adult supervision is advised, especially for younger users.
- **Small Components:** The set contains small components which may present a choking hazard for children under 3 years of age.
- **Sharp Edges:** The sharpener contains functional sharp edges. Use with caution.
- **Staining:** Certain colors may stain. Protect clothing and work surfaces.
- **Ventilation:** When using oil paints or solvents (if applicable), ensure adequate ventilation.

8. Warranty and Support

For any questions, concerns, or support regarding your VigorFun Deluxe Wooden Art Set, please contact the manufacturer directly. Keep your purchase receipt for any warranty claims.