

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CASIO](#) /

› [CASIO Baby-G BGA-280 Series World Time Quartz Ladies Watch User Manual](#)

CASIO BGA-280-6ADR

CASIO Baby-G BGA-280 Series User Manual

Model: BGA-280-6ADR

INTRODUCTION

Thank you for choosing the CASIO Baby-G BGA-280 Series watch. This manual provides detailed instructions on how to use and maintain your watch. Please read this manual carefully to ensure proper operation and to get the most out of its features.



Figure 1: Front view of the BGA-280-6ADR watch. This image displays the watch's translucent pink case and strap, with a clear view of its analog hands and digital display, indicating the current time and day.

SAFETY PRECAUTIONS

To ensure safe and proper use of your watch, please observe the following precautions:

- Do not attempt to open the watch case or remove its back cover.
- Avoid exposing the watch to extreme temperatures (above 60°C or below -10°C) or direct sunlight for prolonged periods.

- Do not expose the watch to strong magnetic fields or static electricity.
- Clean the watch with a soft, dry cloth. Do not use chemical cleaners.
- The watch is water resistant up to 10 BAR. Avoid operating buttons underwater.

COMPONENT IDENTIFICATION

Familiarize yourself with the various components and buttons of your BGA-280 watch:



Figure 2: Side view of the BGA-280-6ADR watch, showing the button layout. This image clearly displays the four buttons located on the sides of the watch case, which are used for various functions and mode navigation.

Watch Components and Functions

Component	Function
A Button (Adjust)	Used to enter and exit setting modes, and to confirm settings.
B Button (Light)	Activates the LED backlight.
C Button (Mode)	Cycles through the different watch modes (Timekeeping, World Time, Stopwatch, Timer, Alarm).
D Button (Search/Forward)	Used to change settings (increase values) and for search functions in certain modes.
Digital Display	Shows time, date, and other mode-specific information.
Analog Hands	Indicate the current hour and minute.

SETUP

Setting the Home City and Time

1. In the Timekeeping Mode, hold down the **A** button for about two seconds until the city code starts to flash on the

digital display. This indicates the setting mode.

2. Press the **D** button to scroll through the city codes until your desired Home City is displayed. Refer to the World Time City Code List (not provided in this manual, refer to full Casio manual if needed).
3. Press the **C** button to cycle through the settings: City Code → DST (Daylight Saving Time) → 12/24-hour format → Seconds → Hour → Minute → Year → Month → Day → Illumination Duration → Button Tone.
4. While a setting is flashing, use the **D** button to change it. For DST, press **D** to toggle between ON and OFF.
5. After configuring all settings, press the **A** button to exit the setting mode. The watch will automatically adjust the analog hands to match the digital time.

OPERATING INSTRUCTIONS

Navigating Modes

Press the **C** button to cycle through the watch's modes in the following order:

Timekeeping Mode → World Time Mode → Stopwatch Mode → Timer Mode → Alarm Mode

Timekeeping Mode

This is the default mode, displaying the current time and date for your Home City.

- To view the current date, press the **D** button.
- To return to the time display, press the **D** button again.

World Time Mode

This mode allows you to view the current time in 48 cities (31 time zones) around the world.

1. From Timekeeping Mode, press **C** to enter World Time Mode. The city code of the currently selected World Time City will be displayed.
2. Press the **D** button to scroll through the city codes.
3. To swap your Home City and World Time City, hold down the **A** button for about three seconds.

Stopwatch Mode

The stopwatch measures elapsed time in 1/100-second units for the first 60 minutes, and 1-second units thereafter, up to 24 hours.

1. From World Time Mode, press **C** to enter Stopwatch Mode. The display will show "0'00"00".
2. Press **D** to start/stop the stopwatch.
3. While the stopwatch is stopped, press **A** to reset it to "0'00"00".

Timer Mode

The countdown timer can be set from 1 minute to 24 hours in 1-minute increments.

1. From Stopwatch Mode, press **C** to enter Timer Mode.
2. Hold down the **A** button for about two seconds until the hour setting starts to flash.
3. Use the **D** button to change the hour, then press **C** to move to the minute setting.
4. Use the **D** button to change the minute.
5. Press **A** to exit the setting mode.
6. Press **D** to start/stop the countdown timer. An alarm will sound when the countdown reaches zero.

Alarm Mode

The watch has five daily alarms and an hourly time signal.

1. From Timer Mode, press **C** to enter Alarm Mode. The alarm number (AL1, AL2, etc.) will be displayed.
2. Press **D** to cycle through the alarms (AL1 to AL5, SNZ, SIG).
3. To set an alarm, select the desired alarm (e.g., AL1) and hold down the **A** button for about two seconds until the hour setting flashes.
4. Use the **D** button to change the hour, then press **C** to move to the minute setting.
5. Use the **D** button to change the minute.
6. Press **A** to exit the setting mode.
7. To turn an alarm ON/OFF, select the alarm and press **D**. "ON" or "OFF" will appear.
8. To turn the Hourly Time Signal (SIG) ON/OFF, select SIG and press **D**.

Illumination

The watch is equipped with an LED backlight for easy reading in the dark.

- Press the **B** button to illuminate the display.
- The illumination duration can be set in the Timekeeping Mode settings (refer to "Setting the Home City and Time").

MAINTENANCE

Cleaning Your Watch

Regular cleaning helps maintain the appearance and longevity of your watch.

- Wipe the watch case and band with a soft, dry cloth to remove dirt and moisture.
- For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry.
- Do not use volatile agents like thinner, benzine, alcohol, or abrasive cleaners, as they may damage the resin components.

Water Resistance

Your BGA-280 watch is water resistant to 10 BAR (100 meters). This means it is suitable for everyday use, showering, swimming, and snorkeling. However, it is not suitable for scuba diving.

- Do not operate the watch buttons while it is wet or submerged in water.
- After exposure to saltwater, rinse the watch with fresh water and wipe it dry.
- Avoid exposing the watch to strong water pressure, such as from a high-pressure car wash.



Figure 3: Rear view of the BGA-280-6ADR watch. This image shows the stainless steel case back, where important information such as the model number and water resistance rating (10 BAR) are engraved.

TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Common Issues and Solutions

Problem	Solution
Analog hands do not match digital time.	This can happen after setting the Home City. The hands should automatically adjust. If not, refer to the full manual for manual hand alignment.
No display or dim display.	The battery may be low. Contact a CASIO service center for battery replacement.
Buttons are unresponsive.	Ensure the watch is not wet. If the issue persists, a reset may be needed (refer to full manual) or contact support.
Time is incorrect.	Check your Home City and DST settings. Re-adjust if necessary.

SPECIFICATIONS

Technical Specifications

Feature	Detail
Model Number	BGA-280-6ADR
Brand	CASIO
Movement	Quartz
Water Resistance	10 BAR (100 meters)
World Time	31 time zones (48 cities + UTC), daylight saving on/off, Home city/World time city swapping

Feature	Detail
Stopwatch	1/100-second stopwatch, Measuring capacity: 23:59'59.99", Measuring modes: Elapsed time, split time, 1st-2nd place times
Timer	Countdown timer, Measuring unit: 1 second, Countdown range: 1 minute to 24 hours (1-minute increments and 1-hour increments)
Alarms	5 daily alarms, Hourly time signal
Illumination	LED light (Super Illuminator), selectable illumination duration (1.5 seconds or 3 seconds), afterglow
Calendar	Full auto-calendar (to year 2099)
Accuracy	±30 seconds per month
Battery Life	Approx. 3 years on CR1220

WARRANTY AND SUPPORT

Your CASIO Baby-G watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical support, repairs, or further inquiries, please contact your local authorized CASIO service center or visit the official CASIO website for contact information.

- Official CASIO Website:** www.casio.com
- Customer Service:** Refer to your regional CASIO website for local contact details.

© 2024 CASIO Computer Co., Ltd. All rights reserved.

Related Documents - BGA-280-6ADR

A thumbnail image of the Casio Module 5001 Watch User Manual, showing the front cover and several pages of the manual.	<p>Casio Module 5001 Watch User Manual</p> <p>Comprehensive user manual for the Casio Module 5001 wristwatch, covering timekeeping, world time, alarms, stopwatch, timer, and settings. Includes detailed instructions on water resistance, care, and technical specifications.</p>
A thumbnail image of the Casio Module 5283 and 5332 User Manual, showing the front cover and several pages of the manual.	<p>Руководство пользователя Casio Модуль 5283, 5332</p> <p>Подробные инструкции и спецификации для часов Casio с модулями 5283 и 5332, охватывающие настройку времени, мирового времени, будильников, секундометра, таймера, водостойкости и обслуживания.</p>

	<p><u>Casio Watch Module 5283/5332 User Manual</u></p> <p>Comprehensive user manual for Casio watch modules 5283 and 5332, detailing operation, features, water resistance, and care. Covers timekeeping, world time, alarms, stopwatch, countdown timer, and analog time setting with clear instructions and diagrams.</p>
	<p><u>Casio Module 5070 Watch User Manual: BG-90, BGA-101, BGA-102, BGA-116</u></p> <p>Comprehensive user manual for Casio watches with module number 5070, covering models BG-90, BGA-101, BGA-102, and BGA-116. Learn about time setting, world time, stopwatch, timer, alarms, water resistance, and technical specifications.</p>
	<p><u>Руководство пользователя Casio Модули 5382, 5465, 5508: Функции и эксплуатация</u></p> <p>Полное руководство по эксплуатации часов Casio с модулями 5382, 5465, 5508. Узнайте о настройке времени, водостойкости, мировом времени, секундомере, будильнике и особенностях ухода.</p>
	<p><u>Руководство пользователя часов Casio BGA-130/131/132/133/134 Модуль 5194</u></p> <p>Полное руководство пользователя для часов Casio серии BGA-130, BGA-131, BGA-132, BGA-133, BGA-134 с модулем 5194. Инструкции по настройке времени, даты, мирового времени, использованию секундомера, таймера, будильника, а также информация о водозащите и технических характеристиках.</p>