

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY NH304UD Replacement Remote Control User Manual

ECONTROLLY RC-NH304UD-ECO

ECONTROLLY NH304UD Replacement Remote Control User Manual

For Magnavox TV Models: 32ME303V, 24ME405V, 32ME305V, 32ME306V and variants

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY NH304UD replacement remote control. This remote is designed to function as a direct replacement for original Magnavox TV remote controls, offering seamless operation without the need for complex programming.

2. PRODUCT OVERVIEW

The NH304UD remote control is a pre-programmed device compatible with various Magnavox TV models. It features all standard functions found on original remotes, including power, volume, channel selection, source input, and menu navigation.





Image 1: Front view of the ECONTROLLY NH304UD Replacement Remote Control. This image displays the layout of all buttons, including power, number keys, volume, channel, and navigation controls.

2.1 Compatible TV Models

This remote control is compatible with the following Magnavox TV models:

- 32ME303V
- 24ME405V
- 24ME405V/F7
- 32ME303V/F7A

- 32ME305V
- 32ME305V/F7
- 32ME306V

3. SETUP

The ECONTROLLY NH304UD remote control requires no programming. Simply install batteries, and it will be ready for use with your compatible Magnavox TV.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your Magnavox TV. Point the remote directly at the TV's infrared sensor.

4.1 Basic Functions

- **POWER ():** Turns the TV on or off.
- **SOURCE:** Cycles through available input sources (e.g., HDMI 1, HDMI 2, AV, Component).
- **VOL +/-:** Increases or decreases the volume level.
- **CH +/-:** Changes the TV channel up or down.
- **MUTE ():** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **MENU:** Accesses the TV's main menu for settings and adjustments.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigate through menu options.
- **OK:** Confirms selections in menus.
- **BACK:** Returns to the previous menu or screen.
- **INFO:** Displays information about the current program or input.
- **PIC/SOUND MODE:** Adjusts picture or sound presets.
- **FREEZE:** Pauses the current image on screen.
- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **PICTURE SIZE:** Adjusts the aspect ratio or picture size.
- **PREV.CH:** Switches to the previously viewed channel.
- **SAP:** Selects Secondary Audio Program (if available).

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Follow the battery installation steps in Section 3.1. Dispose of used batteries according to local regulations.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Remote Sensor:** Confirm the TV's remote sensor is not blocked or dirty.
- **TV Power:** Ensure the TV is plugged in and powered on.

6.2 Specific Buttons Not Working

- **Battery Level:** Low battery power can sometimes cause intermittent button functionality. Replace batteries.
- **Clean Remote:** Dust or debris under buttons can affect their operation. Gently clean the remote.

6.3 Short Operating Range

- **Replace Batteries:** Weak batteries significantly reduce the remote's effective range.
- **Environmental Factors:** Bright light sources (e.g., direct sunlight, fluorescent lights) can interfere with infrared signals.

7. SPECIFICATIONS

Feature	Detail
Model Number	RC-NH304UD-ECO
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Batteries Required	2 x AAA batteries
Connectivity Technology	Infrared (IR)
Compatible Devices	Magnavox Televisions
Special Feature	Ergonomic design

8. WARRANTY AND SUPPORT

This ECONTROLLY replacement remote control is designed for reliable performance. For any issues or inquiries, please refer to the retailer's return or exchange policy where the product was purchased. For further assistance, you may contact the manufacturer, ECONTROLLY Factory, through their official support channels if available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09BZ2HWB8>

More documents and user manuals: <https://manuals.plus/>