

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Crawl-With-Me Puppy Bello Instruction Manual

## Fisher-Price 0194735060900

# Fisher-Price Crawl-With-Me Puppy Bello Instruction Manual

Model: 0194735060900

## 1. INTRODUCTION

The Fisher-Price Crawl-With-Me Puppy Bello is an interactive electronic toy designed to encourage babies and toddlers aged 6 to 36 months to crawl and learn. This toy features realistic movements, sounds, songs, and phrases that introduce ABCs, numbers, counting, and colors through its Smart Stages technology.

Please read this instruction manual carefully before use and keep it for future reference. Ensure all packaging materials are removed before giving the toy to a child.

## 2. SAFETY INFORMATION

- Always supervise children during play.
- Inspect the toy regularly for damage. Discontinue use if any parts are broken or detached.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries responsibly according to local regulations.
- This toy is intended for floor play. Do not use on elevated surfaces where a fall could occur.

## 3. PACKAGE CONTENTS

- 1 x Fisher-Price Crawl-With-Me Puppy Bello

*Note: Batteries are not included and must be purchased separately.*

## 4. SETUP

### 4.1 Battery Installation

1. Locate the battery compartment on the underside of the puppy.
2. Using a Phillips head screwdriver (not included), loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 3 x AA (LR6) alkaline batteries (not included) into the compartment, ensuring correct polarity (+/-).

5. Replace the battery compartment cover and tighten the screw. Do not overtighten.

## 4.2 Power On/Off

Locate the power switch on the puppy's body. Slide the switch to the 'ON' position to activate the toy. Slide to 'OFF' when not in use to conserve battery life.

## 5. OPERATING INSTRUCTIONS

### 5.1 Interactive Play

The Crawl-With-Me Puppy Bello offers several ways to interact:

- **Pull the Tongue:** Gently pull the soft, colorful tongue (designed to resemble a sock) from the puppy's mouth. The puppy will wiggle its tail, bob its head, and move forward and backward, encouraging your child to crawl and chase.
- **Press the Buttons:** On the puppy's collar, there are two light-up buttons. Pressing these buttons activates over 55 songs, sounds, and phrases related to ABCs, numbers, counting, and colors.



Image: A baby interacting with the Crawl-With-Me Puppy by pulling its tongue.



Image: A baby pressing the interactive buttons on the puppy's collar.

## 5.2 Smart Stages Technology

The Crawl-With-Me Puppy Bello features Smart Stages technology, allowing the learning content to adapt as your child grows. There are three distinct play levels:

- **Level 1: Explore (6+ Months)** - Introduces first words and sounds that spark curiosity.
- **Level 2: Encourage (12+ Months)** - Prompts children through questions and simple directions.
- **Level 3: Pretend (18+ Months)** - Engages children in imaginative play and role-playing.

To change the Smart Stages level, locate the slider switch on the puppy's back, near the collar. Slide it to select Level 1, 2, or 3.



Image: Detail of the Smart Stages selector switch and learning buttons.

## 6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth and mild soap. Do not immerse the toy in water. Allow to air dry completely before storage or next use.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight. Remove batteries if the toy will not be used for an extended period.
- **Battery Care:** Always remove exhausted batteries promptly. Do not dispose of batteries in fire.

## 7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                              | Possible Cause                               | Solution                                                                                |
|--------------------------------------|----------------------------------------------|-----------------------------------------------------------------------------------------|
| Toy does not turn on or respond.     | Batteries are dead or incorrectly installed. | Check battery polarity. Replace with fresh AA (LR6) alkaline batteries.                 |
| Sounds are distorted or too quiet.   | Low battery power.                           | Replace with fresh AA (LR6) alkaline batteries.                                         |
| Toy moves erratically or not at all. | Obstruction or low battery power.            | Ensure no objects are blocking the wheels or moving parts. Replace batteries if needed. |

## 8. SPECIFICATIONS

| Feature                        | Detail                                                                                                            |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Brand                          | Fisher-Price                                                                                                      |
| Model Number                   | 0194735060900                                                                                                     |
| UPC                            | 194735060900                                                                                                      |
| Product Dimensions (L x W x H) | 15 x 26 x 21 cm (approximately 5.9 x 10.2 x 8.3 inches)                                                           |
| Item Weight                    | 964 Grams (approximately 2.13 lbs)                                                                                |
| Material Type                  | Plastic                                                                                                           |
| Manufacturer Recommended Age   | 6 to 36 months                                                                                                    |
| Power Source                   | Battery (3 x AA alkaline batteries, not included)                                                                 |
| Educational Objective          | Develop basic learning skills in alphabet, counting, and colors. Enhance motor skills, balance, and coordination. |
| Components Included            | 1 piece                                                                                                           |



Image: Product dimensions of the Crawl-With-Me Puppy.

## 9. WARRANTY AND SUPPORT

For warranty information or customer support, please contact the manufacturer, Mattel. Specific warranty terms may vary by region.

### Manufacturer Contact Information:

- **Manufacturer:** Mattel
- **Address:** Solmsstr. 83, 60486 Frankfurt, Germany
- **Email:** [info.de@mattel.com](mailto:info.de@mattel.com)

Please visit the official Fisher-Price website or Mattel's customer service portal for the most up-to-date support resources and contact details in your region.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B09BZFS75G>

More documents and user manuals: <https://manuals.plus/>