

[Manuals.plus](#) /

› [VISWIN](#) /

› VISWIN 63-inch Adjustable Wooden Tripod Display Easel Instruction Manual

VISWIN B09BZHHRHP

VISWIN 63-inch Adjustable Wooden Tripod Display Easel Instruction Manual

Model: B09BZHHRHP

INTRODUCTION

Thank you for choosing the VISWIN 63-inch Adjustable Wooden Tripod Display Easel. This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your new easel. Please read this manual thoroughly before use to ensure proper setup and safe operation. Keep this manual for future reference.

1. SETUP AND ASSEMBLY

1.1 Unpacking and Parts Identification

Carefully unpack all components from the packaging. Verify that all parts listed in the included parts list are present and undamaged. The easel comes with numbered parts, wing nuts, bolts, and all necessary hardware for assembly.

Easy Assembly

Comes with detailed assembly instructions and all necessary hardware.



Image 1.1: All components and hardware included for assembly.

1.2 Assembly Instructions

Follow the step-by-step instructions provided in the package for a hassle-free assembly. Ensure all connections are secure before use.

- Attach the three legs to the top pivot point using the provided hardware.
- Secure the adjustable holder bar to the front two legs at your desired height using the wing nuts and bolts.
- Connect the stability chain between the rear leg and the front leg assembly to prevent over-extension and collapse.

Your browser does not support the video tag.

Video 1.1: Official VISWIN video demonstrating the assembly and features of the tripod display easel.

2. OPERATING INSTRUCTIONS

2.1 Adjusting the Easel

The easel features an adjustable holder to accommodate various sizes of artwork or signs. Loosen the wing nuts on the holder bar, slide it to the desired height, and then tighten the wing nuts to secure it. The rear leg can be adjusted to change the angle of the easel, with the stability chain preventing it from spreading too wide.

Light-weight Display Easel

- Loading-weight not more than 10 lbs

The Effects of Placing Signs of Different Sizes:



Image 2.1: Examples of the easel displaying signs of various dimensions, demonstrating its adjustable nature.

2.2 Displaying Items

Place your artwork, sign, poster, or painting onto the adjustable holder. Ensure the item is centered and stable. The 1 1/2-inch deep tray provides a secure ledge to keep your board safe. The easel is designed to hold items up to 10 lbs.



Sturdy hardware

Twist the nut to adjust the angle.

1 1/2" deep Tray

Holder ledge keeps board safe.




Anti-slip rubber foot

Keep easel stable on the surface.

Image 2.2: Detailed view of the easel's sturdy hardware, deep tray, and anti-slip rubber feet for secure display.

2.3 Portability and Storage

The easel is lightweight (approximately 1.98 pounds) and designed for easy disassembly, carrying, and storage. To store, simply loosen the connections, fold the legs together, and secure them. This makes it convenient for transport to various events or for compact storage when not in use.

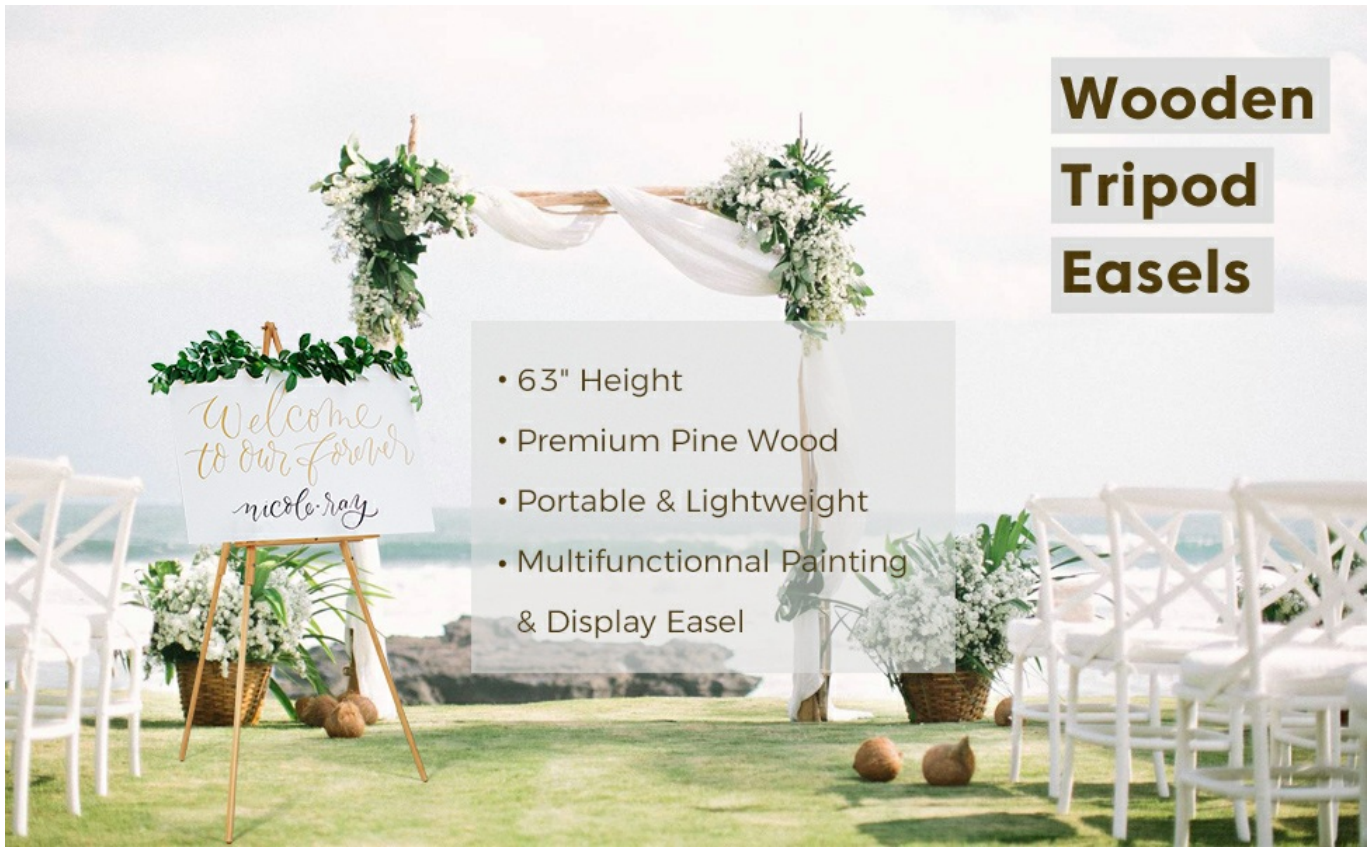

Wooden Tripod Easels

- 63" Height
- Premium Pine Wood
- Portable & Lightweight
- Multifunctional Painting & Display Easel

Image 2.3: The easel in an outdoor wedding setting, highlighting its versatility for various events.

3. MAINTENANCE

To ensure the longevity and optimal performance of your VISWIN easel, follow these maintenance guidelines:

- **Cleaning:** Wipe the wooden surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and mild soap, then dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Hardware:** Periodically check all nuts, bolts, and the stability chain to ensure they are tight and secure. Tighten any loose hardware as needed.
- **Storage:** When not in use, store the easel in a dry environment away from extreme temperatures and direct sunlight to prevent wood warping or damage.
- **Inspection:** Regularly inspect the easel for any signs of wear, cracks, or damage to the wood or hardware. Discontinue use if significant damage is found and contact customer support.

4. TROUBLESHOOTING

If you encounter any issues with your easel, refer to the following troubleshooting tips:

Problem	Possible Cause	Solution
Easel feels unstable or wobbly.	Loose hardware; uneven surface; stability chain not engaged.	Ensure all wing nuts and bolts are tightened. Place the easel on a flat, level surface. Verify the stability chain is properly connected and taut.
Item slides off the holder.	Holder not adjusted correctly; item too heavy or too thin.	Adjust the holder to securely cradle the item. Ensure the item's weight does not exceed 10 lbs. The holder tray is 1 1/2 inches deep for stability.

Problem	Possible Cause	Solution
Easel legs spread too far apart.	Stability chain not connected or broken.	Ensure the stability chain is properly attached between the rear leg and the front leg assembly. If broken, contact customer support for a replacement.

5. SPECIFICATIONS

Feature	Detail
Brand	VISWIN
Model Number	B09BZHHRHP
Color	Natural
Material	New Zealand Pine Wood
Product Dimensions (D x W x H)	34"D x 25"W x 63"H (86.36 cm D x 63.5 cm W x 160 cm H)
Item Weight	1.98 Pounds (0.9 kg)
Easel Type	Single Mast Easel, Tripod
Assembly Required	Yes
Maximum Load Weight	10 lbs (4.5 kg)
UPC	765381498449

6. WARRANTY AND SUPPORT

VISWIN is committed to providing a pleasant shopping experience and meeting your artistic needs. We offer **lifetime warranty** on this product. If the product you purchased from VISWIN is defective upon receipt or during normal use due to non-external reasons, please do not hesitate to contact us immediately. Our professional service team is available to assist you.

Contact Information:

For any questions, concerns, or warranty claims, please reach out to VISWIN customer support through the retailer where you purchased the product or visit the official VISWIN store online.



Image 6.1: VISWIN's commitment to customer satisfaction and lifetime warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

