Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- WEELMOTION /
- WEELMOTION Hoverboard User Manual

WEELMOTION WM-11

WEELMOTION Hoverboard User Manual

Model: WM-11

INTRODUCTION

Thank you for choosing the WEELMOTION Hoverboard. This self-balancing scooter is designed to provide an enjoyable and efficient personal transportation experience. Featuring dual motors, LED lights, and a built-in music speaker, it offers a blend of performance and entertainment. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your hoverboard. Please read it thoroughly before first use.

SAFETY INFORMATION

Your safety is paramount. The WEELMOTION Hoverboard is **UL 2272 Certified**, ensuring it has passed rigorous electrical and fire safety tests. Adhere to all local laws and regulations regarding hoverboard use.

- Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Do not ride under the influence of alcohol or drugs.
- Avoid riding on uneven surfaces, steep inclines (max 12°), or in wet conditions.
- The hoverboard supports a minimum weight of 40 lbs and a maximum weight of 220 lbs.
- · Keep fingers, hair, and clothing away from moving parts.
- · Do not attempt to modify the hoverboard.
- The hoverboard incorporates multiple security measures such as Overheat Protection, Short Circuit Protection, Fire Protection Shell, and Over-speed alert. Pay attention to any alerts.



Image: Diagram illustrating the internal components and safety features of the WEELMOTION Hoverboard, including dual motors, maximum weight capacity, and climb angle.

PRODUCT OVERVIEW

The WEELMOTION Hoverboard is a 6.5-inch self-balancing scooter equipped with advanced features for a smooth and interactive ride.



Image: A blue WEELMOTION Hoverboard showcasing its sleek design, LED front lights, and shining wheels.

Key Components:

- Foot Pads: Pressure-sensitive pads for control.
- Wheels: 6.5-inch solid shining tires.
- LED Front Lights: Illuminate the path and enhance visibility.
- Power Indicator: Displays battery level.
- Bluetooth Speaker: For audio playback from connected devices.
- Charging Port: For connecting the charger.
- Power Button: To turn the hoverboard on/off.

SETUP

1. Initial Charging

Before first use, fully charge your hoverboard. The included lithium-ion battery requires approximately 2-3 hours for a full charge. The power indicator lights will change to indicate a full charge.

- Connect the charger to the charging port on the hoverboard.
- Plug the charger into a standard electrical outlet.
- Do not overcharge the battery. Disconnect the charger once charging is complete.



Image: A graphic representing the hoverboard's 36V battery, 10km riding range, UL 2272 certification, and overheat protection, emphasizing long-lasting joy.

2. Power On/Off

Press the power button located on the hoverboard to turn it on. The indicator lights will illuminate. Press and hold the power button again to turn it off.

OPERATING INSTRUCTIONS

1. Riding Basics

The WEELMOTION Hoverboard features a built-in gyroscope stabilization system and "no-fall" technology, making it easier for beginners.

- · Place one foot firmly on a foot pad.
- Quickly step up with your other foot onto the second foot pad. Maintain balance.
- To move forward, gently lean forward. To move backward, gently lean backward.
- To turn, apply slight pressure with one foot. For example, to turn left, press down slightly with your right foot.
- To stop, return to an upright position.
- To dismount, step off one foot at a time, preferably backward.



Image: A person riding the blue WEELMOTION Hoverboard on a paved path, demonstrating its use in an outdoor setting.

2. Bluetooth Speaker Operation

The integrated Bluetooth speaker allows you to enjoy music while riding.

- Ensure the hoverboard is powered on.
- Enable Bluetooth on your mobile device.
- Search for "WEELMOTION" or a similar device name in your device's Bluetooth settings.
- Pair with the hoverboard. Once connected, you can play audio through the hoverboard's speaker.



Image: A blue WEELMOTION Hoverboard with glowing LED lights and an overlay indicating "WIRELESS SPEAKER," highlighting its audio capabilities.

MAINTENANCE

1. Cleaning

Wipe the hoverboard with a damp cloth after each use. Do not use harsh chemicals or abrasive cleaners. Do not rinse with water directly.

2. Battery Care and Storage

- Store the hoverboard in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to about 50% every 2-3 months to prolong its lifespan.
- Do not store the hoverboard with a completely depleted battery.

3. Tire Inspection

Periodically check the 6.5-inch solid tires for any signs of wear or damage. While solid tires are durable, ensure no debris is lodged in them.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hoverboard not turning on	Low battery; Power button not pressed correctly	Charge the hoverboard; Ensure power button is pressed firmly
Lights flashing/Beeping sound	Over-speed alert; Overheat protection; Sensor malfunction	Reduce speed; Allow hoverboard to cool down; Recalibrate sensors (refer to manufacturer's specific recalibration steps if available)
Difficulty balancing/Unresponsive	Improper calibration; Weight limit exceeded/not met	Recalibrate the hoverboard; Ensure rider weight is within 40-220 lbs range
Bluetooth not connecting	Bluetooth not enabled on device; Hoverboard not in pairing mode; Device too far	Ensure Bluetooth is on; Restart hoverboard and device; Keep device close to hoverboard

SPECIFICATIONS

Feature	Detail
Model Number	WM-11
Motor Power	Dual 200W brushless motors (Total 400W)
Wheel Size	6.5 inches (solid tires)
Max Speed	Up to 10 km/hr (6.21 Miles per Hour)
Range per Charge	8 - 10 kms (actual range may vary)
Battery Type	Lithium-Ion (1 included)
Max Climbing Angle	12°
Supported Weight	Min 40 lbs - Max 220 lbs
Product Dimensions	59.5 x 18.5 x 18 cm
Item Weight	6.8 kg (7 Kilograms)
Frame Material	Fireproof Plastic or Composite
Safety Certification	UL 2272 Certified
Included Components	Hoverboard, Charger, Bag

WARRANTY AND SUPPORT

WEELMOTION is committed to providing quality products and customer satisfaction. For warranty information, technical support, or any inquiries, please contact our customer service team.

- Manufacturer: WEELMOTION
- Place of Business: support@weelmotion.co
- Please retain your proof of purchase for warranty claims.



Image: The WEELMOTION brand logo with the slogan "PERFECT GIFT CHOICE STYLE AND SAFETY COMES TO ONE," emphasizing the product's appeal and safety.

© 2025 WEELMOTION. All rights reserved.

Related Documents - WM-11



WEELMOTION Hoverboard D02/WM-01/CHIC D01 User Manual and Safety Guide

Comprehensive user manual for the WEELMOTION Hoverboard models D02, WM-01, and CHIC D01. Covers safe operation, maintenance, features, troubleshooting, and warranty information.



OVE Decors Breeze Pro 32 Shower Enclosure Installation Manual

Comprehensive installation guide for the OVE Decors Breeze Pro 32 shower enclosure, detailing steps for assembly, installation, and maintenance.



WM-E Term® Használati Útmutató - Konfigurációs Szoftver és Modem Beállítások

Fedezze fel a WM-E Term® konfigurációs szoftver és a WM modemek részletes használati útmutatóját. Ismerje meg a telepítést, csatlakoztatást, konfigurációt, firmware frissítést és a különböző modemmodellek beállításait.



Ove Decors Misty Walls Shower Wall Installation Manual

Comprehensive installation guide for Ove Decors Misty Walls alcove shower panels, detailing steps, parts, tools, and safety precautions for a successful installation. Includes dimensions and product specifications.



BOYUEDA S3-11 Electric Scooter Instruction Manual

This instruction manual provides comprehensive details on the operation, safety, maintenance, and troubleshooting of the BOYUEDA S3-11 high-end folding electric scooter.