

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Rowenta](#) /

› [Rowenta X-Plorer Serie 45 Robot Vacuum Cleaner User Manual](#)

## Rowenta RR8227WH

# Rowenta X-Plorer Serie 45 Robot Vacuum Cleaner User Manual

Model: RR8227WH

## 1. PRODUCT OVERVIEW

---

The Rowenta X-Plorer Serie 45 is an advanced robot vacuum cleaner designed for efficient and convenient floor cleaning. It features intelligent navigation, multiple cleaning modes, and app connectivity for a seamless user experience.



The Rowenta X-Plorer Serie 45 Robot Vacuum Cleaner, a white circular device with a minimalist design, shown alongside a smartphone displaying the Rowenta app interface.

## 2. SETUP AND INITIAL USE

---

### 2.1 Unboxing and Placement

Carefully remove all components from the packaging. Place the charging base against a wall in an open area, ensuring there are no obstacles within 1 meter to the sides and 2 meters in front. Connect the power adapter to the charging base and a power outlet.

### 2.2 Charging the Robot

Before first use, fully charge the robot vacuum. Place the robot onto the charging base, ensuring the charging contacts align. The indicator lights on the robot will show the charging status. A full charge typically takes several hours.



The robot vacuum is shown automatically returning to its charging station, with a graphical representation of a charging battery indicating its power status.

### 2.3 App Connectivity

For enhanced control and features, download the free Rowenta X-Plorer app from your smartphone's app store (available on iOS and Android). Follow the in-app instructions to connect your robot vacuum. The app allows for secure connectivity and data protection, with data stored in Europe.

# ALL-FLOORS CLEANING INCLUDING CARPETS AND RUGS



A hand holds a smartphone displaying the Rowenta app, with the robot vacuum visible in the background. An icon representing secure cloud data storage is also shown, emphasizing data protection.

## 3. OPERATING THE ROBOT VACUUM

---

### 3.1 Navigation and Obstacle Avoidance

The X-Plorer Serie 45 utilizes a combination of infrared sensors, anti-shock sensors, and anti-fall sensors to navigate your home safely. These sensors help the robot avoid obstacles and prevent falls down stairs or ledges.

# SAFE AND EASY AUTOMATIC NAVIGATION



The robot vacuum is depicted navigating near a staircase, with blue light beams illustrating its anti-fall sensors detecting the edge, ensuring safe and easy automatic navigation.

## 3.2 Cleaning Modes

The robot offers three distinct cleaning modes to suit various needs:

- **Random Mode:** For general cleaning of open areas.
- **Edge Mode:** Specifically designed to clean along walls and furniture edges.
- **Spot Mode:** Focuses on a specific small area for intensive cleaning.

# 3 CLEANING MODES



The robot vacuum is shown on a dark floor, with three diagrams above it illustrating different cleaning patterns: a zig-zag pattern, a spiral pattern for spot cleaning, and an edge-following pattern, representing its 3 cleaning modes.

## 3.3 All-Floor Cleaning

The Rowenta X-Plorer Serie 45 is capable of cleaning all types of hard floors and can also climb onto carpets and rugs up to 15 mm in height, ensuring comprehensive cleaning throughout your home.

# SAFE CONNECTIVITY WITH DATA PROTECTION



The robot vacuum transitions from a hard floor to a white rug, demonstrating its ability to clean all floor types, including carpets and rugs up to 15 mm in height.

## 4. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

### 4.1 Emptying the Dustbin

The dustbin should be emptied after each cleaning cycle or when full. To empty, open the top cover of the robot, remove the dustbin, and dispose of the collected debris. Reinsert the dustbin securely.



The robot vacuum is shown with its top cover open, revealing the removable dustbin, which is being lifted out for emptying.

## 4.2 Cleaning the Turbo Brush

The robot is equipped with a powerful Turbo Brush for effective cleaning. Periodically remove and clean the main brush to remove tangled hair and debris. Use the cleaning tool provided to cut and remove any wrapped hair.

# EFFICIENT CLEANING WITH TURBO BRUSH



An underside view of the robot vacuum highlights its efficient cleaning mechanism, including the central turbo brush and two side brushes, with blue lines indicating airflow and suction.

## 4.3 Cleaning Sensors and Side Brushes

Wipe the infrared and anti-fall sensors with a clean, dry cloth to ensure they function correctly. Check the side brushes for any tangled hair or debris and clean them as needed. If the side brushes are worn, they can be replaced.

## 5. TROUBLESHOOTING

---

If you encounter issues with your Rowenta X-Plorer Serie 45, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not start or respond to programming.	Low battery; programming error; power button not pressed.	Ensure robot is fully charged. Re-check programming settings in the app. Press the power button firmly.

Problem	Possible Cause	Solution
Robot stops constantly or malfunctions.	Dustbin full; brushes tangled; sensors dirty; trapped by obstacles.	Empty dustbin. Clean main and side brushes. Wipe all sensors. Clear obstacles from the robot's path.
Poor cleaning performance.	Dustbin full; filter clogged; brushes worn or dirty.	Empty dustbin and clean filter. Clean or replace main and side brushes.
Battery or sensor errors.	Internal component issue.	Try restarting the robot. If the issue persists, contact customer support.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	Rowenta
Model Number	RR8227
Color	White
Dimensions (L x W x H)	31.5 x 31.5 x 8 cm
Weight	3.45 Kilograms
Noise Level	65 dB
Battery Type	Lithium-ion (1 included)
Battery Life	Up to 150 minutes
Filter Type	HEPA
Controller Type	Google Assistant, Alexa (via app)
Special Features	High-performance autonomy, Secure connectivity, Easy and safe navigation, 3-in-1 cleaning, Adapted cleaning for your needs

## 7. WARRANTY AND SUPPORT

---

### 7.1 Warranty Information

The Rowenta X-Plorer Serie 45 comes with a 2-year warranty. Additionally, Rowenta commits to 15-year repairability at a fair price, supported by a network of 6200 approved repairers worldwide.



A circular badge indicating 'REPAIRABLE AT FAIR PRICE' and '15 YEARS' with a screwdriver icon, signifying Rowenta's commitment to long-term product repairability.

## 7.2 Customer Support

For further assistance, technical support, or warranty claims, please visit the official Rowenta website or contact their customer service. You can also find helpful resources and FAQs within the Rowenta X-Ploer smartphone application.