



Manuals.plus /

› Stuebaker /

› Stuebaker Walkabout II Personal Stereo Cassette Player SB3675 User Manual

## Stuebaker SB3675

# Stuebaker Walkabout II Personal Stereo Cassette Player with AM/FM Radio and Built-in Speaker (Model SB3675) User Manual

Your guide to operating and maintaining your Stuebaker Walkabout II.

## INTRODUCTION

Thank you for purchasing the Stuebaker Walkabout II Personal Stereo Cassette Player with AM/FM Radio and Built-in Speaker. This device allows you to enjoy your favorite cassette tapes and radio stations on the go. Please read this manual carefully before using the unit to ensure proper operation and to maximize your listening experience.

## PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Stuebaker Walkabout II Personal Stereo Cassette Player
- Stereo Earphones
- Detachable Belt Clip
- User Manual (this document)
- 2 "AA" Batteries (pre-installed or included separately)

## PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Walkabout II.



*Image 1: Front view of the Studebaker Walkabout II. This image displays the main speaker grille on the left, the Studebaker brand name, and the circular radio tuning dial on the right with AM/FM frequencies.*



*Image 2: Top view of the Studebaker Walkabout II. This image shows the top panel with various control buttons for cassette playback (Play, Stop, Fast Forward, Rewind), a volume control knob, a function switch (Tape/FM/AM/Off), and the retractable antenna. A microphone input is also visible.*

## Controls and Functions:

- **Cassette Controls:** Play, Stop, Fast Forward, Rewind.
- **Volume Control (VOL):** Adjusts the audio output level.
- **Function Switch (TAPE/FM/AM/OFF):** Selects between cassette playback, FM radio, AM radio, or powers off the unit.
- **Tuning Dial:** Used to select AM or FM radio frequencies.
- **Built-in Speaker:** For audio playback without headphones.
- **Headphone Jack:** For private listening with stereo earphones.
- **Built-in Microphone:** For recording audio onto a cassette tape.
- **Mic Jack:** External microphone input.
- **Antenna:** Extendable for improved radio reception.

## SETUP

### Powering the Unit (Battery Installation)

The Walkabout II operates on two (2) "AA" batteries (included). An AC power adapter (not included) can also be used.

1. Locate the battery compartment on the back of the unit.
2. Slide open the battery compartment cover.
3. Insert two "AA" batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.

4. Close the battery compartment cover securely.

*Note: Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.*

## Attaching the Belt Clip

The detachable belt clip allows for convenient portability.

1. Align the belt clip with the designated slots on the back of the unit.
2. Slide the clip firmly into place until it clicks, securing it to the player.
3. To remove, press the release tab (if present) and slide the clip off.

## OPERATING INSTRUCTIONS

---

### Playing a Cassette Tape

1. Ensure the unit is powered on (batteries inserted or AC adapter connected).
2. Open the cassette compartment door.
3. Insert a cassette tape with the exposed tape facing upwards.
4. Close the cassette compartment door firmly.
5. Set the Function Switch to "TAPE".
6. Press the **PLAY** button to begin playback.
7. Adjust the **VOL** (Volume) knob to your desired listening level.
8. Use the **FAST FORWARD** or **REWIND** buttons to navigate through the tape.
9. Press the **STOP** button to end playback. The auto-stop feature will also stop playback at the end of the tape.

### Listening to AM/FM Radio

1. Ensure the unit is powered on.
2. Set the Function Switch to "FM" for FM radio or "AM" for AM radio.
3. Extend the telescopic antenna for optimal FM reception. For AM reception, rotate the unit for best signal.
4. Rotate the **TUNING DIAL** to select your desired radio station.
5. Adjust the **VOL** (Volume) knob to your desired listening level.

### Recording to Cassette Tape

The Walkabout II supports recording from the built-in microphone, an external microphone (via Mic Jack), or directly from the AM/FM radio.

1. Insert a blank or recordable cassette tape into the compartment.
2. **To record from Built-in Microphone:** Set the Function Switch to "TAPE". Press the **RECORD** button (usually combined with PLAY, often red). Speak clearly into the built-in microphone.
3. **To record from External Microphone:** Connect an external microphone to the **MIC JACK**. Set the Function Switch to "TAPE". Press the **RECORD** button.
4. **To record from Radio:** Set the Function Switch to "FM" or "AM" and tune to your desired station. Then, press the **RECORD** button. The unit will automatically switch to record mode from the radio source.
5. Press the **STOP** button to end recording.

**Note:** Ensure the cassette tape has its record protection tabs intact if you wish to record over existing content. If the tabs are broken, the tape cannot be recorded on.

## Using Earphones

For private listening, connect the included stereo earphones (or any standard 3.5mm headphones) to the **HEADPHONE JACK**. The built-in speaker will automatically mute when earphones are connected.

## MAINTENANCE

### Cleaning the Unit

- Wipe the exterior of the unit with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents.
- Periodically clean the cassette head, pinch roller, and capstan with a cotton swab lightly moistened with isopropyl alcohol. This helps maintain sound quality and prevents tape damage.
- Keep the cassette compartment free of dust and debris.

### Storage

When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are dead or incorrectly inserted. AC adapter not connected (if used).	Replace batteries with new ones, ensuring correct polarity. Check AC adapter connection.
No sound from speaker/earphones.	Volume too low. Function switch set incorrectly. Earphones not fully plugged in.	Increase volume. Set function switch to TAPE, FM, or AM. Ensure earphones are fully inserted.
Poor radio reception.	Antenna not extended (FM). Unit position (AM). Weak signal area.	Extend the telescopic antenna fully. Rotate the unit for better AM reception. Try moving to a different location.
Cassette tape not playing or sound is distorted.	Tape is damaged. Cassette heads are dirty. Auto-stop engaged.	Try a different tape. Clean the cassette heads, pinch roller, and capstan. Ensure tape is not at its end.
Cannot record on tape.	Record protection tab is broken. Function switch not set to TAPE for mic recording.	Cover the broken record protection tab with adhesive tape. Ensure function switch is on TAPE for microphone recording or on AM/FM for radio recording.

## SPECIFICATIONS

Feature	Detail
Model Number	SB3675
Power Source	2 x "AA" Batteries (included) or AC Power Adapter (not included)
Radio Bands	AM/FM Stereo
Cassette Features	Playback, Record, Auto-Stop, Rewind, Fast Forward
Recording Sources	Built-in Microphone, External Mic Jack, AM/FM Radio
Connectivity	3.5mm Headphone Jack, Mic Jack
Speaker	Built-in Speaker
Dimensions (L x W x H)	1.81" x 4.88" x 3.65" (4.6 cm x 12.4 cm x 9.3 cm)
Weight	11.7 ounces (331 grams)
Manufacturer	Spectra Merchandising International, Inc.

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Studebaker website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or inquiries, please contact Studebaker customer service.