



Manuals.plus /

› KODAK /

› KODAK Luma Projector Remote Control User Manual

KODAK LUMA 350/450

KODAK Luma Projector Remote Control User Manual

MODELS: LUMA 350, LUMA 400, LUMA 450

Introduction

This document provides comprehensive instructions for the KODAK Luma Projector Remote Control, designed for use with KODAK Luma 350, 400, and 450 series projectors. Please read this manual carefully before use to ensure proper setup and operation.



An overhead view of the white KODAK Luma Projector Remote Control. The remote features a power button, home button, a circular navigation pad with a central select button, menu button, mouse mode button, back button, and volume up/down buttons.

Setup

1. Battery Installation

- The remote control requires one **CR2025** coin cell battery.
- Locate the battery compartment on the back of the remote control.
- Open the compartment, insert the CR2025 battery with the positive (+) side facing up.
- Close the battery compartment securely.

2. Pairing the Remote Control

To establish a connection between the remote control and your KODAK Luma projector, follow these steps:

1. Ensure your KODAK Luma projector is powered on and displaying the home screen.
2. Point the remote control towards the projector.
3. Simultaneously press and hold the **Volume Down (-)** and **Volume Up (+)** buttons on the remote for approximately three (3) seconds.

4. A volume bar will appear on the projector screen, indicating successful pairing.
5. If pairing fails, ensure the battery is correctly installed and repeat the steps.

Operating Instructions

The remote control provides intuitive access to your projector's functions. Below are the primary button functions:

- **Power Button** (*Red circle with line icon*): Turns the projector on or off.
- **Home Button** (*House icon*): Returns to the projector's main home screen.
- **Navigation Pad** (*Circular pad with arrows*): Use Up, Down, Left, and Right arrows to navigate menus and content.
- **Select Button** (*Center of Navigation Pad*): Confirms selections or opens items.
- **Menu/Options Button** (*Three horizontal lines icon*): Accesses contextual menus or options.
- **Mouse Mode Button** (*Mouse icon*): Activates or deactivates mouse pointer mode for easier navigation.
- **Back/Return Button** (*Curved arrow icon*): Returns to the previous screen or menu.
- **Volume Down Button** (*Speaker icon with minus*): Decreases the audio volume.
- **Volume Up Button** (*Speaker icon with plus*): Increases the audio volume.

Maintenance

Battery Replacement

When the remote control's performance degrades or it stops responding, it is time to replace the CR2025 battery. Follow the battery installation steps outlined in the "Setup" section. Dispose of used batteries responsibly according to local regulations.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Troubleshooting

Remote Not Responding

- **Check Battery:** Ensure the CR2025 battery is correctly installed and has sufficient charge. Replace if necessary.
- **Line of Sight:** The remote control uses infrared (IR) technology. Ensure there is a clear, unobstructed line of sight between the remote and the projector's IR receiver.
- **Re-pair the Remote:** If the remote becomes unpaired or unresponsive, follow the "Pairing the Remote Control" steps in the Setup section to re-establish the connection.

Limited Range

- Ensure the remote is within the maximum operating range of 10 meters (approximately 33 feet) from the projector.
- Check for any physical obstructions between the remote and the projector that might be blocking the infrared signal.

Specifications

- **Brand:** KODAK
- **Model Name:** KODAK LUMA 350/450 Projectors (Remote Control)
- **Compatible Devices:** KODAK Luma 350, KODAK Luma 400, KODAK Luma 450 Projectors
- **Connectivity Technology:** Infrared (IR)
- **Battery Type:** 1 x CR2025 Coin Cell
- **Maximum Range:** 10 Meters (approximately 33 feet)
- **Item Weight:** 0.11 Pounds (approximately 50 grams)
- **Button Quantity:** 5 (Note: This refers to primary function buttons; the remote features additional navigation and control buttons as detailed in the Operating Instructions.)

Warranty Information

This product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your purchase or contact KODAK customer support directly.

Customer Support

For further assistance, technical support, or to inquire about replacement parts, please visit the official KODAK support website or contact their customer service department. You can also find more information and products at the official KODAK Store on Amazon.