

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [TOZO](#) /

> [TOZO G1 Wireless Gaming Earbuds User Manual](#)

TOZO G1

TOZO G1 Wireless Gaming Earbuds User Manual

Model: G1 | Brand: TOZO

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your TOZO G1 Wireless Gaming Earbuds. Please read thoroughly before use to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

- TOZO G1 Wireless Earbuds
- Wireless Charging Case
- Eartips (multiple sizes for comfortable fit)
- USB A to USB C Charging Cable
- User Manual (this document)

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case to ensure maximum battery life.



Image: The TOZO G1 charging case connected via a USB-C cable, indicating charging status with an illuminated logo.

1. Connect the USB A to USB C charging cable to the charging port on the case.
2. Connect the other end to a compatible USB power source.
3. The LED indicator on the case will show the charging status. A full charge provides up to 6 hours of playback for the earbuds and an additional 30 hours with the charging case.

2. Pairing with Your Device

Follow these steps to pair your earbuds with a Bluetooth-enabled device.



Image: TOZO G1 earbuds shown next to a smartphone displaying Bluetooth pairing options, with the earbuds emitting a green light.

1. Open the charging case. The earbuds will automatically enter pairing mode (indicated by flashing LED lights).
2. On your device (smartphone, tablet, laptop, gaming console), enable Bluetooth.
3. Search for "TOZO G1" in the list of available devices and select it to connect.
4. Once connected, the earbud LED lights will turn off or show a steady light.

OPERATING INSTRUCTIONS

1. Game & Music Dual Mode



Image: A split image showing the TOZO G1 earbuds in "Game Mode" with a gaming scene and "Music Mode" with a person playing guitar, highlighting the dual functionality.

The TOZO G1 earbuds feature a dual mode for optimized audio performance:

- **Game Mode:** Provides 45ms ultra-low latency for synchronized audio and video, enhancing gaming with

accurate sound detection (footsteps, gunfire).

- **Music Mode:** Delivers high-fidelity sound with powerful bass (16Hz-20kHz), mellow midrange, and clear treble for an immersive listening experience.

2. Smart Touch Control

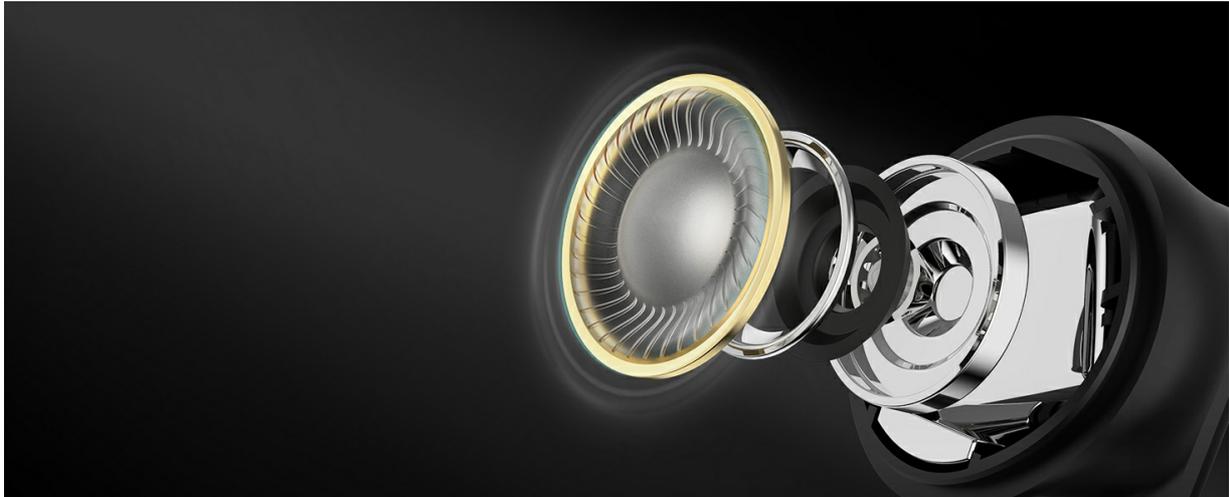


Image: A diagram illustrating the touch control functions for the left and right TOZO G1 earbuds, including play/pause, track skipping, volume control, call management, and voice assistant/game mode activation.

Control your earbuds with simple touch gestures:

Action	Left Earbud	Right Earbud
Play/Pause	Single Tap (X1)	Single Tap (X1)
Previous/Next Song	Double Tap (X2) - Previous	Double Tap (X2) - Next
Answer/Hang Up Call	Single Tap (X1)	Single Tap (X1)
Reject Call	Hold for 2 seconds	Hold for 2 seconds
Volume Down/Up	Hold for 2 seconds - Volume Down	Hold for 2 seconds - Volume Up
Voice Assistant/Game Mode	Triple Tap (X3) - Voice Assistant	Triple Tap (X3) - Game Mode

MAINTENANCE

- Regularly clean the earbuds and charging case with a soft, dry cloth.
- Avoid exposing the earbuds to extreme temperatures or liquids. While waterproof, prolonged submersion is not recommended.
- Store in the charging case when not in use to protect and keep them charged.

TROUBLESHOOTING

Earbuds not pairing:

Ensure both earbuds are in the charging case and the case is open. Check your device's Bluetooth settings and try reconnecting. If issues persist, reset the earbuds (refer to the full user manual for specific reset instructions).

No sound or low volume:

Check the volume levels on both your device and the earbuds. Ensure earbuds are properly seated in your ears. Verify the earbuds are connected to the correct device.

Charging issues:

Ensure the charging cable is securely connected to both the case and the power source. Try a different USB-C cable or power adapter. Clean the charging contacts on the earbuds and inside the case.

SPECIFICATIONS

Feature	Detail
Model Name	G1
Connectivity Technology	Wireless (Bluetooth 5.3)
Audio Latency	45 Milliseconds (Game Mode)
Battery Life (Earbuds)	Up to 6 Hours
Total Playtime (with Charging Case)	Up to 30 Hours
Water Resistance Level	Waterproof (IPX5)
Control Method	Touch
Included Components	TOZO G1 Wireless Earbuds, Wireless Charging Case, Eartips, USB A to USB C Charging Cable, User Manual

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the TOZO G1 Wireless Gaming Earbuds and their features.

WARRANTY & SUPPORT

TOZO products come with a standard manufacturer's warranty. For detailed warranty information, product support, or to contact customer service, please visit the official TOZO website or refer to the warranty card included in your product packaging.

Official Website: www.tozostore.com