

ELEHOT-Store HZ-9457F

ELEHOT-Store HZ-9457F Portable Bluetooth Speaker User Manual

Model: HZ-9457F

1. INTRODUCTION

Thank you for choosing the ELEHOT-Store HZ-9457F Portable Bluetooth Speaker. This speaker combines high-quality audio with dynamic LED lighting, offering a versatile listening experience. It features Bluetooth connectivity, True Wireless Stereo (TWS) pairing, and multiple playback options including TF/SD card, USB drive, and AUX input. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

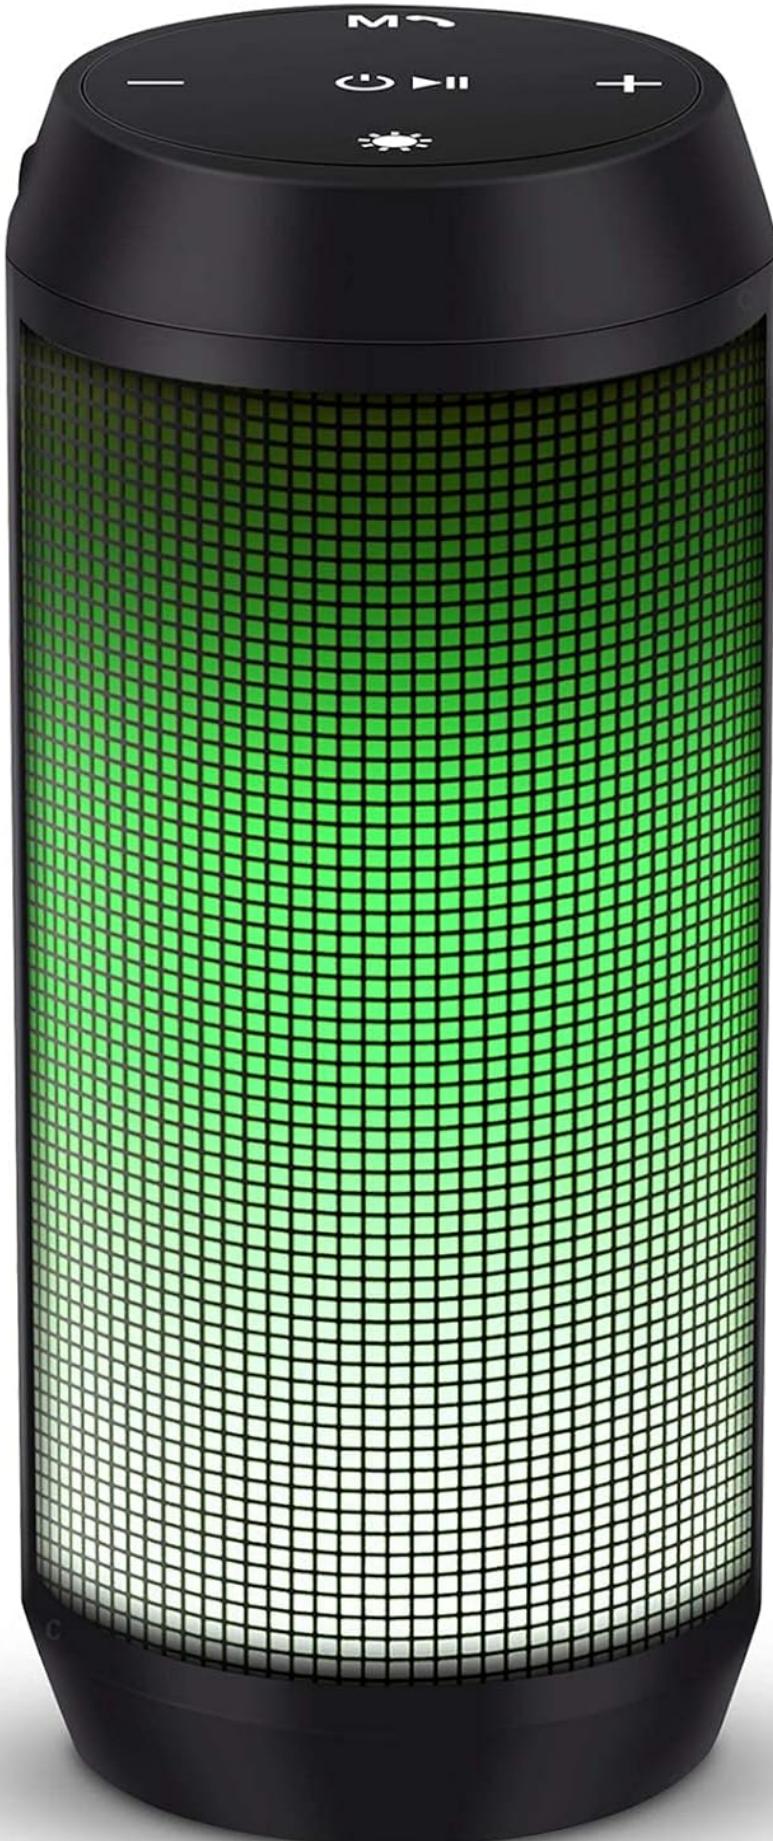


Image 1.1: ELEHOT-Store HZ-9457F Portable Bluetooth Speaker

The ELEHOT-Store HZ-9457F is designed for portability and ease of use, making it suitable for various environments, from home use to outdoor gatherings. Its robust design and multi-functional capabilities ensure your music is always with you.



**Take your music and speaker
wherever you go**

Image 1.2: Speaker demonstrating portability

2. PACKAGE CONTENTS

Please check the package for the following items:

- ELEHOT-Store HZ-9457F Portable Bluetooth Speaker
- USB Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls:

Multi-Functional Speaker



Image 3.1: Speaker Ports and Controls

3.1. Control Buttons and Ports

- **Power Button (M):** Long press to power on/off. Short press to switch modes (Bluetooth, TF/SD, USB, AUX).
- **Play/Pause Button (▶||):** Play or pause music. Answer/end calls.
- **Volume Down (-) / Previous Track:** Short press for previous track. Long press to decrease volume.
- **Volume Up (+) / Next Track:** Short press for next track. Long press to increase volume.
- **Light Mode Button (*):** Short press to cycle through LED light modes.
- **USB Port:** For USB drive playback.
- **Micro USB Port:** For charging the speaker.
- **TF/SD Card Slot:** For TF/SD card playback.
- **AUX-in Port:** For wired audio connection.

4. SETUP

4.1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the Micro USB port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status (specific indicator behavior may vary by unit, refer to product packaging if available).

4.2. Power On/Off

- **To Power On:** Long press the Power button (M) until you hear an audible prompt or the LED lights illuminate.
- **To Power Off:** Long press the Power button (M) again until the speaker powers down.

5. OPERATING INSTRUCTIONS

5.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, short press the Power button (M) to cycle modes until you hear a Bluetooth pairing prompt.
2. Enable Bluetooth on your device (smartphone, tablet, computer).
3. Search for available Bluetooth devices and select "HZ-9457F" from the list.
4. Once paired, you will hear a confirmation sound, and the speaker's LED indicator will typically show a steady blue light.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

5.2. True Wireless Stereo (TWS) Pairing

To achieve a more immersive stereo sound, you can pair two HZ-9457F speakers together:

True Wireless Stereo Pairing



Enjoy 360 ° Surround-Sound



Image 5.1: True Wireless Stereo Pairing

1. Ensure both HZ-9457F speakers are powered on and in Bluetooth pairing mode (not yet connected to any device).
2. On one of the speakers (this will become the master speaker), long press the Play/Pause button (▶ ||) for approximately 3-5 seconds until you hear a pairing tone.
3. The two speakers will automatically connect to each other. You will hear a confirmation sound once TWS pairing is successful.
4. Now, connect your device to the master speaker via Bluetooth as described in section 5.1. The device will only show one "HZ-9457F" to connect to.
5. Both speakers will now play audio in stereo.

5.3. Music Playback

- **Bluetooth Mode:** After successful pairing, play music from your connected device.
- **TF/SD Card Mode:** Insert a TF/SD card (up to 32GB, FAT32 format) into the TF/SD card slot. The speaker will automatically switch to TF/SD card mode and begin playback. (Note: Insert the card after powering on the speaker for proper recognition).
- **USB Drive Mode:** Insert a USB drive (up to 32GB, FAT32 format) into the USB port. The speaker will automatically switch to USB mode and begin playback. (Note: Insert the drive after powering on the

speaker for proper recognition).

- **AUX-in Mode:** Connect an audio device to the AUX-in port using a 3.5mm audio cable (not included). Short press the Power button (M) to switch to AUX mode.

5.4. Hands-Free Calling

When connected via Bluetooth to your smartphone, the speaker can be used for hands-free calls:

- **Answer Call:** Short press the Play/Pause button (▶ ||).
- **End Call:** Short press the Play/Pause button (▶ ||) during a call.
- **Reject Call:** Long press the Play/Pause button (▶ ||) when an incoming call rings.

5.5. LED Light Modes

The speaker features dynamic LED lighting with multiple modes:



Image 5.2: Various LED Light Modes

- Short press the Light Mode button (*) to cycle through the available light modes.
- Modes include various single colors (e.g., blue, red, green, orange), multi-color gradients, and a mode where lights react to the rhythm of the music.

- To turn off the lights, continue pressing the Light Mode button until the lights are off.

The lights beating with the rhythm of music



Image 5.3: Lights reacting to music rhythm

5.6. Volume and Track Control

- **Volume Up:** Long press the Volume Up (+) button.
- **Volume Down:** Long press the Volume Down (-) button.
- **Next Track:** Short press the Volume Up (+) button.
- **Previous Track:** Short press the Volume Down (-) button.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.
- **Water Resistance:** While the product may offer some resistance to splashes, it is not fully waterproof. Avoid submerging the speaker in water or exposing it to heavy rain.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Bluetooth disabled on device; device too far.	Ensure speaker is in Bluetooth mode. Enable Bluetooth on your device. Move device closer to speaker (within 10 meters).
No sound.	Volume too low; incorrect mode; device not playing.	Increase speaker and device volume. Ensure correct playback mode (Bluetooth, TF/SD, USB, AUX). Check if music is playing on the source device.
TF/SD card or USB drive not recognized.	Card/drive inserted before power on; incorrect format; corrupted files.	Power on speaker first, then insert card/drive. Ensure card/drive is FAT32 format. Try with another card/drive.
TWS pairing fails.	Speakers already connected to a device; incorrect pairing procedure.	Ensure both speakers are disconnected from any device. Follow TWS pairing steps carefully (Section 5.2).

8. SPECIFICATIONS

Feature	Detail
Brand	ELEHOT-Store
Model Name	HZ-9457F
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Special Features	Bluetooth, LED Lights
Recommended Use	For computer, portable audio devices
Compatible Devices	Desktop computer, smartphones, tablets
Surround Sound Channel Configuration	2.0
Color	Green
Included Components	Speaker, USB cable, manual
Product Dimensions (L x W x H)	9 x 9 x 18 cm
Item Weight	510 Grams
Impedance	4 ohms

Feature	Detail
Waterproof	False (Not fully waterproof)
Maximum Range	10 Meters
Control Method	Touch
Speaker Size	52 Millimeters
Power Source	Battery Powered (1 A battery included)
Power Output	10 Watts
Max Speaker Output Power	10 Watts
Frequency Response	200 Hz
Audio Output Mode	Stereo
Input Voltage	3.7 Volts
Mounting Type	Tabletop
Material	Plastic

9. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel if needed.
- Keep the speaker away from medical devices (e.g., pacemakers) as it contains magnets.
- Dispose of the battery and speaker according to local regulations. Do not dispose of in household waste.
- Do not use the speaker while driving or cycling, as it may distract you and cause an accident.
- Listening at high volume levels for extended periods can cause hearing damage.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the ELEHOT-Store customer service directly. Please retain your proof of purchase for any warranty claims.

Related Documents - HZ-9457F

 <p>ELEHOT-Store MGS-8801 Kneading Shoulder Massager</p> <p>Instructions in 5 languages Before operating this unit, please read this instructions completely and follow them step by step.</p>	<p>ELEHOT-Store MGS-8801 Kneading Shoulder Massager User Manual</p> <p>User manual for the ELEHOT-Store MGS-8801 Kneading Shoulder Massager, providing safety warnings, operating instructions, parts list, technical data, and troubleshooting.</p>
 <p>Cressi-sub 1st stage MC7</p>	<p>Cressi-sub 1st Stage MC7 Regulators Repair and Maintenance Manual</p> <p>Comprehensive service and maintenance manual for Cressi-sub 1st Stage MC7 regulators, detailing repair procedures, parts, special tools, and troubleshooting for trained technicians.</p>
 <p>elehot HZ-9457 Bluetooth Speaker</p> <p>Instructions in 5 languages Before operating this unit, please read this instructions completely and follow them step by step.</p>	<p>Elehot HZ-9457 Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the Elehot HZ-9457 Bluetooth Speaker, covering setup, features, troubleshooting, and specifications. Learn how to connect, use FM radio, and manage battery life.</p>
 <p>How To Do A Factory Reset of the Square D VFD Take the power on, wait a few seconds then turn the code 0100, then the 0 in this key and the code 0100 again. The code 0100 must be entered in the first 5 seconds, then the code 0100 again in the next 5 seconds, then the code 0100 again in the next 5 seconds. Then turn the power off and on again for the last 5 seconds.</p>	<p>Square D VFD Factory Reset and Setup Guide</p> <p>Step-by-step instructions for performing a factory reset on a Square D Variable Frequency Drive (VFD), including recommended settings for common parameters like speed, frequency, and voltage.</p>
 <p>UNIVERS TIBET Comment utiliser le set de diapasons 7 Chakras</p>	<p>Guide d'Utilisation du Set de Diapasons 7 Chakras Univers Tibet</p> <p>Apprenez à utiliser votre set de diapasons 7 Chakras pour le rééquilibrage énergétique, la méditation et le bien-être. Guide complet avec fréquences, bienfaits et précautions.</p>
 <p>EIEHOT-Store HZ - 9 4 5 7 S P E A K E R</p> <p>Instructions in 5 languages Before operating this unit, please read this instructions completely and follow them step by step.</p>	<p>EIEHOT-Store HZ-9457 Speaker User Manual</p> <p>Comprehensive user manual for the EIEHOT-Store HZ-9457 Bluetooth speaker, covering setup, button functions, True Wireless Stereo connection, mobile phone pairing, troubleshooting, and technical specifications. Available in English, French, Spanish, Italian, and German.</p>