

[Manuals.plus](#) /

› [Pisichen](#) /

› Pisichen 17.3 inch Portable Monitor (Model P-173bj-US) Instruction Manual

Pisichen P-173bj-US

Pisichen 17.3 inch Portable Monitor Instruction Manual

Model: P-173bj-US

1. PRODUCT OVERVIEW

The Pisichen 17.3 inch Portable Monitor is designed to extend your display capabilities, offering a 1600x900 resolution for various applications, including laptops, gaming consoles, and media devices. Its compact design allows for portability and ease of use.

Package Contents

- Pisichen 17.3 inch Portable Monitor
- DC Power Supply
- HDMI Cable
- Metal Bracket (Stand)
- User's Manual

Ancillary products



Monitor (front)



Metal bracket



DC power supply



Monitor (rear)



HDMI cable



manual

Figure 1: Included Ancillary Products

2. SETUP INSTRUCTIONS

Follow these steps to set up your portable monitor:

1. **Power Connection:** Connect the provided DC power supply to the monitor's DC input port. Ensure the monitor receives adequate power (a 5V/2A cable or DC12V is required). The monitor will power on automatically when connected to power.
2. **Device Connection:** Connect your source device (laptop, PC, game console, etc.) to the monitor using an HDMI cable. The monitor features two HDMI input ports (HDMI1, HDMI2).
3. **External Power for Source Device (if needed):** If your source device has low power, the monitor may not boot or function correctly. In such cases, ensure your source device is also adequately powered separately.
4. **VESA Mounting (Optional):** For VESA mounting, use M4 screws with a 75x75mm pattern.

Rich interface connection more possibilities

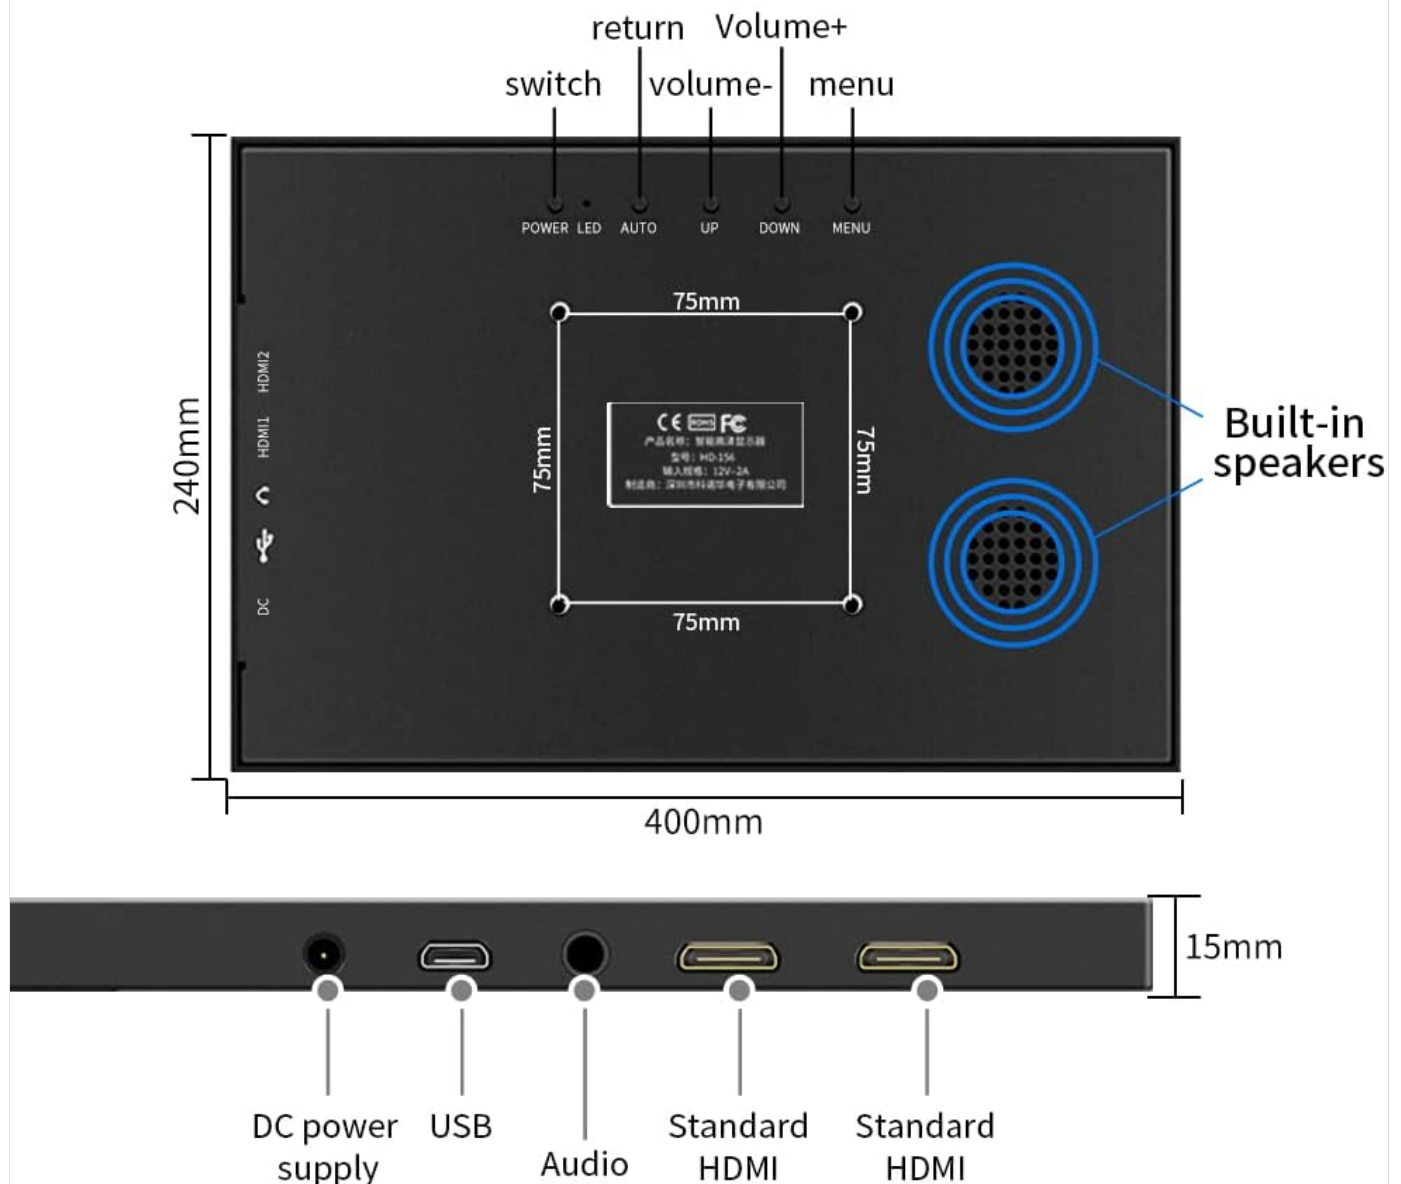


Figure 2: Monitor Back Panel and Ports

3. OPERATING INSTRUCTIONS

Display Modes

The monitor supports multiple display modes when connected to a compatible device:

- **Copy Method:** Duplicates the content of your primary screen.
- **Extended Mode:** Extends your desktop, allowing for more screen space.
- **Monitoring Only:** Displays content only on the portable monitor, with the primary screen turned off.

Display mode

Multiple display modes to meet different needs



Figure 3: Multiple Display Modes

Compatibility

This portable monitor is compatible with a wide range of devices that feature an HDMI output, including:

- Laptops and PCs (Windows 7/8/10, Mac OS, Linux machines)
- Gaming Consoles (Xbox One S, Xbox One, PS4, PS3, Xbox 360, Nintendo Switch)
- Raspberry Pi
- Streaming Media Players/TV Boxes
- DSLR Cameras

Game consoles can be played anywhere



Figure 4: Gaming Console Compatibility

Monitor Controls

The monitor features control buttons on the back panel for navigation and adjustments:

- **POWER:** Turns the monitor on/off.
- **LED:** Power indicator light.
- **AUTO:** Automatic image adjustment.
- **UP/DOWN:** Navigation buttons for menu options, also control volume.
- **MENU:** Accesses the On-Screen Display (OSD) menu for settings like brightness, contrast, color, and input source selection.

4. MAINTENANCE

To ensure the longevity and optimal performance of your monitor, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Avoid using harsh chemicals or abrasive materials.
- **Cleaning the Casing:** Use a soft, dry cloth to clean the monitor's casing.
- **Storage:** When not in use, store the monitor in a cool, dry place, away from direct sunlight and extreme temperatures. If transporting, use appropriate protective packaging.
- **Avoid Liquids:** Do not spray liquids directly onto the monitor.

5. TROUBLESHOOTING

If you encounter issues with your Pisichen portable monitor, refer to the following common troubleshooting steps:

- **No Power:**
 - Ensure the DC power supply is securely connected to both the monitor and a working power outlet.
 - Verify that the power adapter is providing the correct voltage (12V) and current (5V/2A).
- **No Signal:**
 - Check that the HDMI cable is firmly connected to both the monitor and your source device.
 - Confirm that your source device is powered on and outputting a signal.
 - Use the monitor's MENU button to ensure the correct input source (HDMI1 or HDMI2) is selected.
 - If connecting to a laptop, ensure the display output settings are configured correctly (e.g., extended or duplicate display).
- **Monitor Does Not Boot (Source Device Low Power):**
 - If your source device (e.g., some laptops or mini PCs) is running on low battery or insufficient power, it may not provide enough power to the monitor to initiate. Power the monitor separately using its dedicated DC power supply.
- **Image Quality Issues:**
 - Adjust brightness, contrast, and color settings through the monitor's OSD menu.
 - Ensure the resolution on your source device is set to 1600x900 for optimal display.

6. SPECIFICATIONS

Feature	Specification
Screen Size	17.3 inches
Resolution	1600 x 900
Panel Type	TN
Contrast Ratio	800:1
Brightness	300 cd/m²
Aspect Ratio	16:9
Response Time	5ms
Color Gamut	72% NTSC

Speakers	Built-in two 1.5W cavity speakers
Interfaces	2x HDMI Input, 1x Headphone Jack, 1x DC Input (12V), 1x 5V USB Input
Shell Material	Aluminum alloy metal
VESA Mount	M4 (75x75mm)
Item Weight	3.63 pounds
Package Dimensions	17.04 x 11.54 x 2.6 inches

7. WARRANTY AND SUPPORT

Pisichen is committed to providing a satisfying shopping experience. For any questions, concerns, or warranty inquiries regarding your portable monitor, please contact Pisichen's After-sales Service Group.

Please refer to your purchase documentation or the official Pisichen website for specific warranty terms and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09C1XDZH6>

More documents and user manuals: <https://manuals.plus/>