

Smoby 310503

Smoby 310503 Tefal Hand Mixer Instruction Manual

Model: 310503

1. INTRODUCTION

This manual provides essential information for the safe and proper use of your Smoby 310503 Tefal Hand Mixer. This product is a mechanical toy designed to replicate a real hand mixer, offering an engaging play experience for children.

Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- **Recommended Age:** This toy is suitable for children aged 3 years and up.
- **Adult Supervision:** Adult supervision is recommended during play.
- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years due to potential choking hazards.
- **Intended Use:** This product is a toy and is not intended for actual food preparation.
- **Cleaning:** Refer to the "Maintenance and Care" section for cleaning instructions.

3. PRODUCT OVERVIEW

The Smoby 310503 Tefal Hand Mixer is a realistic toy replica designed for imaginative play. It features a mechanical function that simulates the rotation of beaters when a button is pressed.



Figure 1: The Smoby 310503 Tefal Hand Mixer, featuring a black body and white beaters.



Figure 2: A child's hands demonstrating the use of the Smoby Tefal Hand Mixer with a play bowl.



Figure 3: Detailed view of the Smoby Tefal Hand Mixer, highlighting the push button for activating the mechanical beater rotation.

4. SETUP

1. **Unboxing:** Carefully remove the Smoby 310503 Tefal Hand Mixer from its packaging.
2. **Inspect Components:** Verify that all parts are present and undamaged. The package should contain one hand mixer with attached beaters.
3. **Preparation for Play:** The toy is ready for use directly out of the box. No assembly or batteries are required.

5. OPERATING INSTRUCTIONS

The Smoby 310503 Tefal Hand Mixer operates mechanically, requiring no batteries or external power source.

1. **Hold the Mixer:** Grasp the handle of the hand mixer firmly.
2. **Activate Beaters:** Locate the push button on the top of the mixer. Press and hold this button to make the dough hooks rotate.
3. **Simulate Mixing:** Use the rotating beaters in a play bowl to simulate mixing ingredients.
4. **Stop Rotation:** Release the push button to stop the rotation of the dough hooks.

6. MAINTENANCE AND CARE

- **Cleaning:** The hand mixer can be wiped clean with a damp cloth. According to product specifications, it is also indicated as dishwasher safe. If using a dishwasher, place it on the top rack and use a mild detergent.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the toy for any signs of wear or damage. Discontinue use if any damage is observed.

7. TROUBLESHOOTING

This mechanical toy has a simple design, and issues are rare. If you encounter a problem, consider the following:

- **Beaters Not Rotating:** Ensure the push button is fully depressed. The rotation is mechanical and directly linked to the button press.
- **Stiff Operation:** If the button or beaters feel stiff, ensure no foreign objects are obstructing the mechanism. Do not force the mechanism.

 
8. SPECIFICATIONS

Brand	Smoby
Model Number	310503
Product Dimensions (L x W x H)	4.33 x 1.97 x 6.69 inches (11 x 5 x 17 cm)
Item Weight	5.6 ounces
Controls Type	Push Button (Mechanical)
Special Feature	Mechanical Beater Rotation
Recommended Age	3 years and up
Dishwasher Safe	Yes (Top Rack Recommended)
GTIN (Global Trade Item Number)	03032163105039
ASIN	B09C2363SP

9. WARRANTY AND SUPPORT


Specific warranty information for the Smoby 310503 Tefal Hand Mixer is not provided within this manual. For details regarding warranty coverage, returns, or product support, please refer to the retailer's policy or contact Smoby Toys directly.
Manufacturer: Smoby Toys

Related Documents - 310503

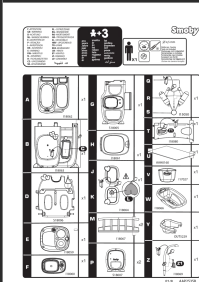


[Smoby Baby Nurse Large Doll's Play Centre Assembly Instructions](#)

 Detailed step-by-step assembly guide for the Smoby Baby Nurse Large Doll's Play Centre, including part identification and safety warnings. This manual helps users assemble the toy safely and correctly.

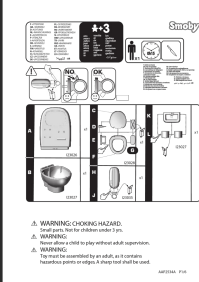


[Smoby Baby Nurse Toilet Assembly Instructions and Safety Guide](#)

 Comprehensive assembly instructions and safety warnings for the Smoby Baby Nurse Toilet toy. Learn how to assemble the play toilet with clear steps and component identification.

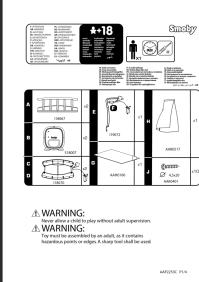


[Smoby Bercelonnette Assembly Instructions and Safety Guide](#)

 Detailed assembly instructions and safety information for the Smoby Bercelonnette toy. Includes part identification, step-by-step assembly guides, and important warnings for safe use.

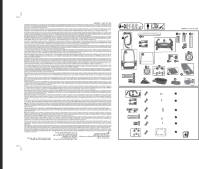

[Smoby Pushchair + Pram Assembly Instructions](#)

 Step-by-step guide for assembling the Smoby Pushchair + Pram (Model 03291X0/15). Includes important safety information, part identification, and assembly procedures.

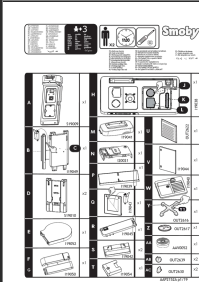

[Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area User Manual](#)

Comprehensive user manual for the Smoby 7600312303 Chef's Kitchen 2-in-1 with Dining Area. This guide provides detailed assembly instructions, safety warnings, and usage information for this children's play kitchen.



[Smoby Playhouse Accessories & Configuration Guide - Floor Slabs and Modular Sets](#)

Explore Smoby's range of playhouses and discover how to configure them using modular floor slabs (Ref 810907) and various accessory sets. Find the right combination for your Smoby garden house.