

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [momcozy](#) /

› [Momcozy M21FWDB03 White Noise Machine User Manual](#)

momcozy M21FWDB03

Momcozy M21FWDB03 White Noise Machine User Manual

Model: M21FWDB03

1. INTRODUCTION

Thank you for choosing the Momcozy M21FWDB03 White Noise Machine. This device is designed to create a peaceful and soothing environment for sleep, relaxation, and focus, suitable for babies, children, and adults. It features a wide range of high-fidelity sounds, a customizable night light, and smart control via a dedicated mobile application.



Image 1: Momcozy M21FWDB03 White Noise Machine with smartphone showing app interface.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions before use and retain for future reference.

- Use the device with caution to avoid any risk of electric shock.
- Keep the device out of reach of children as it is not designed as a toy.
- Do not expose the device to water or excessive moisture.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if service is required.
- Use only the power cable provided with the device.

3. PACKAGE CONTENTS

- Momcozy M21FWDB03 White Noise Machine

- USB Power Cable (Type-C or Micro USB)
- User Manual

4. PRODUCT OVERVIEW

The Momcozy M21FWDB03 features intuitive controls and a sleek design. Familiarize yourself with the device's components:

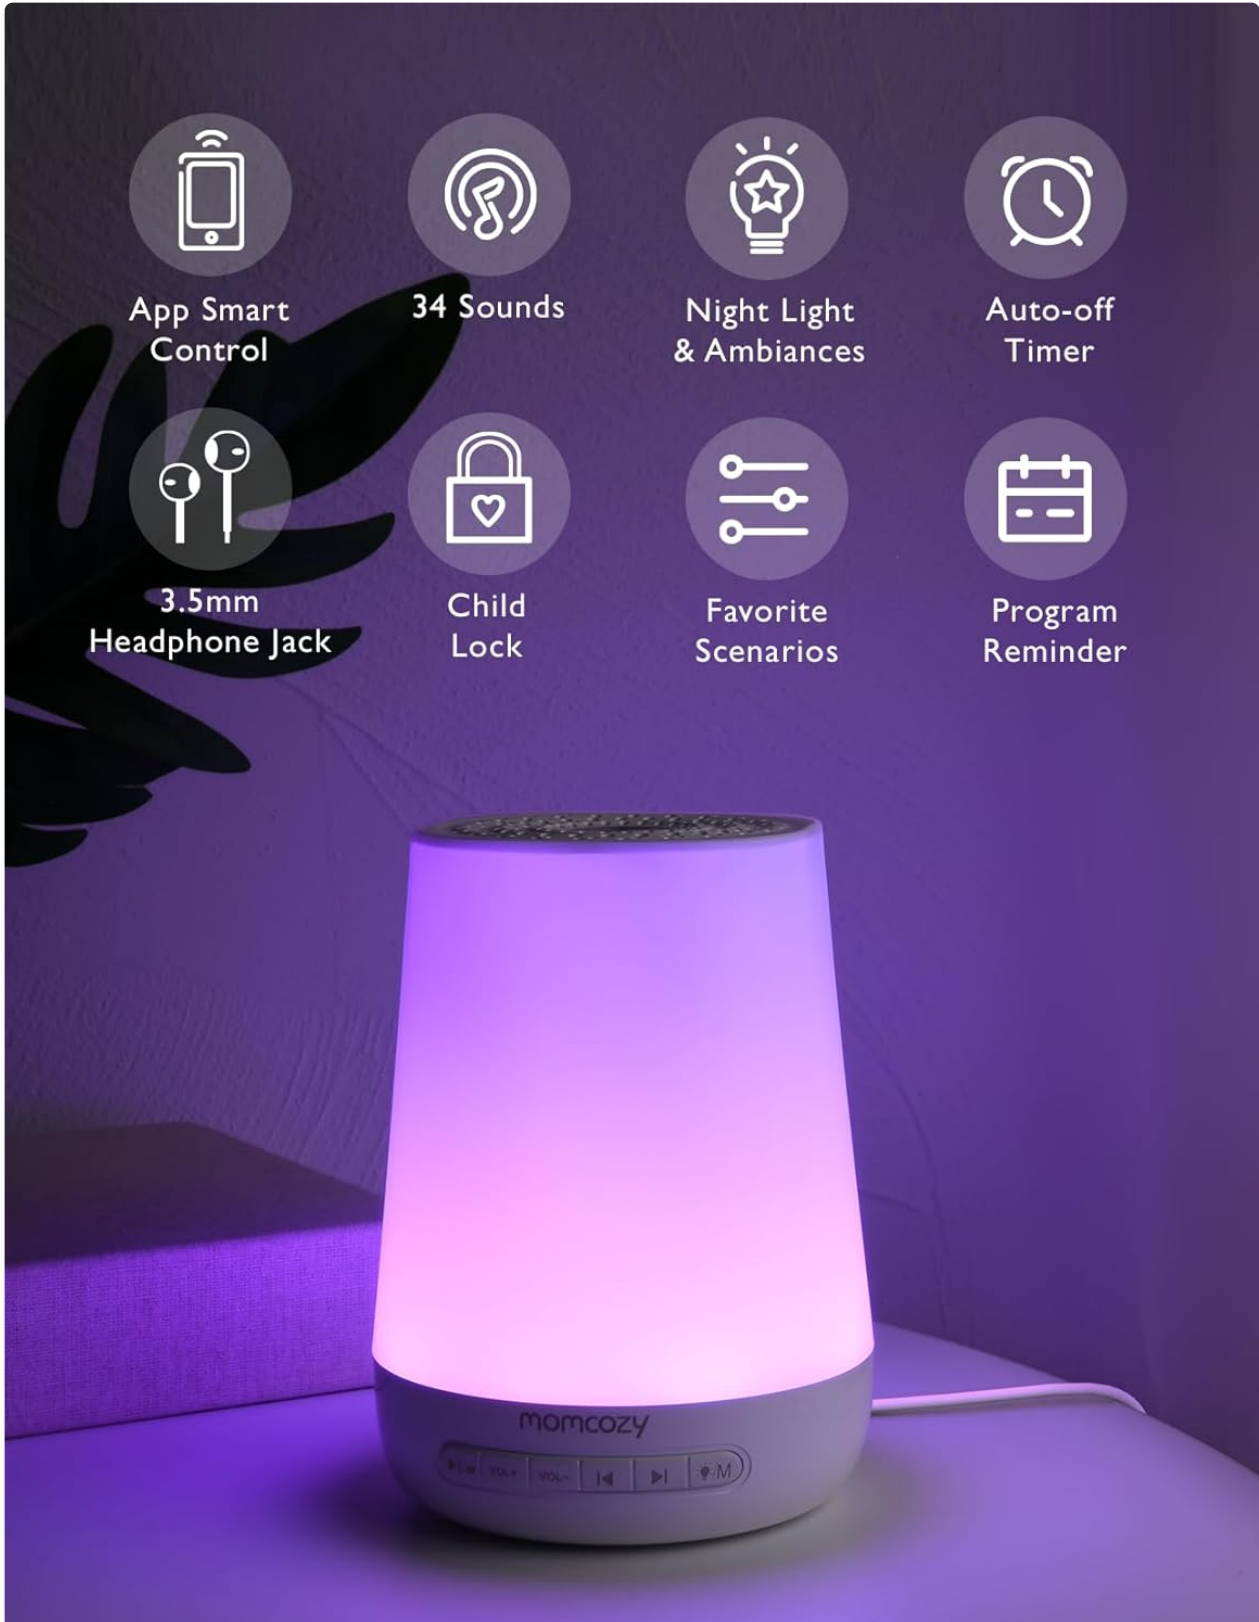


Image 2: Front view of the Momcozy M21FWDB03 showing control buttons.

- **Top Surface:** Touch-sensitive area for light control (tap to adjust brightness, long press for color change).
- **Front Panel Buttons:**
 - Play/Pause Button
 - Volume Up (+)
 - Volume Down (-)
 - Previous Sound
 - Next Sound
 - Mode/Timer Button (M)
- **Rear Panel:** Power port (USB Type-C or Micro USB).



Image 3: Visual representation of key features including App Smart Control, 34 Sounds, Night Light & Ambiances, Auto-off Timer, 3.5mm Headphone Jack, Child Lock, Favorite Scenarios, and Program Reminder.

5. SETUP

5.1 Power Connection

1. Connect the provided USB power cable to the power port on the rear of the device.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
3. The device will power on automatically or can be turned on by pressing the Play/Pause button.

5.2 App Download and Wi-Fi Connection

To unlock the full potential of your Momcozy White Noise Machine, download the companion app and connect it to your device.

1. Ensure your smartphone is connected to a 2.4 GHz Wi-Fi network. (5 GHz networks are not supported for initial setup).
2. Download the "Tuya Smart" app from your mobile app store (App Store for iOS, Google Play for Android). You can search for "Tuya Smart" or scan the QR code provided in the app's instructions.

3. Open the app and follow the on-screen instructions to register or log in to your account.
4. In the app, tap "Add Device" or the "+" icon. Select "Others" then "Others (BLE)" to add the device.
5. On the Momcozy device, long-press the "M" (Mode/Timer) button until the indicator light blinks blue, indicating it's in APP pairing mode.
6. Confirm the indicator is blinking in the app and proceed. Enter your 2.4 GHz Wi-Fi password when prompted.
7. The app will connect to the device. Once connected, the indicator light will stop blinking, and the device will appear in your app.

If the connection fails, please ensure:

- You have correctly entered the Wi-Fi password.
- Your router is connected to the internet and the Wi-Fi signal is functioning.
- Your white noise machine, router, and mobile phone are sufficiently close to ensure a strong signal strength.
- Turn off the white noise machine, then turn it back on and follow the previous steps to reconfigure the network.

Your browser does not support the video tag.

Video 1: Instructions on how to connect the Momcozy White Noise Machine (DB03) to your phone via the app.

6. OPERATING INSTRUCTIONS (MANUAL CONTROLS)

6.1 Power On/Off

Press the **Play/Pause** button to turn the device on or off.

6.2 Volume Adjustment

Press the **VOL+** button to increase the volume. Press the **VOL-** button to decrease the volume.

6.3 Sound Selection

The device offers 34 high-fidelity soothing sounds:

- 10 White Noise sounds
- 3 Fan sounds
- 7 Lullabies
- 14 Nature sounds

Use the **Previous Sound** and **Next Sound** buttons to cycle through the available sounds.



Image 4: The device offers 11 White Noises, 3 Fan Sounds, 8 Lullabies, and 12 Nature Sounds to help children fall asleep faster.

6.4 Night Light Control

The device features a soft LED night light with 7 colors and adjustable brightness.

- **Brightness Adjustment:** Tap the top surface of the device to cycle through brightness levels (1%-100% dimmer).
- **Color Change:** Long-press the top surface to switch between the 7 available colors.



Image 5: Soft night light with adjustable brightness via touch controls, ideal for night feedings.



Image 6: The night light offers 16 million colors and soft light to help sleep, assist night feeding, and create atmosphere.

6.5 Timer Function

Press the **M** button to set a timer for automatic shut-off. The available timer options are typically 30, 60, or 90 minutes. Refer to the app for more advanced scheduling.

7. APP CONTROL

The "Tuya Smart" app provides comprehensive control over your Momcozy White Noise Machine, allowing for greater customization and convenience.



Image 7: App interface showing options to customize sound and light, select sound & light, and set programs.

7.1 Remote Control

Control all functions (power, volume, sound selection, light brightness, and color) directly from your smartphone, even when you're not in the room.

7.2 Customization

Personalize your experience by adjusting the color, brightness, sound, and volume levels to create your ideal ambiance.



Image 8: Customize your "Favorite" settings by long-pressing the "M" button to switch ambiance, or via the app.

7.3 Scheduling and Auto-off Timer

Set programs for the device to automatically turn on/off, change sounds, or adjust lights according to your family's sleep schedule or daily routines. This includes wake-up functions.



Image 9: Auto-off Timer and Wake-up Function help to start an energetic day, configurable via the app.

7.4 Child Lock

Activate the child lock feature through the app to prevent accidental changes by curious little hands.

8. MAINTENANCE

To ensure the longevity and optimal performance of your Momcozy White Noise Machine:

- Wipe the device with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Keep the device free from dust and debris, especially around the speaker grille.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on	No power, faulty cable/adaptor	Ensure the power cable is securely connected and the power source is active. Try a different USB adapter.
Cannot connect to app	Incorrect Wi-Fi password, 5GHz network, weak signal, device not in pairing mode	Verify Wi-Fi password. Ensure you are on a 2.4 GHz network. Move device closer to router. Long-press 'M' button to enter pairing mode (blue blinking light). Restart device and try again.
No sound	Volume too low, sound paused	Increase volume using VOL+ button or app. Press Play/Pause button.
Light not working	Brightness too low, light turned off in app	Tap the top surface to adjust brightness. Check app settings to ensure light is enabled.

10. SPECIFICATIONS

Feature	Detail
Model Number	M21FWDB03
Materials	Plastic
Power Type	Electric Cable
Requires Batteries	No (1 Lithium metal battery required for internal clock/memory, not user-replaceable)
Manufacturer	Momcozy
Package Dimensions	15.8 x 11.6 x 11.4 cm
Item Weight	340 Grams
Connector Type	USB Type-C or Micro USB
Color	Blue

11. WARRANTY AND SUPPORT

For any questions, concerns, or support needs, please contact Momcozy customer service:

- **PHONE (US):** +1-855-322-1777 (Mon-Sun, 8 AM-5 PM, EST)
- **E-MAIL:** support@momcozy.com

- **INSTAGRAM:** <https://www.instagram.com/momcozy>
- **FACEBOOK:** <https://www.facebook.com/Momcozy4u>

Please retain your proof of purchase for warranty claims.