

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [alpina](#) /

> [Alpina Men's Shaver - USB Battery - 3 Floating Shaver Heads - Pop-Up Trimmer - With Cleaning Brush and Protective Cover - USB Cable](#)

alpina Alpine RMS-1680

Alpina Men's Shaver User Manual

Model: Alpine RMS-1680

INTRODUCTION

Thank you for choosing the Alpina Men's Shaver. This manual provides essential information for the safe and effective operation, maintenance, and care of your new shaver. Please read this manual thoroughly before first use and keep it for future reference. The Alpina Men's Shaver is designed for a precise and thorough shave, easily reaching all contours of your face. Featuring innovative 3-head technology, it provides an effective shave, reduces skin irritation, and delivers a smooth, refreshing feel. It is compact, rechargeable, and suitable for both dry shaving and use with shaving foam.

IMPORTANT SAFETY WARNINGS

Caution: When using the shaver, there is a risk of cuts and skin irritation.

- Clean the shaver regularly to avoid the growth of bacteria.
- Do not use the shaver near water or while charging.
- Keep out of reach of children.
- Only use the provided USB charging cable.
- Do not disassemble or attempt to repair the shaver yourself. Contact qualified personnel for service.

PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present:

- 1 x Alpina Men's Shaver
- 1 x Protective Cover
- 1 x Cleaning Brush
- 1 x USB Charging Cable
- 1 x User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your Alpina Men's Shaver.



Figure 1: Alpiña Men's Shaver Components

1. Triple Floating Blades
2. Removable Blades (Shaving Head)
3. Pop-Up Trimmer
4. On/Off Switch
5. LED Indicator
6. Protective Cover
7. Cleaning Brush

SETUP

Charging the Shaver

Before using your Alpiña Men's Shaver for the first time, it is essential to fully charge the device.

1. Ensure the shaver is turned off.
2. Connect the small end of the provided USB charging cable to the charging port on the shaver.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a USB port on a computer.
4. The LED indicator will illuminate to show that the shaver is charging.
5. A full charge takes approximately 1 hour. Once fully charged, the shaver provides about 45 minutes of operating time.
6. Disconnect the charging cable once charging is complete.



Figure 2: LED Indicator during operation or charging

OPERATING INSTRUCTIONS

Basic Shaving

The Alpina Men's Shaver can be used for both dry shaving and with shaving foam.

1. Ensure your face is clean. For dry shaving, ensure your skin is completely dry. For wet shaving, apply shaving foam or gel to your face.

2. Press the On/Off switch to turn on the shaver.
3. Gently press the shaver head against your skin and move it in small, circular motions. The three floating shaver heads will adapt to the contours of your face for a close shave.
4. Avoid pressing too hard, as this can cause skin irritation.
5. After shaving, press the On/Off switch again to turn off the shaver.

REMOVABLE BLADES

Easy to clean on the inside



Figure 3: Triple Floating Blades

Using the Pop-Up Trimmer

The integrated pop-up trimmer is ideal for precise trimming of sideburns, mustaches, or shaping your beard.

1. Turn on the shaver.
2. Locate the pop-up trimmer switch on the back of the shaver. Slide the switch upwards to deploy the trimmer.
3. Position the trimmer at the desired area and carefully trim or shape.
4. After use, slide the switch downwards to retract the trimmer back into the shaver body.

TRIPLE BLADES

Quickly and easily smooth and fresh for the day



Figure 4: Pop-Up Trimmer in use

MAINTENANCE

Cleaning the Shaver

Regular cleaning is crucial for maintaining optimal performance and hygiene of your shaver. It is recommended to clean the shaver once a week.

1. Ensure the shaver is turned off and disconnected from the charging cable.
2. Remove the shaving head by gently pulling it upwards from the shaver body.
3. Use the included cleaning brush to remove hair clippings from the shaving head and the shaver body.
4. For a more thorough clean, the shaving head can be rinsed under running water. Ensure it is completely dry before reattaching.
5. Reattach the shaving head by aligning it with the shaver body and pressing it down until it clicks into place.



LED INDICATOR

45 minutes operating time

Figure 5: Removing Shaving Head for Cleaning

Storage

After each use, ensure the shaver is clean and dry. Always place the protective cover over the shaving heads to protect them from damage and dust. Store the shaver in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Alpina Men's Shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 1 hour.
Poor shaving performance / pulling hairs.	Shaver heads are dirty or clogged with hair.	Clean the shaving heads thoroughly as described in the Maintenance section.

Problem	Possible Cause	Solution
Shaver makes unusual noise.	Hair trapped inside or damaged component.	Clean the shaver. If the noise persists, contact customer support.
Skin irritation after shaving.	Pressing too hard, or sensitive skin.	Apply less pressure. Consider using shaving foam for sensitive skin. Ensure blades are clean.

SPECIFICATIONS

Brand: Alpina

Model Name: Alpine RMS-1680

Item Model Number: 8711252188393

Product Dimensions: 15.9 x 5.8 x 5.6 cm

Item Weight: 300 g

Material Composition: Plastic

Power Source: Battery Powered (USB rechargeable)

Battery Type: 1 Lithium Ion battery (included)

Charging Time: Approx. 1 hour

Battery Life: Approx. 45 minutes of use

Blade Material: Stainless Steel

Head Type: Multi-head (3 floating rotary blades)

Special Feature: Pop-up beard trimmer

Color: Silver & Black

Country of Origin: China

WARRANTY

The Alpina Men's Shaver comes with a 2-year manufacturer's guarantee from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Alpina customer service through the retailer where you purchased the product or refer to the contact information provided on the product packaging.