

Beko DFS05024W

Beko DFS05024W Dishwasher User Manual

Model: DFS05024W

1. INTRODUCTION

Thank you for choosing a Beko appliance. This user manual provides important information regarding the installation, operation, and maintenance of your Beko DFS05024W Dishwasher. To ensure safe and efficient use, please read this manual thoroughly before operating your appliance and keep it for future reference.

The Beko DFS05024W is a 45cm freestanding dishwasher designed for efficient dishwashing with a capacity suitable for daily household needs. It features a user-friendly dial jog control and a durable stainless steel interior.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the dishwasher.
- Connect the appliance to a grounded outlet only.
- Do not operate the dishwasher if it has a damaged power cord or plug.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not open the door during operation, as hot water may spray out.
- Ensure proper installation to prevent water leaks or electrical hazards.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to your retailer immediately.

3.2 Placement

The Beko DFS05024W is a freestanding model. Choose a suitable location near water supply, drainage, and a power outlet. Ensure the floor is level and capable of supporting the dishwasher's weight (approximately 36.1 kg).





Image: Front-side view of the Beko DFS05024W Dishwasher with key dimensions indicated: 850cm height, 600cm depth, and 450cm width.

The product dimensions are approximately 60 cm (depth) x 44.8 cm (width) x 85 cm (height). Allow sufficient space for door opening and ventilation.

3.3 Water and Drain Connections

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure the drain hose is properly connected to a drain pipe or sink trap, preventing kinks or blockages.

3.4 Electrical Connection

Connect the dishwasher to a dedicated 240 Volt, grounded electrical outlet. Do not use extension cords or adapters. Ensure the electrical supply meets the requirements specified on the rating label of the appliance.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the dishwasher's controls and features before first use.

4.1 Control Panel Overview



Image: Front view of the Beko DFS05024W Dishwasher, showing the control panel with a rotary dial on the left and indicator lights on the right.

The dishwasher features a dial jog control for program selection and indicator lights for various functions (e.g., salt, rinse aid, program status).

4.2 Loading the Dishwasher

- Scrape off large food particles from dishes.

- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure items do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for forks and spoons, and handles up for knives.

4.3 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. If using rinse aid, ensure the rinse aid dispenser is filled to the indicated level. The dishwasher has a capacity of 11.9 Liters for water consumption per cycle.

4.4 Selecting and Starting a Program

1. Turn the dial jog control to select your desired wash program (e.g., Eco, Intensive, Quick).
2. Close the dishwasher door firmly.
3. The program will start automatically or by pressing a start button, depending on the model.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your dishwasher.

5.1 Cleaning Filters

The filter system should be checked and cleaned regularly (e.g., weekly or bi-weekly) to prevent blockages and ensure effective cleaning. Refer to the detailed instructions in the full manual for filter removal and cleaning.

5.2 Cleaning the Interior and Exterior

Wipe the exterior of the dishwasher with a soft, damp cloth. For the interior, periodically run a dishwasher cleaner or a cycle with white vinegar to remove mineral buildup and odors.

5.3 Winterization (if applicable)

If the dishwasher is to be left in an unheated location during winter, drain all water from the appliance and disconnect water and power supplies to prevent freezing damage.

6. TROUBLESHOOTING

Before contacting service, refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Door not closed properly; Power supply issue; Program not selected.	Ensure door is latched; Check power cord and circuit breaker; Select a program.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add more detergent; Clean filters.
Water not draining	Clogged drain hose or filter; Air gap blockage.	Check and clear drain hose/filter; Clean air gap.

Problem	Possible Cause	Solution
Excessive noise	Items hitting spray arms; Motor issue.	Rearrange dishes; Contact service if noise persists.

7. SPECIFICATIONS

Key technical specifications for the Beko DFS05024W Dishwasher:

- **Model:** DFS05024W
- **Brand:** Beko
- **Type:** Freestanding Dishwasher
- **Dimensions (H x W x D):** 85 cm x 44.8 cm x 60 cm (approx.)
- **Weight:** 36.1 kg
- **Voltage:** 240 Volts
- **Noise Level:** 49 dB
- **Capacity:** 10 Place Settings (implied by 45cm standard size, not explicitly stated in JSON but common for 45cm) / 11.9 Liters (water consumption)
- **Material:** Stainless Steel (interior)
- **Color:** White
- **Energy Efficiency Rating:** E (as per product data)

8. WARRANTY AND SUPPORT

Your Beko DFS05024W Dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance or visit the official Beko website for detailed terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Beko customer support. Have your model number (DFS05024W) and serial number ready when contacting support. You can find more information and support resources on the official Beko website www.beko.com