

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime PAWC3018 Paw Patrol Interactive Children's Camera User Manual

Accutime PAWC3018

Accutime PAWC3018 Paw Patrol Interactive Children's Camera User Manual

Model: PAWC3018 | Brand: Accutime

INTRODUCTION

Welcome to the user manual for your new Accutime PAWC3018 Paw Patrol Interactive Children's Camera. This camera is designed to provide hours of fun with its interactive features, including photo and video recording, built-in games, and special effects. Please read this manual carefully to ensure proper use, maintenance, and to understand all features of your device. Keep this manual for future reference.

For important safety information, please refer to the dedicated section in this manual.

WHAT'S IN THE BOX

Upon opening your package, please ensure all the following items are present:

- Accutime PAWC3018 Paw Patrol Interactive Children's Camera
- Micro SD Card
- USB Cable
- Instruction Manual (this document)



Image: The retail packaging for the Accutime PAWC3018 Paw Patrol Interactive Children's Camera, showing the camera inside a clear plastic window, along with icons highlighting key features like fun games, 4x zoom camera, 1080p video, MP3 player, 2-inch screen, SD card included, and picture frames.

PRODUCT OVERVIEW

Front View



Image: Front view of the Accutime PAWC3018 Paw Patrol Interactive Children's Camera, featuring a blue body with red handles on the sides. The central part of the camera displays colorful Paw Patrol characters (Skye, Rubble, Chase, Marshall) and has a prominent black camera lens in the center, with a flash/light sensor above it.

The front of the camera features the main lens for capturing photos and videos, along with a flash/light sensor. The design incorporates popular Paw Patrol characters, making it visually appealing for children.

Rear View and Controls



Image: Rear view of the Accutime PAWC3018 Paw Patrol Interactive Children's Camera, showing the 2-inch LCD screen in the center.

To the left of the screen are yellow directional buttons (up, down, left, right) and a red 'home' button. To the right are blue '+' and '-' buttons, a yellow 'OK' button, and a red power button. A speaker grille is visible below the left buttons.

The rear of the camera houses the 2-in-1 LCD screen, which serves as both a viewfinder and a display for navigating menus, viewing photos/videos, and playing games. Control buttons are strategically placed for easy access:

- **Directional Buttons (Left):** Used for navigating menus and selecting options.
- **Home Button (Left):** Returns to the main menu.

- **'+' and '-' Buttons (Right):** Used for zooming in/out, volume control, or selection in games.
- **OK Button (Right):** Confirms selections or takes a photo/starts video recording.
- **Power Button (Right):** Turns the camera on/off.
- **Speaker (Bottom Left):** For audio playback from videos or MP3s.

SETUP

Charging the Camera

Before first use, fully charge the camera's built-in Lithium Ion battery. Connect the included USB cable to the camera's charging port and the other end to a standard USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status and turn off when fully charged.

Inserting the Micro SD Card

Your camera comes with a Micro SD card already included. Locate the Micro SD card slot, typically on the side or bottom of the camera. Gently insert the Micro SD card into the slot until it clicks into place. Ensure it is inserted in the correct orientation as indicated by a small diagram near the slot. To remove, gently push the card in until it clicks, then release, and it will spring out.

OPERATING INSTRUCTIONS

Turning On/Off

Press and hold the Power button (red button on the right side of the rear) for a few seconds to turn the camera on or off.

Navigating the Menu

Use the directional buttons on the left to move through menu options on the 2-in-1 screen. Press the OK button to select an option.

Taking Photos

From the main menu, select the camera icon. Frame your shot using the screen. Press the OK button to capture a 5-megapixel photo. You can apply 5 fun filters and special effects before or after taking a photo, or use the photo frames to add a creative touch.

5 FRAMES



Image: A collage showing five different photo frames or borders that can be applied to pictures taken with the camera. Each frame features Paw Patrol themes or characters, such as the Paw Patrol logo, character faces, or paw prints.

Recording Videos

From the main menu, select the video camera icon. Press the OK button to start recording 1080p video. Press OK again to stop recording. The camera supports 4x digital zoom during recording, controlled by the '+' and '-' buttons.

Playing Games

The camera includes 4 pre-installed educational and exciting games. Select the games icon from the main menu and choose your desired game. Use the directional and OK buttons to play.

Using the MP3 Player

The camera features an MP3 player with a built-in speaker. You can transfer MP3 files to the Micro SD card using the USB cable and a computer. Select the music icon from the main menu to access and play your audio files.

MAINTENANCE

Cleaning

To clean the camera, gently wipe the exterior with a soft, dry cloth. For the screen, use a microfiber cloth. Do not use liquid cleaners or abrasive materials, as they may damage the camera. The camera is splash-proof, but not waterproof; avoid submerging it in water.

Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the camera is turned off before storing.

TROUBLESHOOTING

Camera Not Turning On

- Ensure the battery is sufficiently charged. Connect the camera to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to turn it on again.
- Press and hold the power button firmly for several seconds.

Poor Image/Video Quality

- Ensure the camera lens is clean and free from smudges or dust.
- Check lighting conditions. The camera performs best in well-lit environments.
- Ensure the subject is within the optimal focus range.

Camera Freezes or Becomes Unresponsive

- Try turning the camera off and then on again.
- If unresponsive, allow the battery to fully drain, then recharge and restart.

SD Card Error

- Ensure the Micro SD card is correctly inserted into the slot.
- Try removing and reinserting the SD card.
- If the issue persists, the SD card may be corrupted or incompatible. Try a different compatible Micro SD card.

SPECIFICATIONS

Feature	Detail
Model Name	PAWC3018

Brand	Accutime
Product Dimensions	5.71 x 1.69 x 3.5 inches
Item Weight	4.9 ounces
Maximum Webcam Image Resolution	5 MP
Video Resolution	1080p
Optical Zoom	4x
Photo Sensor Technology	CMOS
Image Stabilization	Digital
Supported File Format	mp3
Batteries	1 Lithium Ion (included)
Screen Type	2-in-1 Screen
Manufacturer	Accutime Watch Corp.

IMPORTANT SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent injury or damage to the product:

- **Not suitable for children under 36 months:** This product contains small parts which may pose a choking hazard.
- **Long cord:** The USB charging cable is a long cord and may present a risk of strangulation. Always supervise children when the cable is in use.
- **Packaging components:** Components of the packaging, such as tape, plastic wrap, wire ties, stickers, and labels, are not part of the product. Please dispose of them safely for the protection of your child.
- **Product appearance:** The appearance and color of the product may differ slightly from the pictures shown in this manual or on the packaging.
- **Battery safety:** Do not attempt to replace the internal Lithium Ion battery. Do not expose the camera to extreme temperatures, direct sunlight, or fire.
- **Water exposure:** The camera is splash-proof but not waterproof. Do not submerge the camera in water or expose it to heavy rain.

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the contact details provided on the product packaging or visit the official Accutime website. Please retain your proof of purchase for any warranty claims.

