

[manuals.plus](#) /› [KOBI](#) /› [Kobi 12.7 Liter Electric Air Fryer Oven \(Model AF1200EBLK\) User Manual](#)

KOBI AF1200EBLK

Kobi 12.7 Liter Electric Air Fryer Oven (Model AF1200EBLK) User Manual

Comprehensive instructions for safe and efficient operation.

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Adequate air circulation is required around the appliance during operation.

2. PRODUCT OVERVIEW

The Kobi 12.7 Liter Electric Air Fryer Oven is designed for versatile cooking, offering various functions including air frying, roasting, toasting, broiling, baking, and reheating. It features a digital touchscreen for easy operation and comes with multiple accessories to enhance your cooking experience.



Image: Front view of the Kobi 12.7 Liter Electric Air Fryer Oven, showcasing the digital control panel and viewing window.

2.1 Components and Accessories

Your air fryer oven includes the following components and accessories:



Rotisserie Basket: Ideal for air-frying smaller items like french fries or nuts.

Rotisserie Fork: Used for roasting whole chickens or larger cuts of meat.

10 Skewers: For preparing kebabs.

Crisping Tray: Provides optimal airflow for crispy results.

Drip Pan: Collects excess oil and food particles for easier cleaning.

Fetch Tool: Safely removes hot accessories from the oven.

Image: A visual representation of the included accessories: Rotisserie Basket, Rotisserie Fork, 10 Skewers, Crisping Tray, Drip Pan, and Fetch Tool.

3. SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials and any promotional labels from the air fryer oven.
- Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash all removable accessories (rotisserie basket, crisper tray, drip pan, etc.) with warm, soapy water. Rinse thoroughly and dry completely.
- Placement:** Place the air fryer oven on a stable, level, heat-resistant surface, ensuring there is at least 6 inches (15 cm) of clear space on all sides and above the appliance for proper ventilation.
- Power Connection:** Plug the power cord into a grounded electrical outlet.
- Burn-in Cycle (Recommended):** To eliminate any manufacturing odors, operate the empty air fryer oven for approximately 10-15 minutes at 350°F (175°C). A slight odor or smoke may be present during this initial use; this is normal. Ensure the area is well-ventilated.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The digital touchscreen allows for easy selection of cooking functions, temperature, and time settings.

11 Temperature Presets

Preparing delicious meals is quick and easy with
11 convenient menu functions.



Image: Close-up of the Kobi Air Fryer's digital control panel, highlighting the 11 preset cooking functions.

Key controls include:

- **Power Button:** Turns the unit on/off.
- **Start/Pause:** Initiates or pauses the cooking cycle.

- **Temperature/Time Dials:** Used to adjust temperature and cooking time manually.
- **Preset Icons:** Select from 11 pre-programmed cooking functions (e.g., Steak, Chicken Wings, Fries, Pizza, Fish, Dehydrate, Rotisserie Chicken).
- **Light Button:** Activates the interior light to check food progress.
- **Rotisserie Button:** Activates the rotisserie function for rotating accessories.

4.2 General Operation

1. **Prepare Food:** Place your food in the appropriate accessory (crisping tray, rotisserie basket, etc.). Do not overfill.
2. **Insert Accessory:** Carefully slide the accessory into the air fryer oven.
3. **Power On:** Press the Power button to turn on the display.
4. **Select Cooking Method:**
 - **Using Presets:** Tap the desired preset icon (e.g., "Fries"). The oven will automatically set a default temperature and time.
 - **Manual Setting:** Use the Temperature/Time dials to set your desired temperature and cooking time.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Monitor Progress:** Use the interior light button to check on your food without opening the door.
7. **Completion:** The oven will beep when the cooking cycle is complete. Carefully remove the food using oven mitts and the fetch tool for accessories.

Rapid 360° Heat Circulation

Innovative convection technology ensures food cooks evenly, quickly, and to perfection.



Image: Illustration showing rapid 360-degree heat circulation within the Kobi Air Fryer Oven, indicating efficient cooking.

4.3 Using Rotisserie Function

The rotisserie function is ideal for evenly cooking whole chickens or roasts using the rotisserie fork, or for tumbling smaller items in the rotisserie basket.

- 1. Prepare Food:** Securely attach your food to the rotisserie fork or place items into the rotisserie basket.
- 2. Insert Rotisserie Assembly:** Carefully insert the rotisserie shaft into the designated slots inside the oven. Ensure it is properly seated.
- 3. Set Cooking Parameters:** Select a preset or manually set the temperature and time.
- 4. Activate Rotisserie:** Press the Rotisserie button on the control panel. The rotisserie assembly will begin to rotate.
- 5. Start Cooking:** Press the Start/Pause button.
- 6. Remove Food:** Once cooking is complete, use the fetch tool to safely remove the hot rotisserie assembly from the oven.

Sleek & Compact

Modern square design frees up counterspace without sacrificing capacity.



Image: The Kobi Air Fryer Oven with a rotisserie roast cooking inside, demonstrating the rotisserie function.

5. COOKING GUIDE AND TIPS

Achieve optimal results with these general cooking guidelines and tips:

- **Preheating:** For best results, preheat the air fryer for 3-5 minutes before adding food.
- **Oil Usage:** While air frying requires significantly less oil than deep frying, a light spray or toss with oil can enhance crispiness and flavor for many foods.
- **Do Not Overfill:** Avoid overcrowding the cooking accessories. Cook in batches if necessary to ensure even cooking and crispiness.
- **Shaking/Flipping:** For even browning, shake the rotisserie basket or flip items on the crisper tray halfway through the cooking time.
- **Cooking Times:** Cooking times may vary based on food density, size, and initial temperature. Always use a food thermometer to ensure food is cooked to safe internal temperatures.

Less Oil, More Flavor

Indulge in the crispy foods you love, guilt-free!



Air Fry



Traditional Deep Fry



Image: A visual comparison illustrating the difference between air-fried and traditional deep-fried foods, emphasizing reduced oil usage.

5.1 Recipe Inspiration

Your Kobi Air Fryer Oven includes a recipe book with over 120 recipes to help you explore various culinary possibilities.

Free Recipe Book

Kobi chefs created over 120 delicious recipes to inspire ideas for every meal.



Image: A person holding a Kobi recipe book next to the air fryer oven and various cooked dishes, suggesting culinary inspiration.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer oven.

- Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Removable Accessories:** The rotisserie basket, crisper tray, drip pan, and other accessories are dishwasher safe. Alternatively, wash them with warm, soapy water using a non-abrasive sponge. Rinse thoroughly and dry completely.
- Interior Cleaning:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn food residue, a non-abrasive sponge can be used. Avoid harsh chemicals or abrasive cleaners.
- Exterior Cleaning:** Wipe the exterior of the air fryer oven with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Heating Element:** Gently clean the heating element with a soft brush to remove any food particles. Do not use water or liquid cleaners directly on the heating element.
- Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Kobi Air Fryer Oven, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; unit not powered on.	Ensure the power cord is securely plugged into a working outlet. Press the Power button.
Food is not cooked evenly.	Overcrowding; insufficient shaking/flipping; incorrect temperature/time.	Do not overfill accessories. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
Food is not crispy.	Too much moisture; not enough oil; overcrowding.	Pat food dry before cooking. Lightly spray or toss with oil. Cook in smaller batches.
White smoke coming from the appliance.	Grease/oil residue in drip pan; fatty foods cooking.	Clean the drip pan and interior thoroughly. This is normal for high-fat foods; ensure proper ventilation.
Rotisserie function not working.	Rotisserie assembly not properly seated; Rotisserie button not activated.	Ensure the rotisserie shaft is correctly inserted into the slots. Press the Rotisserie button on the control panel.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Brand	KOBI
Model Name	AF1200EBLK
Capacity	12.7 Liters (13 Quart)
Wattage	1700 watts
Voltage	120 Volts
Control Method	Touch Control
Material	Plastic (Exterior), Stainless Steel (Interior/Accessories)
Product Dimensions	15 x 17 x 17 inches (approx.)
Item Weight	22 Pounds
Dishwasher Safe Parts	Yes (Removable accessories)

12.7 Quart Capacity

Perfect for making large servings of your family's favorite foods.



Height
15.63 in
(39.7 cm)

Width
14.4 in
(36.6 cm)

Depth
12.4 in
(31.5 cm)

Image: Diagram illustrating the dimensions (height, width, depth) and 12.7 Quart capacity of the Kobi Air Fryer Oven.

9. WARRANTY AND SUPPORT

Kobi products are manufactured to high-quality standards. For information regarding warranty coverage, product registration, or technical


support, please refer to the warranty card included with your purchase or visit the official Kobi website. Please have your model number (AF1200EBLK) and purchase date available when contacting support.

For further assistance, you may also contact the retailer where the product was purchased.



Related Documents - AF1200EBLK


	<p><u>Kobi 2025/26: Katalog Oświetlenia LED</u> Przeglądaj katalog produktów oświetleniowych Kobi na lata 2025/26. Odkryj szeroką gamę innowacyjnych rozwiązań LED, od żarówek po systemy oświetleniowe, zaprojektowane z myślą o jakości, funkcjonalności i estetyce.</p>
	<p><u>KOBI LISSE 2 ST 45W BLACK Tower Fan User Manual and Safety Guide</u> Comprehensive user manual and safety guide for the KOBI LISSE 2 ST 45W BLACK tower fan, detailing assembly, operation, maintenance, and technical specifications.</p>
	<p><u>SOLAR LED MHCS 10W - Kobi Solar Floodlight with Motion Sensor and Remote Control</u> Comprehensive guide to the Kobi SOLAR LED MHCS 10W solar-powered LED floodlight, detailing technical specifications, operating modes, remote control functions, installation, battery replacement, and disposal information.</p>
	<p><u>Kobi SMART LED GS 9.5W E27 RGB WW WIFI Product Information Sheet</u> Product information sheet for the Kobi SMART LED GS 9.5W E27 RGB WW WIFI light source, detailing energy efficiency, luminous flux, power consumption, and other technical specifications as per EU regulations.</p>
	<p><u>KOBI LISSE 2 ST 45W BLACK Tower Fan User Manual and Safety Guide</u> Comprehensive user manual and safety guide for the KOBI LISSE 2 ST 45W BLACK tower fan, detailing assembly, operation, maintenance, and technical specifications.</p>

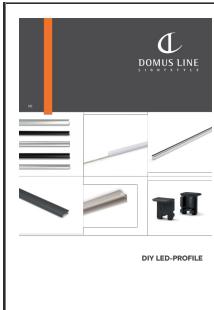

[Domus Line DIY LED-Profile: Flexible und Professionelle Lichtlösungen](#)

Entdecken Sie die DIY LED-Profile von Domus Line. Eine modulare Kollektion für maßgeschneiderte, flexible und professionelle Lichtlösungen, ideal für Interior-Design-Projekte.

Documents - Kobi – AF1200EBLK

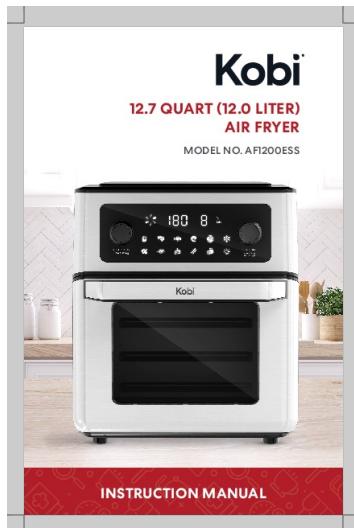

[\[pdf\] User Manual](#)

12.7 Quart Air Fryer Instruction Manual Revision A 2 18 2021 AF1200EBLK Installation Assembly Kobi Qt Electric With 11 Cooking Functions kbib1003 AF1200EKobi AF1200EBLK58055 1742454 af1200ess manualsecure img1 ag wfcdn dm document b17ac780 9784 4fa3 9b7f 4f3d4290b767 58055 manual ||| 12.7 QUART 12.0 LITER AIR FRYER MODEL NO. AF1200ESS Thank you for purchasing a Kobi Air Fryer. INSTRUCTION MANUAL Please read and understand this manual before operating your air fryer. Retain this manual for future use. TABLE OF CONTENTS SAFETY INFORMATION. lang:en score:39 filesize: 3.08 M page_count: 16 document date: 2021-03-02