



Manuals.plus /

› ALLIMITY /

› Allimity AH59-02530A Remote Control User Manual for Samsung Home Theater Systems

## ALLIMITY AH59-02530A

# Allimity AH59-02530A Remote Control User Manual

Model: AH59-02530A | Brand: ALLIMITY

## INTRODUCTION

This manual provides comprehensive instructions for the Allimity AH59-02530A replacement remote control. This remote is designed to be compatible with various Samsung Blu-ray Home Entertainment System models, including HT-H4200R, HT-F4500, HT-FM45/ZA, HT-H4500R, HT-H4550R, HT-J4500, HT-J5500W, HT-JM41, and HT-J4100. No programming or setup is required; simply insert batteries to begin operation.



Figure 1: Angled view of the Allimity AH59-02530A remote control, showcasing its layout and buttons.

## SETUP

### Battery Installation

The Allimity AH59-02530A remote control requires two AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.







Figure 2: Rear view of the remote control with the battery compartment open, showing the slots for two AAA batteries.

Once batteries are installed, the remote is ready for use with your compatible Samsung Home Entertainment System.

## OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of your original Samsung remote. Point the remote directly at your Samsung Home Entertainment System for optimal performance. Below is a general guide to common button functions:



Figure 3: Front view of the remote control, highlighting the various function buttons.

- **Power Button** ( ): Turns the home entertainment system on or off.
- **Function Button**: Cycles through available input sources or functions.
- **Volume (+/-)**: Adjusts the audio volume level.

- **Mute Button:** Silences or restores the audio.
- **Number Buttons (0-9):** Used for direct input, such as track selection or menu navigation.
- **Disc Menu / Title Menu / POPUP:** Accesses disc-specific menus or pop-up menus.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback.
- **HOME Button:** Returns to the main home screen or menu of the system.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate through menus and confirm selections.
- **RETURN Button:** Goes back to the previous screen or menu.
- **EXIT Button:** Exits the current menu or function.
- **TOOLS Button:** Accesses quick settings or tools menu.
- **INFO Button:** Displays information about the current content or system status.
- **Color Buttons (A, B, C, D):** These buttons (Red, Green, Yellow, Blue) provide access to specific functions depending on the content or menu displayed on your screen.

For specific functions related to your Samsung Home Entertainment System model, refer to your system's original user manual.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or inconsistent. Always replace both AAA batteries at the same time with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which could damage the remote control.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the home entertainment system's infrared receiver.
  - Confirm the remote is pointed directly at the system.
- **Limited operating range:**
  - The maximum effective range is approximately 33 feet (10 meters). Ensure you are within this range.
  - Bright light sources, such as direct sunlight or strong fluorescent lights, can interfere with the infrared signal. Try to minimize such interference.
- **Specific functions not working:**
  - Verify that your Samsung Home Entertainment System model is listed as compatible.

- Some advanced functions might be specific to the original remote or require specific system settings.

## SPECIFICATIONS

---

<b>Brand</b>	ALLIMITY
<b>Model Number</b>	AH59-02530A
<b>Connectivity Technology</b>	Infrared
<b>Compatible Devices</b>	Samsung Blu-ray Home Entertainment Systems (HT-H4200R, HT-F4500, HT-FM45/ZA, HT-H4500R, HT-H4550R, HT-J4500, HT-J5500W, HT-JM41, HT-J4100)
<b>Battery Type</b>	2 x AAA Alkaline Batteries (not included)
<b>Maximum Range</b>	33 Feet (10 meters)
<b>Color</b>	Black
<b>Item Dimensions (L x W x H)</b>	6"L x 2"W x 0.5"H (approximately)
<b>Item Weight</b>	2 Ounces (approximately)

## WARRANTY INFORMATION

---

Specific warranty details for the Allimity AH59-02530A remote control are typically provided by the seller or manufacturer at the time of purchase. Please refer to your product packaging, purchase receipt, or contact the seller directly for information regarding warranty coverage and terms.

## SUPPORT

---

For technical assistance, troubleshooting beyond this manual, or inquiries about your Allimity AH59-02530A remote control, please contact the seller or manufacturer directly. Contact information can usually be found on the product packaging or the platform where the item was purchased.