

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PAXCESS](#) /

› [PAXCESS Electric Pressure Washer User Manual](#)

PAXCESS B09C38KN48

PAXCESS Electric Pressure Washer User Manual

Model: B09C38KN48

INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the PAXCESS Electric Pressure Washer. This manual provides important information for the safe and efficient operation of your new pressure washer. Please read it thoroughly before assembly, operation, or maintenance.

Important Safety Instructions

- Always wear appropriate safety gear, including eye protection, when operating the pressure washer.
- Do not direct the water stream at people, pets, or electrical devices. The high pressure can cause serious injury.
- Ensure all connections are secure before starting the unit to prevent leaks and maintain pressure.
- Operate the pressure washer on a stable, level surface.
- Unplug the unit from the power source before performing any maintenance or cleaning.
- Keep children and pets away from the operating area.
- Do not operate the pressure washer if the power cord or high-pressure hose is damaged.
- This appliance has a Total Stop System (TSS) which automatically shuts off the pump when the trigger is not engaged. This saves energy and prolongs pump life.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present and undamaged:

- PAXCESS Electric Pressure Washer Unit
- High-Pressure Hose (26 ft)
- Spray Gun with Adjustable Nozzle
- Foam Cannon/Detergent Bottle
- Power Cord (35 ft)
- Water Inlet Connector
- Cleaning Pin
- User Manual



Image: The main PAXCESS Electric Pressure Washer unit, showcasing its integrated hose reel, spray gun, and overall compact design.

SETUP


Follow these steps to set up your pressure washer for first use:

- 1. Attach the High-Pressure Hose:** Connect one end of the high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun. Ensure connections are tight to prevent leaks.
- 2. Connect Water Supply:**
 - From Water Tap:** Connect a standard garden hose (not included) to the water inlet on the pressure washer and then to your water tap. Turn on the water supply fully.
 - Suck Water Automatically (from a bucket/tank):** If using a water source like a bucket, ensure the water inlet hose is fully submerged and free of air bubbles. The unit can self-prime.

Two Ways for Water Sucking

Allows you to take water easily at anywhere

1 Water Tap

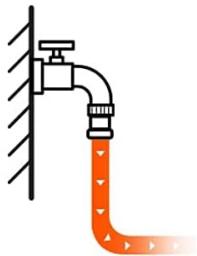

2

Suck Water Automatically



Image: Illustration demonstrating how to connect the pressure washer to a standard water tap or draw water directly from a bucket or tank.

3. **Connect Power:** Plug the 35ft power cord into a grounded electrical outlet. Ensure the outlet meets the power requirements of the unit.
4. **Purge Air from System:** Before turning on the power, squeeze the trigger on the spray gun to allow water to flow through the system and expel any trapped air. Continue until a steady stream of water emerges.

OPERATING INSTRUCTIONS

Your PAXCESS pressure washer is designed for powerful and efficient cleaning. It delivers up to 3000 PSI and 2.5 GPM (Max) for various cleaning tasks.

Powerful Pressure Washer

Great for Cleaning Cars, Houses, Driveways, Decks, Siding



Image: A person operating the pressure washer to clean a paved surface, illustrating its powerful cleaning capability and key performance metrics.

Starting the Unit

1. Ensure water supply is fully open and air is purged from the system.
2. Turn the power switch to the "ON" position. The motor will start.
3. Squeeze the trigger on the spray gun to begin spraying. The Total Stop System (TSS) will automatically shut off the pump when the trigger is released and restart it when squeezed again.

Using the Adjustable Nozzle

The adjustable nozzle allows you to easily switch between different spray patterns and pressures without changing nozzles.

All-in-one Adjustable Nozzle



Soap Mode
Low Pressure+Soap Detergent



Fan Mode
Low Pressure



Jet Line Mode
High Pressure



Image: A detailed view of the adjustable nozzle, illustrating its three primary modes: Soap Mode (low pressure with detergent), Fan Mode (low pressure wide spray), and Jet Line Mode (high pressure concentrated stream).

- **Soap Mode (Low Pressure + Soap Detergent):** Twist the nozzle to the "Foam" setting. Fill the integrated foam cannon/detergent bottle with appropriate pressure washer detergent. This mode is ideal for applying soap evenly before deep cleaning.
- **Fan Mode (Low Pressure):** Twist the nozzle to the "Low" setting. This provides a wider, less intense spray, suitable for rinsing or cleaning delicate surfaces.
- **Jet Line Mode (High Pressure):** Twist the nozzle to the "High" setting. This delivers a concentrated, powerful stream for tough dirt and grime on durable surfaces.

Applications

The PAXCESS pressure washer is versatile and can be used for a wide range of cleaning tasks:

Multiple Usage Scenarios

3000 PSI high pressure help you quickly wash anything you want

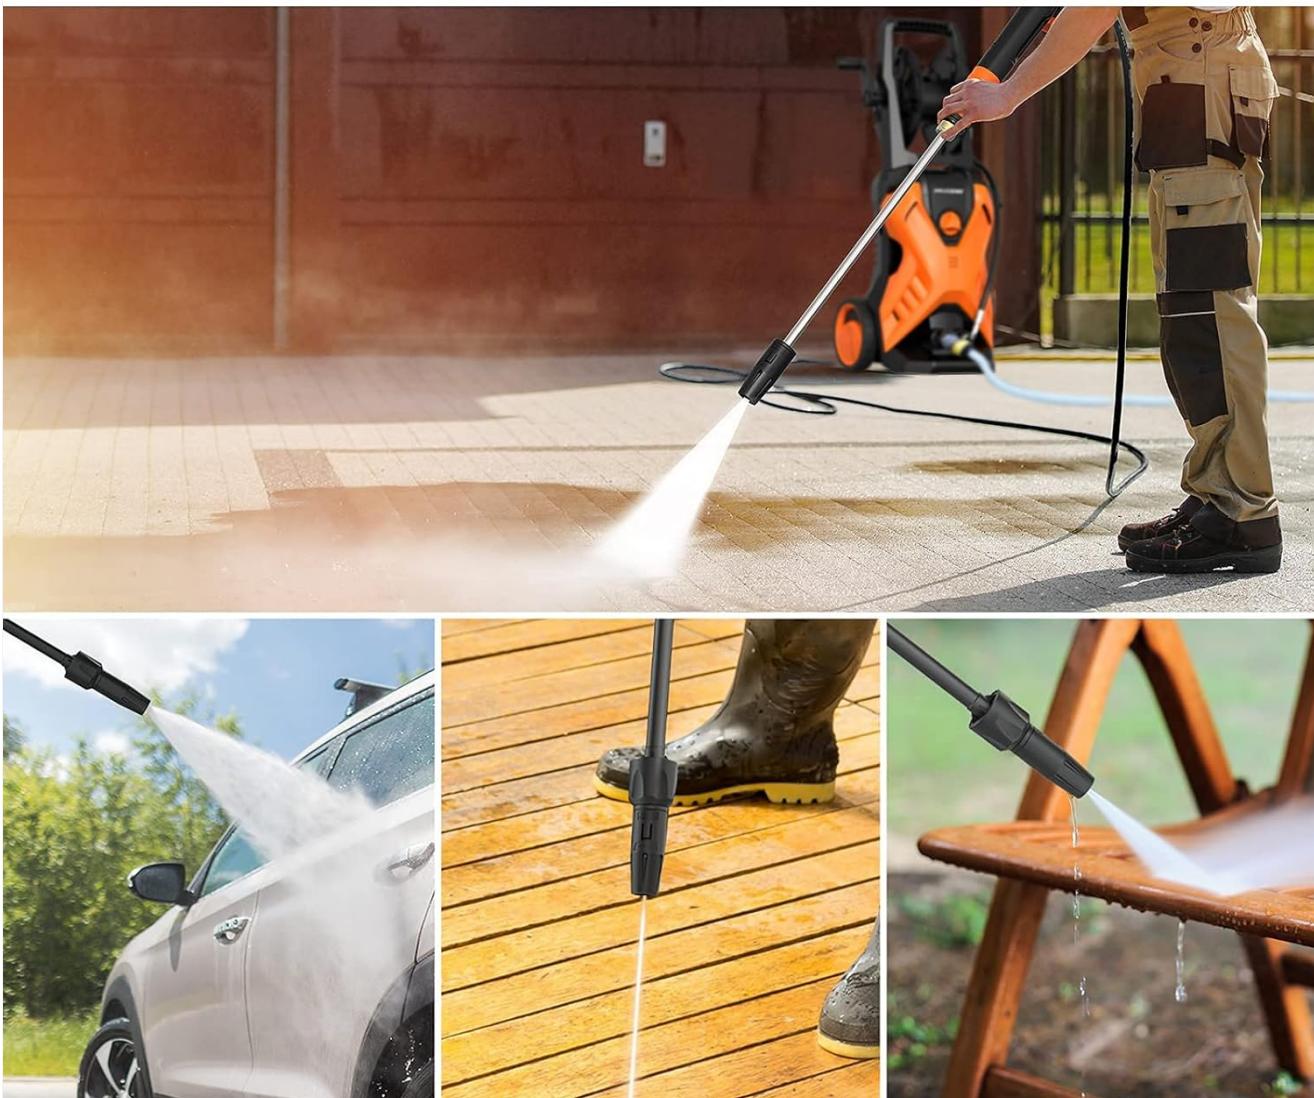


Image: A collage demonstrating the pressure washer's versatility, showing its effective use on vehicles, wooden decks, and outdoor furniture.

- Cleaning cars, boats, and RVs.
- Washing driveways, patios, and sidewalks.
- Removing dirt and grime from decks and fences.
- Cleaning outdoor furniture and equipment.



Powerful Cleaning

Image: A close-up shot of the high-pressure stream effectively cleaning a stained patio surface, highlighting its powerful cleaning capability.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

After Each Use

- **Shut Down:** Turn off the power switch, then turn off the water supply.
- **Release Pressure:** Squeeze the trigger on the spray gun to release any remaining pressure in the system.
- **Disconnect:** Disconnect the garden hose and high-pressure hose.
- **Drain Water:** Drain all water from the pump, hoses, and spray gun to prevent freezing damage in cold weather.
- **Clean Nozzle:** Use the provided cleaning pin to clear any blockages in the nozzle.
- **Clean Unit:** Wipe down the exterior of the unit with a damp cloth.

Storage

The built-in hose reel makes storage convenient.

Pressure Hose Reel and Effortless Wheels

Convenient to Use



Before



After



Easy to Move

Image: A visual guide demonstrating the ease of storing the high-pressure hose using the integrated hose reel, and the mobility provided by the unit's wheels.

- Wind the high-pressure hose onto the integrated hose reel by gently turning the handle.
- Store the spray gun, lance, and detergent bottle in their designated holders on the unit.
- Store the pressure washer in a dry, frost-free area.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not start	No power supply; Power switch off; Thermal overload activated.	Check power cord connection and outlet; Turn power switch ON; Allow unit to cool down for 30 minutes.

Problem	Possible Cause	Solution
Low pressure	Insufficient water supply; Air in pump; Clogged nozzle; Kinked hose.	Ensure water tap is fully open; Purge air from system; Clean nozzle with cleaning pin; Straighten hose.
Water leaks	Loose connections; Damaged O-rings.	Tighten all hose connections; Inspect and replace damaged O-rings.
Motor runs continuously (TSS not working)	Air in pump; Leak in system.	Purge air from system; Check all connections for leaks.

SPECIFICATIONS

Feature	Specification
Brand	PAXCESS
Model	B09C38KN48
Maximum Pressure	3000 PSI
Maximum Flow Rate	2.5 GPM
Power Source	Corded Electric
High-Pressure Hose Length	26 ft
Power Cord Length	35 ft
Product Dimensions	13 x 13 x 26 inches
Item Weight	23.6 pounds
UPC	656942279976

WARRANTY AND SUPPORT

This product is part of the Amazon Renewed program. Pre-owned or refurbished products are professionally inspected and tested to work and look like new by Amazon-qualified suppliers.

If not satisfied with the purchase, renewed products are eligible for replacement or refund under the [Amazon Renewed Guarantee](#).

For further assistance or technical support, please refer to the Amazon Renewed support channels or contact PAXCESS customer service through their official website.

