

## VINGLI VL-G57000115

# VINGLI Metal Patio Porch Swing Instruction Manual

Model: VL-G57000115

[Safety](#)

[Contents](#)

[Assembly](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

## 1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in injury or product damage.

- **Adult Assembly Required:** This product requires adult assembly. Keep children and pets away from the assembly area.
- **Weight Capacity:** The maximum weight capacity for this swing is **660 lbs (300 kg)**. Do not exceed this limit.
- **Secure Installation:** Ensure the swing is securely attached to a sturdy frame or ceiling hooks capable of supporting the swing's weight plus the maximum user weight.
- **Level Surface:** Always place the swing on a stable, level surface to prevent tipping.
- **Regular Inspection:** Periodically check all bolts, nuts, and chain connections to ensure they are tight and secure.
- **Avoid Over-swinging:** Do not swing excessively high or engage in rough play, as this may cause instability or damage.
- **Weather Conditions:** Avoid using the swing during strong winds, heavy rain, or other severe weather conditions.

---

## 2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact VINGLI customer support.

- Swing Bench (pre-assembled back and seat)
- Armrests (2 pieces)
- Hanging Chains (2 sets)
- Hardware Pack (nuts, bolts, wrench)



Figure 2.1: Overall view of the VINGLI Metal Patio Porch Swing.

### 3. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. One person can typically complete assembly in approximately 5 minutes, with two people making the process even quicker.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Attach Armrests:** The swing bench comes with the back and seat pre-assembled. Attach the two armrests to the sides of the swing bench using the provided bolts and nuts. Ensure all connections are finger-tight initially.
3. **Secure All Connections:** Once all armrests are in place, use the included wrench to fully tighten all bolts and nuts. Do not overtighten.
4. **Connect Hanging Chains:** Attach the hanging chains to the designated points on the swing bench. Ensure the chains are securely fastened.
5. **Hang the Swing:** Carefully lift the swing and hang it onto your existing sturdy swing frame or ceiling hooks. Ensure the frame/hooks are rated for the swing's weight capacity.



Figure 3.1: Illustration of chain adjustment for optimal swing angle.

#### 4. OPERATING INSTRUCTIONS

The VINGLI Metal Patio Porch Swing is designed for comfortable and relaxing use. Follow these guidelines for optimal experience:

- **Seating:** The swing features an ergonomic design with curves in the knee area and dense seat intervals for a comfortable sitting experience.
- **Adjusting Swing Angle:** The upgraded chains allow for angle adjustment. To adjust, carefully take the swing down from its hanging position. Find a proper tilting position by adjusting the chain links, then re-lock the chains and re-hang the swing. This allows you to customize the recline for better comfort.
- **Weight Distribution:** Distribute weight evenly when multiple users are on the swing, ensuring not to exceed the 660 lbs capacity.

# SEATS UP TO 2

Enjoy your leisure time with your families  
Sitting | Reading | Relaxing

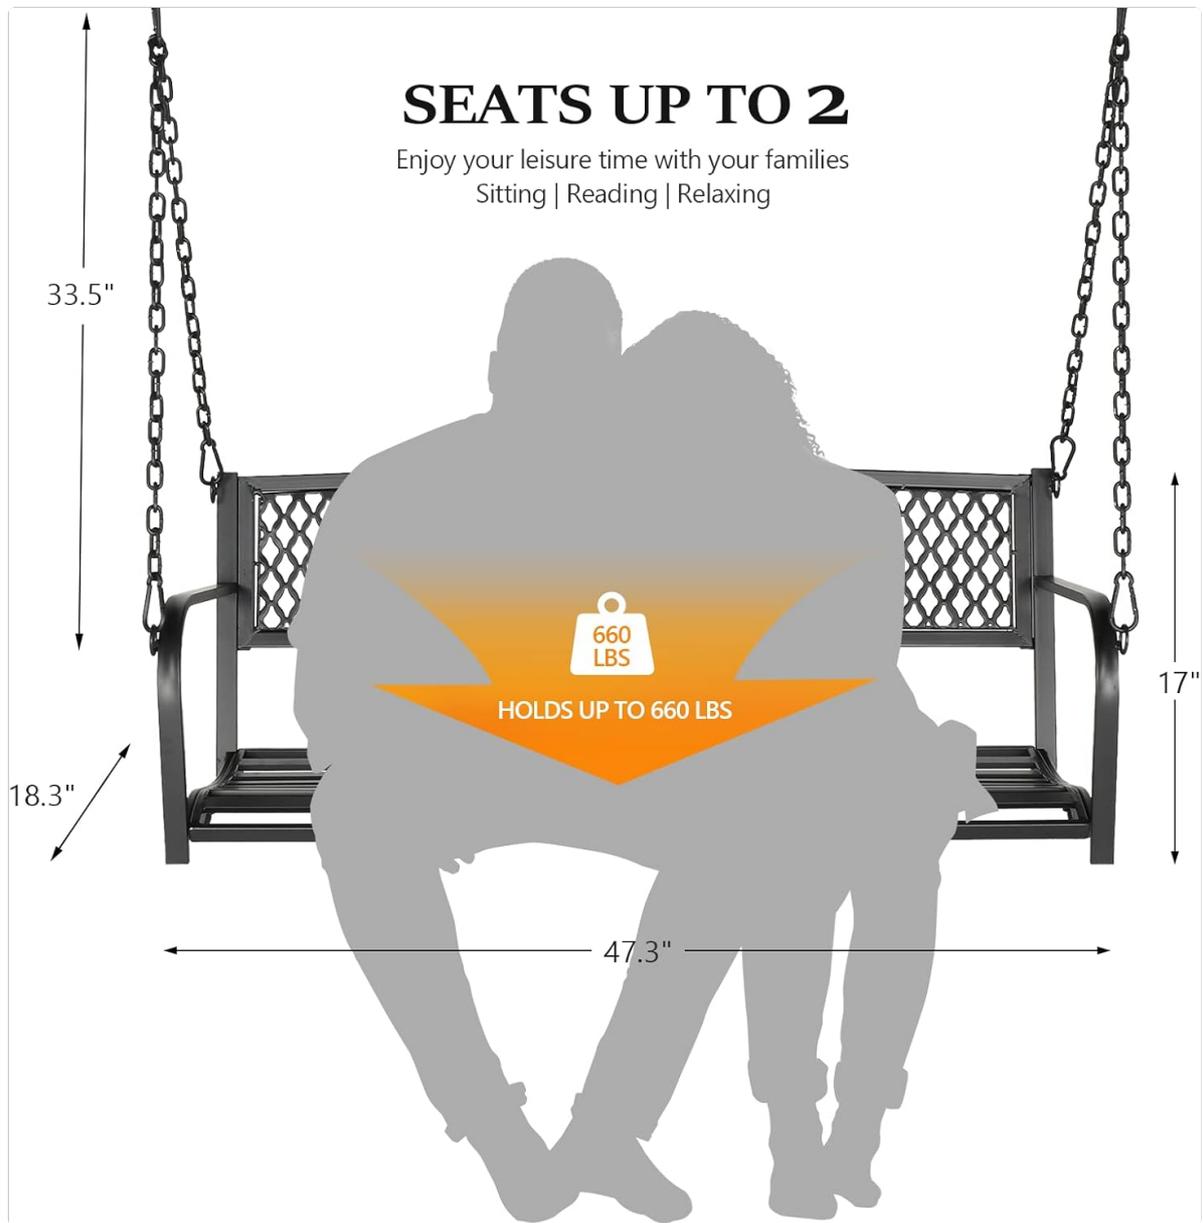


Figure 4.1: Ergonomic design of the swing seat for enhanced comfort.

## 3 Steps Simply Adjust the Angle



Figure 4.2: Product dimensions and maximum weight capacity.

## 5. MAINTENANCE

Proper maintenance will extend the life and appearance of your VINGLI porch swing.

- **Cleaning:** Wipe down the metal frame and seat with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust. Avoid harsh chemicals or abrasive cleaners.
- **Rust Prevention:** The swing features a lacquered finish. If scratches or chips occur, touch up with rust-inhibiting paint to prevent corrosion.
- **Hardware Check:** Annually, or more frequently with heavy use, inspect all bolts, nuts, and chain links for tightness. Tighten any loose hardware.
- **Winter Storage:** During off-season or harsh weather, it is recommended to cover the swing or store it indoors to protect it from extreme elements.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Swing is unstable or wobbly.	Loose hardware; uneven hanging surface.	Ensure all bolts and nuts are securely tightened. Verify the swing is hung from a level and stable structure.
Squeaking noise during use.	Friction at chain connections or pivot points.	Apply a small amount of silicone-based lubricant to the chain links and any moving parts where friction occurs.
Difficulty adjusting swing angle.	Chains are under tension; incorrect locking mechanism use.	Remove the swing from its hanging position before attempting to adjust the chain length. Ensure the chain's loop-locked design is correctly engaged.

## 7. SPECIFICATIONS

Feature	Detail
Brand	VINGLI
Model Number	VL-G57000115
Color	Black
Product Dimensions (D x W x H)	18.3"D x 47.3"W x 17"H
Frame Material	Metal
Finish Type	Lacquered
Seat Depth	18.3 inches
Assembly Required	Yes
Item Weight	29.7 pounds
Maximum Weight Capacity	660 lbs
UPC	810158420908

## 8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, missing parts, or any questions regarding the assembly or operation of your VINGLI Metal Patio Porch Swing, please contact VINGLI customer support.

Please have your model number (VL-G57000115) and purchase details ready when contacting support.

