

[Manuals.plus](#) /

› [YesParts](#) /

› YesParts WR32X26246 Refrigerator Middle Pan Cover Instruction Manual

YesParts YP-WR32X26246

Instruction Manual

YESPARTS REFRIGERATOR MIDDLE PAN COVER

Model: YP-WR32X26246

1. Introduction

This manual provides essential information for the installation, operation, and maintenance of your YesParts WR32X26246 Refrigerator Middle Pan Cover. This durable replacement part is designed to be compatible with various refrigerator models, replacing part numbers WR32X10184, PS11766703, and WR32X10151. Please read this manual thoroughly before proceeding with installation to ensure proper function and longevity of the product.

2. Safety Information

Always prioritize safety when working with appliances. Disconnect power to the refrigerator before attempting any installation or maintenance. Wear appropriate personal protective equipment, such as gloves, to prevent injury. If you are unsure about any step, consult a qualified technician.

- **Power Disconnection:** Always unplug the refrigerator from the power outlet before beginning any work.
- **Sharp Edges:** Be cautious of any sharp edges or components within the refrigerator.
- **Proper Tools:** Use only appropriate tools for the task.
- **Child Safety:** Keep children away from the work area during installation.

3. Product Overview and Parts Identification

The YesParts WR32X26246 Refrigerator Middle Pan Cover is a direct replacement for the original component, designed to fit precisely. This part typically forms the top cover for a crisper drawer or deli drawer, often incorporating humidity control features.



Figure 1: YesParts WR32X26246 Refrigerator Middle Pan Cover. This image shows the white plastic frame of the middle pan cover, which typically holds a glass shelf (not included) and may have a humidity control mechanism at the top. The frame is rectangular with a slightly curved top edge where "Humidity Control" text is visible.

Note: This replacement part is the plastic frame only. It does *not* include the glass shelf, humidity control slider, front or rear gaskets, or track wheels. These components must be salvaged from your original pan cover if they are still functional.

4. Installation Instructions

Follow these steps to replace your refrigerator's middle pan cover:

1. Prepare the Refrigerator:

- Unplug the refrigerator from the wall outlet to disconnect power.
- Remove all contents from the crisper or deli drawer area.
- Carefully remove the old, damaged middle pan cover and any associated drawers.

2. Transfer Components (if applicable):

- If your original pan cover had a glass shelf, carefully remove it from the old frame.
- Transfer the humidity control slider, front/rear gaskets, and track wheels from the old pan cover to the new YesParts WR32X26246 frame. These components are typically designed to snap or slide into place. Ensure they are securely fitted.

3. **Install the New Pan Cover:**

- Insert the glass shelf (if applicable) into the designated grooves of the new YesParts pan cover.
- Carefully slide the assembled new pan cover into its position within the refrigerator. Ensure it sits level and is properly supported by the refrigerator's internal rails or supports.

4. **Reassemble and Test:**

- Reinsert any crisper or deli drawers that sit beneath the pan cover. Ensure they slide smoothly.
- Plug the refrigerator back into the power outlet.
- Verify that the pan cover is stable and that any humidity control mechanisms (if transferred) operate correctly.

5. **Operating Instructions**

- The middle pan cover primarily serves as a structural support for shelves and a cover for crisper drawers, often integrating humidity control. Once installed, its operation is passive.
- **Humidity Control:** If your original pan cover had a humidity control slider and you transferred it, adjust this slider as needed to regulate humidity levels within the crisper drawer. Moving the slider typically opens or closes a vent, allowing more or less air circulation.
 - **Weight Distribution:** Avoid placing excessively heavy items directly on the pan cover, especially if it supports a glass shelf, to prevent cracking or damage.

6. **Maintenance and Care**

- Regular cleaning will help maintain the appearance and hygiene of your refrigerator pan cover.
- **Cleaning:** Wipe the pan cover with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or harsh chemicals, as these can damage the plastic.
 - **Drying:** Ensure the pan cover is completely dry before placing items back on it or reinserting drawers.
 - **Inspection:** Periodically inspect the pan cover for any signs of wear, cracks, or damage.

7. **Troubleshooting**

If you encounter issues after installing the new pan cover, consider the following:

Problem	Possible Cause	Solution
Pan cover does not fit properly.	Incorrect model compatibility; not fully seated.	Double-check your refrigerator model number against the compatible models listed for WR32X26246. Ensure the pan cover is fully pushed into its designated slots or rails.
Drawers do not slide smoothly.	Missing or improperly installed track wheels/glides; pan cover not level.	Ensure all original track wheels/glides were transferred and correctly installed onto the new pan cover. Verify the pan cover is level and not obstructed.
Humidity control not working.	Humidity slider not transferred or improperly installed.	Confirm the original humidity control slider was transferred and correctly snapped into place on the new pan cover.

8. **Specifications**

- **Part Number:** WR32X26246 (YesParts Model: YP-WR32X26246)

- **Replaces Part Numbers:** WR32X10184, PS11766703, WR32X10151
- **Material:** Durable Plastic
- **Compatibility:** Designed for various GE refrigerator models (refer to product listing for full compatibility list).
- **Components Included:** Middle Pan Cover Frame (plastic only)
- **Components Not Included:** Glass shelf, humidity control slider, front/rear gaskets, track wheels.

9. Warranty and Support

For information regarding warranty coverage or to obtain technical support, please refer to the original purchase documentation or contact YesParts customer service directly through their official website or the retailer from whom the product was purchased. Please have your model number (YP-WR32X26246) and purchase date available when contacting support.

© 2024 YesParts. All rights reserved.
This manual is for informational purposes only. YesParts is not responsible for any damage or injury resulting from improper installation or use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question