

**Amica 1.527-150.1**

# Amica Suracon VM7001 Vacuum Cleaner User Manual

Model: 1.527-150.1

## WELCOME

Thank you for choosing the Amica Suracon VM7001 Vacuum Cleaner. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions carefully before operating the appliance.
- Do not use outdoors or on wet surfaces. This appliance is for indoor, dry use only.
- Unplug from outlet when not in use and before servicing or cleaning.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

## PRODUCT OVERVIEW AND COMPONENTS

---

The Amica Suracon VM7001 is a powerful and efficient vacuum cleaner designed for various cleaning tasks. It comes with several attachments to ensure thorough cleaning on different surfaces.



Image: The Amica Suracon VM7001 vacuum cleaner unit, flexible hose, telescopic tube, floor brush, crevice tool, upholstery brush, and a spare filter.

## Main Components

- Main Unit (Motor, Dust Compartment, Controls)
- Flexible Hose
- Telescopic Tube
- Floor Brush (for hard floors and carpets)
- Crevice Tool
- Upholstery Brush
- HEPA 13 Filter
- Dust Bag (or reusable cloth bag)

## SETUP GUIDE

---

### Unpacking

Carefully remove all components from the packaging. Retain the packaging for future storage or transport.

## Assembly

1. Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. Attach the telescopic tube to the handle end of the flexible hose. Extend the telescopic tube to a comfortable length by pressing the release button and pulling.
3. Select the desired cleaning attachment (e.g., floor brush) and firmly attach it to the end of the telescopic tube.



Image: Side view of the Amica Suracon VM7001 vacuum cleaner, showing the hose connection point and wheels.

## Power Connection

1. Extend the power cord from the main unit.
2. Plug the power cord into a suitable electrical outlet (220-240V, 50/60Hz).

## OPERATING YOUR VACUUM CLEANER

---

### Powering On/Off

To turn the vacuum cleaner on, press the power button located on the main unit. Press it again to turn the appliance off.

### Adjusting Suction Power

The Amica Suracon VM7001 features adjustable suction power to suit different cleaning needs.



Image: Close-up of the control panel with '+' and '-' buttons for suction power adjustment, and icons indicating different surface types (e.g., hard floor, carpet, upholstery).

- Use the + button to increase suction power for deep cleaning carpets or heavily soiled areas.
- Use the - button to decrease suction power for delicate surfaces, curtains, or light cleaning.
- The display panel shows the current suction level or recommended setting for different surfaces.

## Using Attachments

- **Floor Brush:** Ideal for daily cleaning of hard floors, tiles, and low-pile carpets.
- **Crevice Tool:** Perfect for reaching narrow gaps, corners, and edges, such as between sofa cushions or along skirting boards.
- **Upholstery Brush:** Designed for cleaning fabric surfaces like sofas, armchairs, and curtains.

## MAINTENANCE AND CARE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### Cleaning the Dust Bag/Container

The vacuum cleaner is equipped with a dust bag. Replace the dust bag when the dust bag indicator on the main unit signals it is full, or when suction power noticeably decreases.

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust compartment cover.
3. Carefully remove the full dust bag and dispose of it.
4. Insert a new dust bag, ensuring it is correctly seated in the holder.
5. Close the dust compartment cover securely.

### Filter Maintenance

The Amica Suracon VM7001 uses a HEPA 13 filter, which should be cleaned or replaced periodically.



Image: Top view of the Amica Suracon VM7001 vacuum cleaner, highlighting the filter compartment access.

1. Unplug the vacuum cleaner.
2. Locate the filter compartment (usually at the rear or top of the unit).
3. Remove the HEPA filter. Depending on the filter type, you may gently tap it to remove loose dust or rinse it under cold running water (if washable).
4. Allow washable filters to air dry completely for at least 24 hours before reinserting. Do not use a hairdryer or other heating devices.
5. Replace the filter if it is heavily soiled or damaged.

## Cleaning the Exterior

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## TROUBLESHOOTING GUIDE

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Low suction power.	Full dust bag; Clogged filter; Blockage in hose/tube/attachment.	Replace dust bag. Clean or replace filter. Check hose, tube, and attachments for blockages and remove them.
Unusual noise during operation.	Blockage in fan/motor area; Damaged motor.	Turn off and unplug. Check for and remove any blockages. If noise persists, contact customer service.
Dust escaping from the vacuum cleaner.	Dust bag not installed correctly; Filter not in place or damaged.	Ensure dust bag is correctly seated. Check and properly install or replace filters.

## TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Amica
Model Number	1.527-150.1
Product Dimensions	50 x 50 x 28 cm
Weight	250 Grams
Special Feature	Lightweight
Filter Type	Cloth (HEPA 13)
Cordless	No
Form Factor	Canister
First Available Date	March 29, 2021

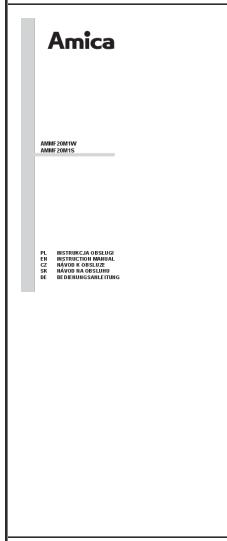
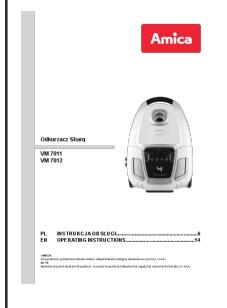
## WARRANTY AND CUSTOMER SUPPORT

Amica products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical assistance, spare parts, or warranty claims, please contact Amica customer support. Contact details can typically be found on the official Amica website or on your purchase receipt.

*Please have your model number (VM7001 / 1.527-150.1) and purchase date ready when contacting support.*

### Related Documents - 1.527-150.1

	<p><a href="#"><u>Amica EGSPU 500 920-1 E Bedienungsanleitung</u></a></p> <p>Diese Bedienungsanleitung bietet detaillierte Anweisungen für den Amica EGSPU 500 920-1 E Geschirrspüler, einschließlich Installation, Bedienung, Wartung und Fehlerbehebung. Sorgen Sie für eine sichere und effiziente Nutzung Ihres Geräts.</p>
	<p><a href="#"><u>Amica EGSPV 587 921 Bedienungsanleitung – Ihr Leitfaden für den Geschirrspüler</u></a></p> <p>Entdecken Sie die Amica EGSPV 587 921 Bedienungsanleitung. Finden Sie detaillierte Informationen zur Installation, Bedienung, Reinigung und Wartung Ihres Amica Geschirrspülers für optimale Leistung und Langlebigkeit.</p>

	<p><a href="#"><u>Amica GSP 531 100 E Bedienungsanleitung</u></a></p> <p>Diese Bedienungsanleitung bietet detaillierte Informationen zur Installation, Bedienung, Wartung und Fehlerbehebung des Amica GSP 531 100 E Geschirrspülers. Erfahren Sie mehr über Sicherheitsvorkehrungen, Programme und umweltfreundliche Aspekte.</p>
	<p><a href="#"><u>Amica EGSPV 597 916 Bedienungsanleitung</u></a></p> <p>Diese Bedienungsanleitung bietet detaillierte Informationen zur sicheren Installation, Bedienung und Wartung des Amica Geschirrspülers EGSPV 597 916. Erfahren Sie mehr über Programme, Funktionen und Fehlerbehebung.</p>
	<p><a href="#"><u>Amica AMMF20M1W / AMMF20M1S - Instrukcja Obsługi</u></a></p> <p>Szczegółowa instrukcja obsługi dla kuchenek mikrofalowych Amica modeli AMMF20M1W i AMMF20M1S. Zawiera informacje o bezpieczeństwie, instalacji, obsłudze, danych technicznych i konserwacji.</p>
	<p><a href="#"><u>Amica Sharq VM 7011 VM 7012 Vacuum Cleaner Operating Instructions</u></a></p> <p>Operating instructions and safety guide for the Amica Sharq VM 7011 and VM 7012 vacuum cleaner. Learn about product features, operation, cleaning, maintenance, and warranty.</p>