

[Manuals.plus](#) /

› [DERCASS](#) /

› Instruction Manual for DERCASS Wooden House Bed, Twin Size

DERCASS WF197557

Instruction Manual

DERCASS Wooden House Bed, Twin Bed Frame with Roof (White)

PRODUCT OVERVIEW

The DERCASS Wooden House Bed is a charming and functional twin bed frame designed with a whimsical house shape, perfect for children's bedrooms or guest rooms. Its low height ensures easy access and enhanced safety for young users. Constructed from high-quality pine wood and MDF, this bed frame offers durability and stability. The design encourages creativity, allowing for personalized decoration. This manual provides essential information for assembly, proper use, maintenance, and troubleshooting.



Figure 1: DERCASS Wooden House Bed, Twin Size, in a bedroom setting. This image illustrates the bed's overall appearance and how it fits into a room.

SETUP AND ASSEMBLY

This bed frame requires assembly. All necessary hardware and clear instructions are included in the package. It is recommended to assemble the bed with at least two people.

Before You Begin:

- Verify all parts are present by checking against the parts list provided in your package.
- Ensure you have a clean, spacious area for assembly.
- Keep children and pets away from the assembly area to prevent accidents.
- Tools typically required: Phillips head screwdriver (not included).

Assembly Steps:

1. **Unpack and Identify Components:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent scratches. Identify each part using the provided diagram.



Figure 2: Main frame components of the DERCASS Wooden House Bed. This shows the primary wooden beams that form the house structure.

2. **Assemble the Base Frame:** Connect the side rails and end rails to form the rectangular base of the bed. Secure them using the provided bolts and an Allen wrench (if included) or screwdriver. Ensure all connections are snug but do not overtighten.
3. **Attach the House Structure:** Mount the vertical posts and roof beams to the assembled base frame. Follow the numerical sequence in your instruction manual to ensure correct alignment of the pre-drilled holes.



Figure 3: Detail of a secured joint on the bed frame. This illustrates how the wooden components are connected.

4. **Install the Slats:** Place the wooden slats across the bed frame, ensuring they are evenly spaced and secured to the side rails. The bed comes with 6 slats.



Figure 4: View of the wooden slats installed on the bed frame. These slats provide support for the mattress.

5. **Final Tightening and Inspection:** Once all parts are assembled, gently tighten all bolts and screws. Do not overtighten, as this can damage the wood. Inspect the entire frame to ensure it is stable and all connections are secure.

Note: If you encounter any difficulties during assembly, refer to the detailed instruction manual included in your package or contact customer support.

OPERATING INSTRUCTIONS (PROPER USE)

The DERCASS Wooden House Bed is designed for sleeping and resting. To ensure longevity and safety, please adhere to the following guidelines:

- **Mattress Compatibility:** Use a twin-size mattress with a recommended thickness of 8-10 inches. A spring box is not needed for this bed frame.
- **Weight Capacity:** The bed is designed to support a maximum weight of 300 lbs (approximately 136 kg). Do not exceed this limit.
- **Safe Use:**
 - Do not allow jumping on the bed.
 - Ensure the mattress fits snugly within the frame to prevent gaps.
 - Periodically check all bolts and screws to ensure they remain tight.
- **Placement:** Place the bed on a flat, level surface to prevent wobbling and ensure stability.

MAINTENANCE

Regular maintenance will help preserve the appearance and structural integrity of your DERCASS Wooden House Bed.

- **Cleaning:** Wipe the bed frame with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the wood finish.
- **Hardware Check:** Every 3-6 months, inspect all bolts, screws, and connections. Tighten any that have become loose.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause wood to fade or crack. Position the bed away from direct sunlight if possible.
- **Humidity Control:** Maintain a stable room temperature and humidity level to prevent wood warping or cracking.

TROUBLESHOOTING

If you encounter any issues with your DERCASS Wooden House Bed, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Bed wobbles or feels unstable.	Loose connections or uneven floor.	Ensure all bolts and screws are securely tightened. Move the bed to a level surface.
Squeaking noises.	Loose hardware or friction between parts.	Tighten all hardware. If squeaking persists, disassemble and reassemble the affected section, ensuring all parts are correctly aligned.
Missing parts during assembly.	Packaging error or lost during unpacking.	Double-check all packaging materials. Contact DERCASS customer support with your purchase details.

SPECIFICATIONS

Detailed specifications for the DERCASS Wooden House Bed (White):

- Model Number:** WF197557
- Brand:** DERCASS
- Material:** MDF and Pine Wood
- Color:** White
- Bed Dimensions (L x W):** 76.1 inches x 41.5 inches
- Overall Product Dimensions (L x W x H):** 76.1 inches x 41.5 inches x 70.8 inches
- Number of Slats:** 6
- Weight Capacity:** 300 lbs (136 kg)
- Recommended Mattress Thickness:** 8-10 inches
- Assembly Required:** Yes
- Origin:** Vietnam
- Item Weight:** 51.5 pounds
- UPC:** 768297951039

SIZE : INCH

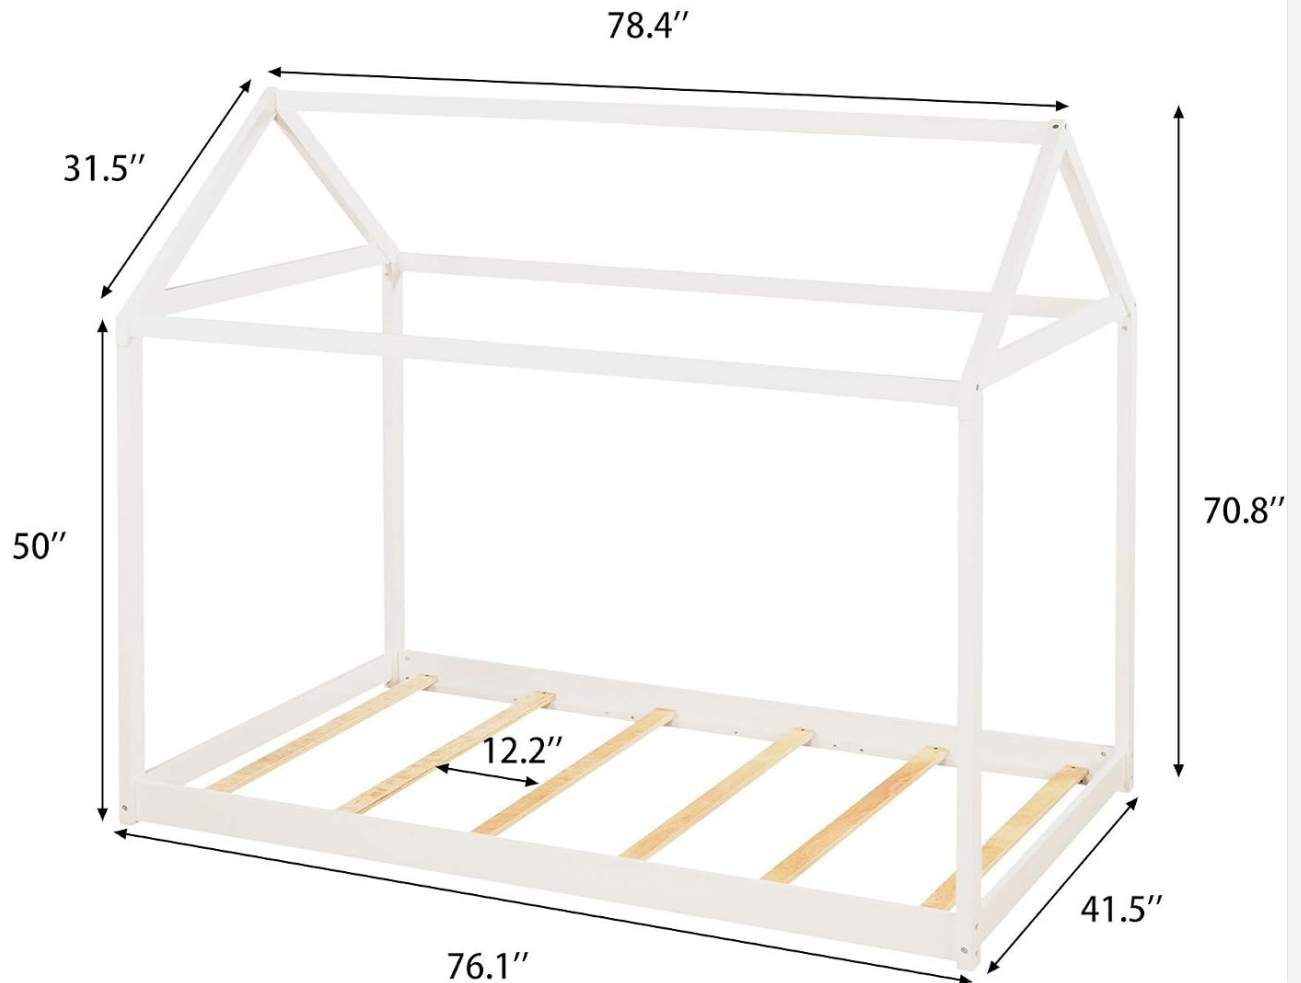


Figure 5: Dimensional drawing of the DERCASS Wooden House Bed. This diagram provides precise measurements for length, width, and height.

WARRANTY INFORMATION

Specific warranty details for the DERCASS Wooden House Bed are typically provided with your purchase documentation or can be obtained directly from the manufacturer. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other inquiries regarding your DERCASS Wooden House Bed, please contact the retailer where you purchased the product or the DERCASS manufacturer directly.

Please have your model number (WF197557) and purchase date ready when contacting support.

© 2024 DERCASS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question