

WINFLIKE RC-803M

RC-803M Replacement Remote Control User Manual

Brand: WINFLIKE | Model: RC-803M

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the proper use and maintenance of your WINFLIKE RC-803M Replacement Remote Control. This remote is designed as a direct replacement for original Onkyo AV Receiver remote models, offering seamless compatibility without the need for complex programming.

The RC-803M is engineered for ease of use, featuring a comfortable grip, sensitive keys, and immediate functionality upon battery insertion. It is compatible with various Onkyo AV Receiver models, including TX-NR609, TX-NR579, HT-S7409, HT-S8409, and TX-NR609B.

2. SETUP: BATTERY INSTALLATION

The RC-803M remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with compatible Onkyo AV Receivers. No programming or pairing is required.



Figure 2.1: Side view of the remote control, illustrating the battery compartment.

3. OPERATING INSTRUCTIONS

The RC-803M remote control provides full functionality for your compatible Onkyo AV Receiver. Simply point the remote towards your receiver and press the desired button.



Figure 3.1: Front view of the RC-803M remote control with button layout.

3.1 Key Functions Overview

- **Power Button:** Turns the AV Receiver on or off.
- **Input Selectors (e.g., BD/DVD, VCR/DVR, CBL/SAT, GAME, PC, AUX, TUNER, NET, USB, TV/CD):** Selects the desired audio/video input source.
- **Volume Up/Down:** Adjusts the master volume level of the receiver.
- **Muting:** Mutes or unmutes the audio output.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **Setup:** Accesses the receiver's setup menu.
- **Return:** Goes back to the previous menu or screen.
- **Playback Controls (Play, Pause, Stop, Skip, Fast Forward, Rewind):** Controls media playback.
- **Numeric Keypad (0-9, +10, D.TUN):** For direct channel entry or other numeric inputs.
- **Dimmer:** Adjusts the brightness of the receiver's display.
- **Sleep:** Sets a sleep timer for the receiver.

3.2 Compatible Onkyo AV Receiver Models

This RC-803M replacement remote control is fully compatible with the following Onkyo AV Receiver models:

- TX-NR609
- TX-NR579
- HT-S7409
- HT-S8409
- TX-NR609B

If your Onkyo AV Receiver model is listed above, the RC-803M will function as a direct replacement without any additional setup.

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the appearance and functionality of your remote control, clean it regularly with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or it stops functioning. Always replace both AAA batteries at the same time with new ones. Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

If you experience issues with your RC-803M remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).

- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote control and the AV Receiver's infrared sensor. Ensure you are within range and pointing the remote directly at the receiver.

- **Specific Buttons Not Working:**

- This remote is pre-programmed for the listed Onkyo models. Ensure your receiver model is among the compatible list.
- Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering.

- **Interference:**

- Strong light sources (like direct sunlight or certain types of fluorescent lights) can sometimes interfere with infrared signals. Try operating the remote in different lighting conditions.

If the issue persists after trying these steps, please contact customer support for further assistance.

6. SPECIFICATIONS

Model Number	RC-803M (WL-RC-803M-S2-210812)
Brand	WINFLIKE
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6 x 2 x 0.5 inches (approximately)
Item Weight	0.7 ounces (approximately)
Special Features	Ergonomic, Lightweight, No Programming Required
Compatible Devices	Onkyo AV Receivers (TX-NR609, TX-NR579, HT-S7409, HT-S8409, TX-NR609B)

7. WARRANTY AND SUPPORT

WINFLIKE is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For any questions, concerns, or technical support regarding your RC-803M Replacement Remote Control, please contact WINFLIKE customer service. Contact information can typically be found on the product packaging or the retailer's website where the product was purchased.

We are dedicated to assisting you with any issues you may encounter and ensuring your satisfaction with our product.

