

[Manuals.plus](#) /

› [Anthter](#) /

› Anthter 1600W Professional Blender User Manual

Anthter ANTH-1600W

Anthter 1600W Professional Blender Instruction Manual

Model: ANTH-1600W

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Anthter Professional Blender. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the blender from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or other liquids. Clean only with a damp cloth.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A tamper may be used only when the blender is not running.
- Ensure the lid is securely in place before operating the blender.
- Do not blend hot liquids that exceed the 'HOT LIQUID MAXIMUM' mark on the container to prevent overflow and scalding.
- This appliance is equipped with overheat and overload protection. If the motor stops due to overheating or overloading, unplug the unit and allow it to cool down for at least 15 minutes before resuming operation.
- The blender features a safety lock mechanism. The motor will not operate unless the container is correctly seated on the motor base.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.

PRODUCT OVERVIEW

The Anthter 1600W Professional Blender is designed for efficient and versatile blending, featuring a powerful motor and durable components.





Figure 1: Anthter 1600W Professional Blender. This image shows the complete blender unit, including the motor base and the 68 oz pitcher filled with various fruits and vegetables, ready for blending.

Key Components:

- **Motor Base:** Houses the powerful 1600W motor capable of up to 30,000 RPM. Features control knob, power switch, and pre-programmed buttons.
- **68 oz / 2 L BPA-Free Tritan Container:** Durable and lightweight pitcher with measurement markings for precise ingredient addition.
- **6 Stainless Steel Blades:** Sharp, multi-layer blades designed to efficiently break down ingredients, including ice and tough produce.
- **Lid with Removable Cap:** Secures ingredients during blending and allows for adding items while blending.
- **Tamper:** Used to push down ingredients towards the blades for smoother blending, especially with thick mixtures.



Figure 2: Detailed view of the 6-blade stainless steel assembly. These sharp, multi-layered blades are engineered for efficient processing of

various ingredients.

SETUP

Before first use, and after each use, ensure all parts are clean.

1. Unpack all components from the packaging.
2. Wash the container, lid, and tamper with warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
3. Place the motor base on a clean, dry, and stable surface.
4. Carefully place the container onto the motor base. Ensure it is properly aligned and securely seated. You will feel it lock into place, activating the safety mechanism.
5. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Anthter blender offers variable speed control and pre-programmed settings for optimal blending results.



Figure 3: Control panel of the Anthter Professional Blender. This panel features intuitive controls for power, speed adjustment, pulse function, and dedicated settings for common blending tasks.

General Blending:

1. Add ingredients to the container. Ensure ingredients do not exceed the maximum fill line. For best results, add liquids first, then soft ingredients, followed by harder ingredients and ice.
2. Securely place the lid on the container.
3. Turn the main power switch (ON/OFF) to the 'ON' position. The indicator lights will illuminate.
4. **Variable Speed Control:** Rotate the central knob to adjust the blending speed from low to high. Start at a lower speed and gradually increase to achieve desired consistency.
5. **Pulse Function:** For quick bursts of power or to chop ingredients, switch the 'PULSE' toggle to the 'PULSE' position and hold. Release to stop. This is ideal for crushing ice or chopping nuts.
6. Once blending is complete, turn the main power switch to the 'OFF' position and unplug the blender.

Pre-programmed Settings:

The blender includes dedicated buttons for common blending tasks:

- **ICE:** Press this button to activate a program specifically designed for crushing ice. The blender will run through a cycle optimized for ice.
- **SMOOTHIE:** Select this program for making smooth and consistent smoothies. The cycle is pre-set for optimal smoothie texture.
- **SOUP:** This setting is designed for blending soups, providing a smooth consistency.

To use a pre-programmed setting, simply press the corresponding button after turning the blender ON. The blender will automatically run through its cycle and stop when complete.



Figure 4: Illustration of efficient blending action. The powerful motor and blade design create a strong vortex, ensuring all ingredients are thoroughly processed for a smooth consistency.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Anthter blender.

Auto-Cleaning Function:

The 68oz/2L BPA-Free Tritan jar features a convenient self-cleaning function:

1. After use, rinse the container to remove large food particles.
2. Fill the container halfway with warm water and add a drop of dish soap.
3. Secure the lid on the container and place it on the motor base.
4. Turn the blender ON and select a medium speed, or use the 'SMOOTHIE' pre-programmed setting, and let it run for 30-60 seconds.
5. Pour out the soapy water, rinse the container thoroughly with clean water, and allow it to air dry.



Figure 5: Auto-cleaning function in action. The image shows water swirling rapidly within the pitcher, illustrating how the self-cleaning feature effectively cleans the container and blades with minimal effort.

General Cleaning:

- Always unplug the blender before cleaning.

- Wipe the motor base with a clean, damp cloth. Do not use abrasive cleaners or immerse the base in water.
- The container, lid, and tamper are top-rack dishwasher safe, or can be hand-washed with warm, soapy water.
- Ensure all parts are completely dry before storing.

TROUBLESHOOTING

If you encounter issues with your Anthter blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Power switch off; Container not properly seated; Overload protection activated.	Ensure power cord is securely plugged in. Turn the main power switch to 'ON'. Verify the container is correctly locked onto the base. If motor stopped, unplug and let cool for 15 minutes.
Blades are not spinning.	Too many ingredients; Ingredients are too thick; Overload protection activated.	Reduce the amount of ingredients. Add more liquid. Use the tamper to push ingredients towards the blades. Unplug and let motor cool if overloaded.
Loud noise or vibration during operation.	Container not properly seated; Unstable surface; Hard ingredients.	Ensure the container is securely locked onto the motor base. Place the blender on a flat, stable surface. This blender is powerful, some noise is normal, especially with hard ingredients.
Leakage from the bottom of the container.	Blades assembly not tightened; Seal ring damaged or missing.	Ensure the blade assembly is securely tightened to the container. Check if the seal ring is properly in place and undamaged.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Anthter
Model	ANTH-1600W
Power	1600W
RPM	Up to 30,000 RPM
Blade Material	6 Stainless Steel Blades
Container Capacity	68 oz / 2 Liters
Container Material	BPA-Free Tritan

Feature	Detail
Special Features	Variable Speed Control, Pulse Function, Pre-programmed Settings (Ice, Smoothie, Soup), Auto Cleaning, Overheat/Overload Protection, Safety Lock
Dimensions (Package)	15.75 x 12.25 x 11 inches
Item Weight	11.48 pounds
Power Source	Corded Electric
UPC	719710484306

WARRANTY AND SUPPORT

Your Anthter Professional Blender is backed by a **3-YEAR WARRANTY** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact our customer care team. Please have your model number (ANTH-1600W) and proof of purchase ready when contacting support.

Contact information for customer support can typically be found on the product packaging or the official Anthter website.

© 2023 Anthter. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

