

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [iHome](#) /

> [iHome StickVac SV1 Cordless 3-in-1 Stick Vacuum Cleaner User Manual](#)

iHome StickVac SV1

iHome StickVac SV1 Cordless 3-in-1 Stick Vacuum Cleaner User Manual

Model: StickVac SV1

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors.

PACKAGE CONTENTS

Your iHome StickVac SV1 package includes the following components:

- Main Motor Unit
- Extension Wand
- Motorized Floor Brush with LED Path Light
- Mini Power Brush
- Crevice Tool
- Surface Tools (Upholstery Tool, Bristle Brush)
- Wall Mount Kit
- Power Adapter



Image: All components included with the iHome StickVac SV1.

PRODUCT OVERVIEW

The iHome StickVac SV1 is a versatile 3-in-1 cordless vacuum cleaner designed for various cleaning tasks. It features a powerful motor, multi-surface brush with LED lights, and a 3-stage HEPA filtration system.



Image: The iHome StickVac SV1 in use as a stick vacuum.

SETUP AND ASSEMBLY

Follow these steps to assemble your iHome StickVac SV1:

1. **Assemble the Stick Vacuum:** Insert the extension wand into the main motor unit until it clicks into place. Then, attach the motorized floor brush to the other end of the extension wand, ensuring it locks securely.
2. **Convert to Handheld Vacuum:** To use as a handheld vacuum, detach the extension wand and motorized floor brush from the main motor unit. You can then directly attach accessories like the crevice tool or surface tools to the main motor unit.



Image: The iHome StickVac SV1 easily converts to a handheld vacuum for versatile cleaning.

CHARGING THE BATTERY

The iHome StickVac SV1 is powered by a rechargeable Lithium Ion battery, offering up to 35 minutes of runtime on a single charge. To charge the vacuum:

1. Mount the included wall mount kit in a convenient location near a power outlet.
2. Place the vacuum onto the wall mount.
3. Connect the power adapter to the charging port on the main motor unit and plug it into a wall outlet.
4. The battery indicator lights on the main unit will illuminate to show charging status. Ensure the vacuum is fully charged before first use.



Image: The iHome StickVac SV1 charging on its wall mount.

OPERATING INSTRUCTIONS

Stick Vacuum Mode

For general floor cleaning, attach the extension wand and motorized floor brush. The motorized brush is equipped with LED lights to illuminate dust and debris, making it easier to clean hard floors and carpets.

- Press the power button to turn on the vacuum.
- Select your desired power level (2 power levels available) using the control method on the handle.
- Guide the vacuum across your floor surfaces. The LED lights will help highlight dirt.

LIGHTWEIGHT AND CAPABLE

TRIGGER LOCK FOR CONTINUOUS POWER



Image: The motorized floor brush with LED lights illuminates debris on hard floors.

Handheld Vacuum Mode

For targeted cleaning of upholstery, stairs, or tight spaces, convert the unit to handheld mode and attach the appropriate accessory.

- Detach the extension wand and floor brush.
- Attach the crevice tool for narrow gaps, the upholstery tool for fabric surfaces, or the mini power brush for pet hair.
- Press the power button and clean the desired area.

Your browser does not support the video tag.

Video: Demonstrates the iHome StickVac SV1 in various cleaning scenarios, including its conversion to a handheld vacuum and use with different attachments.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dustbin

The dustbin has a capacity of 0.5 liters and is designed for easy emptying.

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button on the main motor unit.
3. Press the button to release the dustbin.
4. Hold the dustbin over a trash receptacle and open the bottom flap to empty debris.
5. Close the flap and reattach the dustbin to the main unit until it clicks.



Image: Easy emptying of the 0.5L capacity dustbin.

Cleaning the Filters

The vacuum features a 3-stage HEPA filtration system to capture fine dust particles.

1. Remove the dustbin from the main unit.
2. Carefully remove the filter components from the dustbin.
3. Tap the filters gently over a trash can to remove loose dirt. For a deeper clean, rinse the filters with cold water (do not use detergent).
4. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.



Image: Diagram of the 3-stage HEPA filtration system.

Cleaning the Brush Roll

Periodically check and clean the brush roll for tangled hair or debris.

1. Ensure the vacuum is off and disconnected from the charger.
2. Remove the motorized floor brush from the extension wand.
3. Locate the brush roll access cover and open it.
4. Remove the brush roll and clear any tangled hair or debris using scissors or a brush.
5. Reinsert the brush roll and close the access cover securely.

TROUBLESHOOTING

If you encounter issues with your iHome StickVac SV1, refer to the following common solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted	Charge the battery fully.
Low suction power	Dustbin is full or filters are clogged	Empty the dustbin and clean the filters.
Low suction power	Blockage in the nozzle, wand, or hose	Check for and remove any blockages.
Brush roll not spinning	Debris tangled in brush roll	Clean the brush roll as described in the maintenance section.

Problem	Possible Cause	Solution
Short battery runtime	Battery not fully charged or aging battery	Ensure full charge. If issue persists, battery may need replacement.

SPECIFICATIONS

- **Brand:** iHome
- **Model Name:** StickVac SV1
- **Special Feature:** HEPA, Lightweight, Portable
- **Filter Type:** HEPA Filter
- **Included Components:** Crevice Tools, Surface Tools, HandVac
- **Is Cordless?:** Yes
- **Capacity:** 0.5 Liters
- **Wattage:** 120 watts
- **Recommended Uses For Product:** Carpet, Hard Floor, Hardwood, Home
- **Form Factor:** Stick
- **Color:** White
- **Product Dimensions:** 10"L x 8"W x 41"H
- **Battery Life:** 35 minutes
- **Item Weight:** 3 pounds
- **Motor Horsepower:** 0.535 horsepower
- **Control Method:** Touch
- **Number of Power Levels:** 2
- **Indoor/Outdoor Usage:** Indoor
- **Vacuum Collection Technology:** Suction

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your product packaging or visit the official iHome website. Keep your purchase receipt as proof of purchase for any warranty claims.