

Bisofice A6

Bisofice Portable Mini Thermal Printer A6 User Manual

Model: A6

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Bisofice Portable Mini Thermal Printer A6. This compact device is designed for printing photos, labels, messages, lists, and more, utilizing thermal printing technology for inkless operation.



Image: The Bisofice Portable Mini Thermal Printer (brown model) shown alongside multiple rolls of thermal paper in white, pink, blue, and yellow.

2. PACKAGE CONTENTS

Upon opening your package, please verify that all items are present:

- Bisofice Portable Mini Thermal Printer A6
- USB Charging Cable
- Thermal Paper Rolls (quantity and types may vary based on package)



Image: The brown Bisofice Mini Thermal Printer, a single white thermal paper roll, and a USB charging cable, representing typical package contents.

3. SETUP GUIDE

3.1 Charging the Printer

 
Before initial use, fully charge the printer. Connect the provided USB cable to the printer's charging port and a compatible USB power source. The indicator light will show charging status.

3.2 Loading Thermal Paper

1. Gently slide open the printer cover.
2. Insert a thermal paper roll into the compartment, ensuring the printing side faces the print head.
3. Pull a small amount of paper out beyond the print head.
4. Close the printer cover securely.

Details

Slide open the cover
to replace the roll of
paper easily

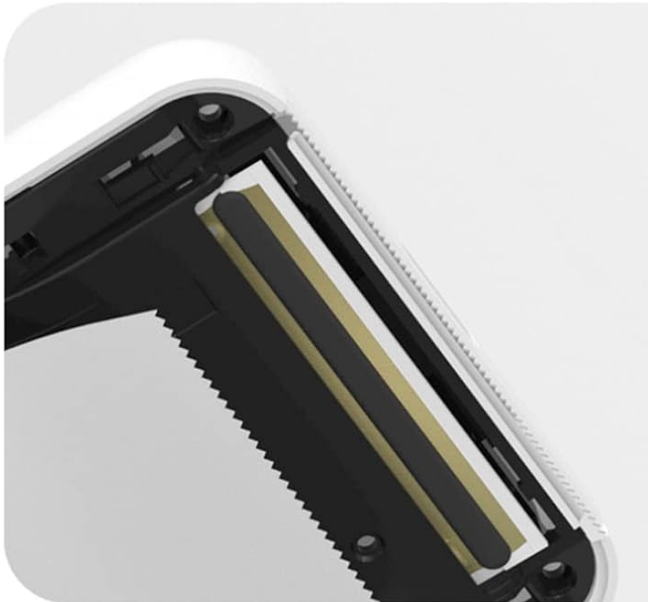

7000 rolls print
lifecycle without ink



Image: A visual guide demonstrating the process of opening the printer cover and correctly inserting a thermal paper roll.

3.3 App Installation and Connection

The Bisofice Mini Thermal Printer operates via a dedicated mobile application. Follow these steps to install and connect:

1. **Download the App:** Search for "PeriPage" in the Google Play Store (for Android) or Apple App Store (for iOS). Alternatively, scan the QR code provided in the product packaging or on the manufacturer's website. A direct download link can be found at <https://www.ileadtek.com/download/app/peripage.html>.
2. **Install and Open:** Install the app on your smartphone and open it.
3. **Enable Bluetooth:** Ensure Bluetooth is enabled on your smartphone.
4. **Pair Device:** Within the PeriPage app, navigate to the device connection section and select your printer (typically identified by its model or a unique ID). The printer supports Wireless BT 4.0 connectivity.

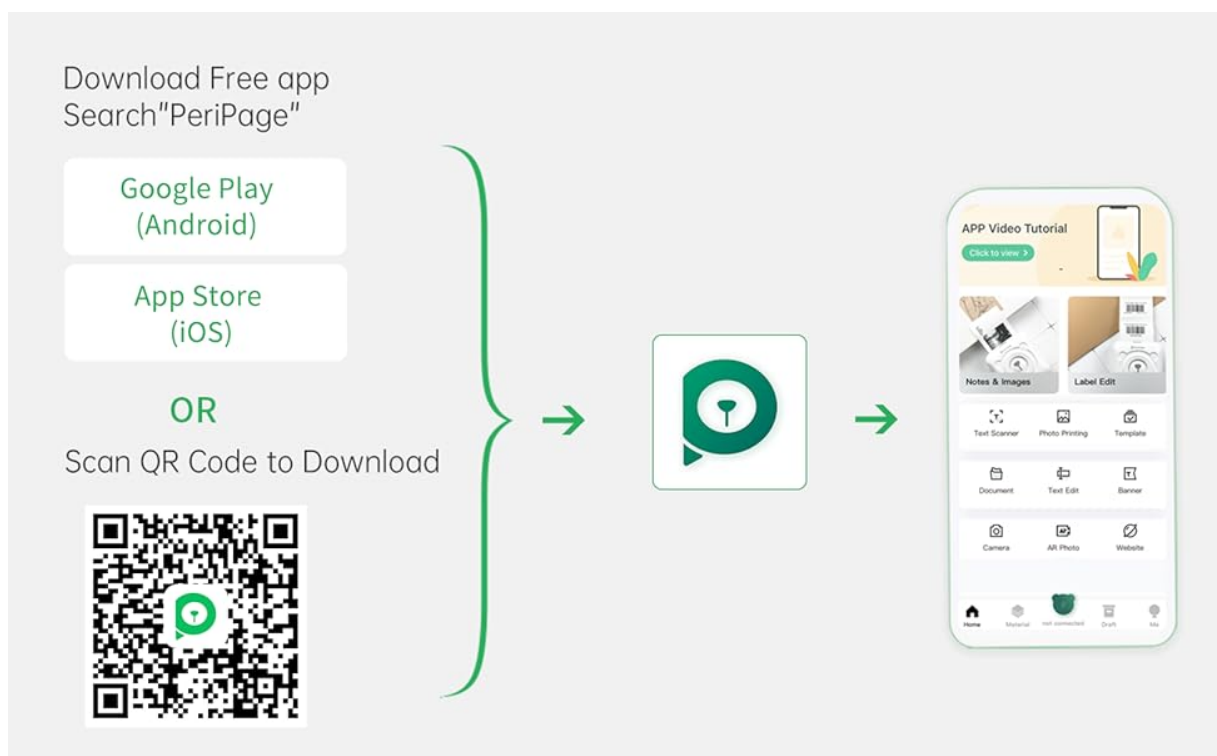 


Image: A graphic illustrating the various methods to download the PeriPage application, including app store icons and a QR code.

4. OPERATING INSTRUCTIONS

4.1 Basic Printing

Once connected, you can use the PeriPage app to print various content:

- **Photo Printing:** Select a photo from your gallery within the app. Adjust settings like contrast and size, then initiate printing.
- **Text and Document Printing:** Type text directly, import documents, or use the OCR text recognition feature to convert images of text into editable and printable content.
- **Labels, Lists, Memos:** The app offers templates for creating labels, to-do lists, and short memos.
- **Web Printing:** Print content directly from web pages.



List



Document



Picture



Webpage



Label



Memo



Notes



BT Connection

Image: The pink Bisofice Mini Thermal Printer surrounded by icons indicating its diverse functionalities, such as printing lists, documents, pictures, webpages, labels, memos, and notes, all connected via Bluetooth.

Free APP Control

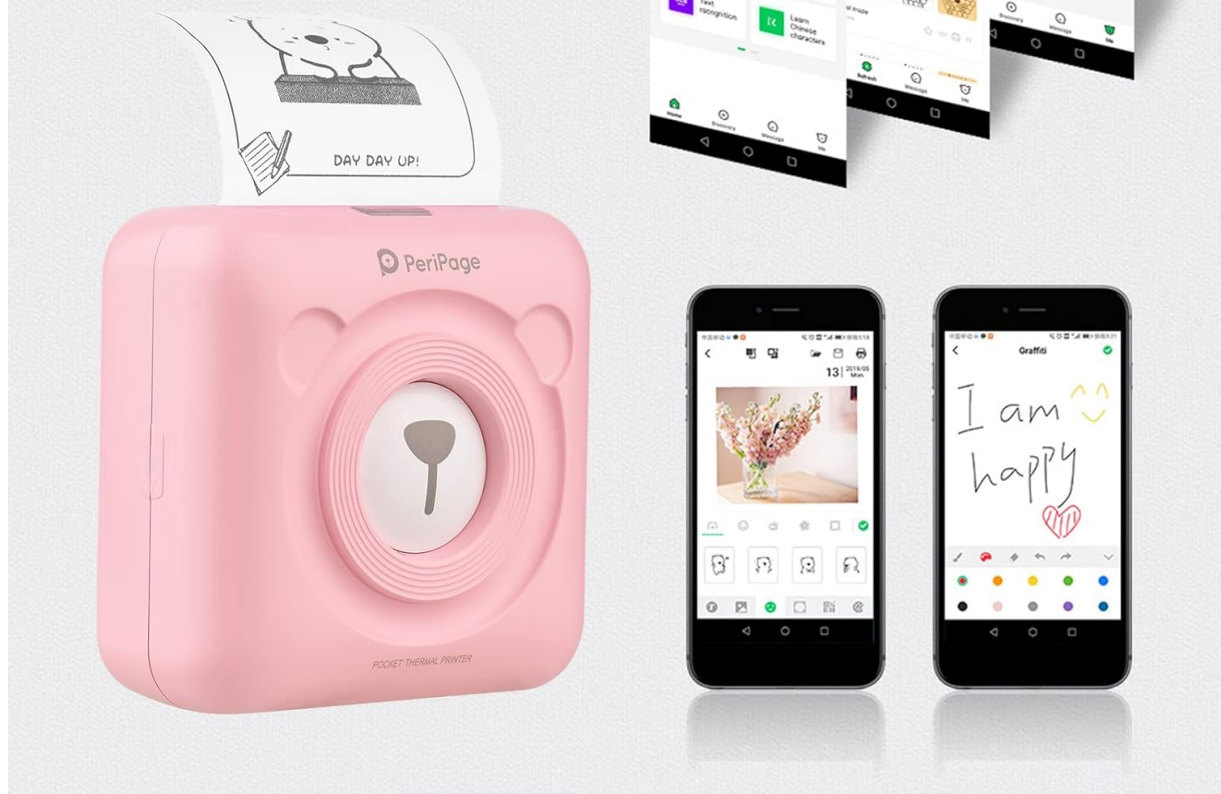 


Image: A pink Bisofice Mini Thermal Printer positioned next to two smartphones displaying the PeriPage app interface, highlighting its app-controlled operation.

4.2 Advanced Features

- **AR Photo:** Utilize the augmented reality feature within the app to add interactive elements to your printed photos.
- **Customization:** The app provides a variety of fonts and themes to personalize your prints.



Image: A pink Bisofice Mini Thermal Printer actively printing a photo, with several other black and white printed images scattered around it, showcasing its photo printing capability.

5. MAINTENANCE

5.1 Cleaning the Print Head

To ensure optimal print quality, periodically clean the print head. Use a soft, lint-free cloth lightly dampened with isopropyl alcohol. Gently wipe the print head surface. Ensure the printer is powered off and completely dry before use.

5.2 Paper Storage

Store thermal paper in a cool, dry place away from direct sunlight and heat to prevent fading and damage.

5.3 Battery Care

For long-term battery health, avoid fully discharging the battery frequently. If storing the printer for an extended period, charge it to approximately 50% and recharge every few months.

6. TROUBLESHOOTING

• **No Print/Blank Print:**

- Check if the paper is loaded correctly with the printing side facing the print head.
- Ensure the printer has sufficient battery charge.
- Verify the Bluetooth connection is active and stable.

• **Poor Print Quality:**

- Clean the print head as described in Section 5.1.
- Ensure you are using high-quality thermal paper.
- Adjust print density settings within the PeriPage app if available.

• **Connection Issues:**

- Restart both the printer and your smartphone.
- Forget the device in your phone's Bluetooth settings and re-pair.
- Ensure the printer is within the Bluetooth range of your device.

• **Paper Jam:**

- Power off the printer.
- Carefully open the cover and remove any jammed paper. Avoid tearing the paper inside the mechanism.
- Reload paper correctly and close the cover.

7. SPECIFICATIONS

Feature	Detail
Brand	Bisofice
Model Name	A6
Item Model Number	UWD4967851236115PW
Printing Technology	Thermal
Printer Output	Monochrome
Maximum Black and White Print Resolution	203 DPI
Print Media	Labels
Maximum Media Size	57mm x 30mm
Connectivity Technology	USB, Bluetooth 4.0
Hardware Interface	USB
Control Method	App
Compatible Devices	PC, Smartphones (iOS, Android)
Item Weight	188 Grams (6.6 ounces)
Batteries	1 Lithium Metal battery (included)


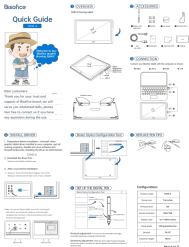 
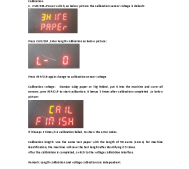 

8. WARRANTY INFORMATION

The Bisofice Portable Mini Thermal Printer A6 comes with a limited warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the documentation included with your purchase or contact the seller directly.

9. SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Bisofice customer support or the retailer from whom you purchased the product. You may also find additional resources and FAQs within the PeriPage application.

Related Documents - A6

	<p>BISOFICE Portable Projector Quick Installation and Use Guide</p> <p>Official quick installation and use guide for the BISOFICE Portable Projector. Learn about setup, settings, connectivity options like Wi-Fi, Bluetooth, and screen mirroring, and FCC compliance information.</p>
	<p>Bisofice 12HD-A Drawing Tablet: Quick Start Guide</p> <p>A comprehensive quick start guide for the Bisofice 12HD-A drawing tablet, covering setup, driver installation, pen configuration, and technical specifications.</p>
	<p>BISOFICE Money Counter Machine Calibration Guide</p> <p>Detailed instructions for calibrating the BISOFICE counterfeit bill detector and money counter machine, covering sensor voltage and length calibration steps for accurate operation.</p>
	<p>Bisofice K6 3W Laser Engraving Machine Parameters and Specifications</p> <p>Detailed technical specifications and engraving parameters for the Bisofice K6 3W laser engraving machine, covering various materials, settings, and performance notes for optimal laser engraving and cutting.</p>



[CAB Label Printers: EOS, A+, MACH4 Series - BBK Technical Overview](#)

Explore the range of CAB label printers from BBK, including the EOS, A+, and MACH4 series. Discover features, technical specifications, and models for industrial, logistics, and retail applications.