

[Manuals.plus](#) /

> [MoKo](#) /

> MoKo Universal Foldable Bluetooth Keyboard Instruction Manual

MoKo 840034676839

MoKo Universal Foldable Bluetooth Keyboard Instruction Manual

Model: 840034676839

INTRODUCTION

This manual provides detailed instructions for the MoKo Universal Foldable Bluetooth Keyboard. This portable keyboard is designed for convenience and compatibility across various operating systems, offering a comfortable typing experience for users on the go.

The keyboard features a U-shaped surface and a 166-degree ergonomic design with full-size keys, aiming to provide a smooth and tactile typing experience. It is suitable for travel and business use.

PACKAGE CONTENTS

- MoKo Universal Foldable Bluetooth Keyboard
- USB Charging Cable
- Instruction Manual (This document)

SETUP AND CHARGING

Charging the Keyboard

Before initial use, fully charge the keyboard. The built-in lithium battery provides approximately 60 hours of continuous operation or 30 days of standby time on a single charge. Charging typically takes less than 2 hours.

1. Locate the USB charging port on the keyboard.
2. Connect the included USB charging cable to the keyboard and to any standard USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light will illuminate during charging and turn off when fully charged.



EXCELLENT BATTERY LIFE

Consecutive 60-hour using time from a single charge and the standby time is up to 30 days.

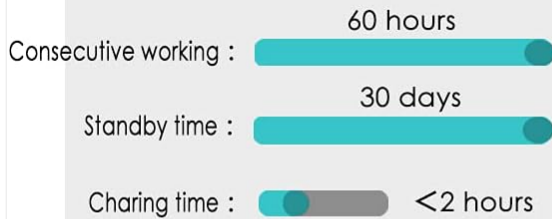


Image: Visual representation of battery life and charging time for the MoKo Foldable Keyboard.

Your browser does not support the video tag.

Video: Demonstrates the charging process and battery life features of the MoKo Foldable Keyboard.

Pairing with Your Device

The keyboard uses Bluetooth for wireless connection. Follow these steps to pair it with your device:

1. **Power On:** Unfold the keyboard. It will automatically power on. The power indicator light will turn on briefly.
2. **Enter Pairing Mode:** Press the **Fn** key and the **T** key simultaneously. The Bluetooth indicator light (blue LED) will start blinking, indicating the keyboard is in pairing mode.
3. **Enable Bluetooth on Your Device:** On your smartphone, tablet, or laptop, go to the Bluetooth settings and turn on Bluetooth.
4. **Select Keyboard:** In the list of available Bluetooth devices, select "Bluetooth Keyboard" or a similar name.
5. **Confirm Pairing:** If prompted, enter the displayed code on the keyboard and press **Enter**. The Bluetooth indicator light will stop blinking and remain solid for a few seconds, then turn off, indicating successful pairing.



MAGNETISM SWITCH

Unfold to turn on and fold to turn off, easy and hassle-free operation.



Close, Keyboard turns off.



Image: The MoKo Foldable Keyboard in its open (powered on) and closed (powered off) states, illustrating the magnetism switch.

Your browser does not support the video tag.

Video: Demonstrates the pairing process for the MoKo Foldable Keyboard, including entering pairing mode and connecting to a device.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Simply unfold the keyboard. It will automatically power on.
- **Power Off:** Fold the keyboard. It will automatically power off.

System Compatibility

The MoKo Foldable Keyboard is compatible with iOS, Android, and Windows operating systems. To optimize key functions for your specific operating system, use the following key combinations:

- **Fn + Q:** For Android devices

- **Fn + W:** For Windows devices
- **Fn + E:** For iOS devices (iPad, iPhone)

Note: This keyboard does not support Windows phones.



WIDE SYSTEM COMPATIBILITY

Applicable to iOS, Windows or Android system.
 (Note: Not support Windows phones.)




Image: Illustration of the keyboard's wide compatibility with Windows, iOS, and Android operating systems.

Ergonomic Design

The keyboard features an innovative 166-degree ergonomic design and scissor-switch key structure to provide a comfortable typing experience, reducing strain during extended use.

ERGONOMIC DESIGN

Innovative 166 °and the scissor switch structure design are to let you enjoy a new level of comfortable typing.

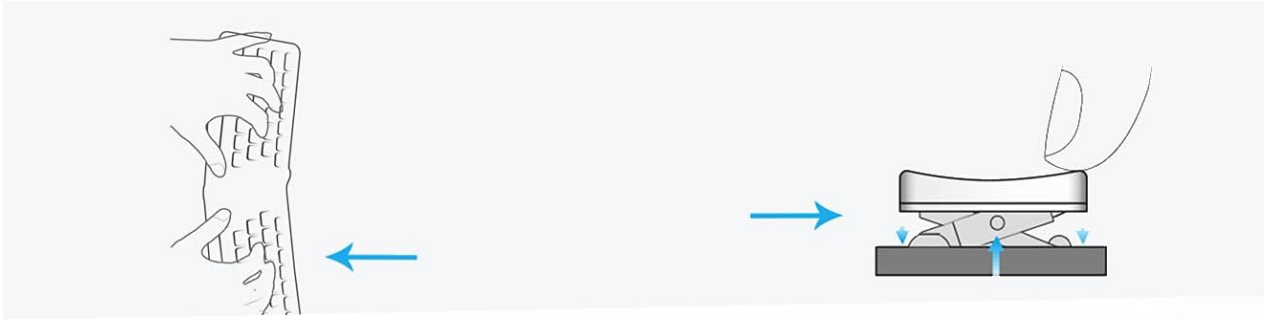

Innovative 166 °:
for comfortable typing



Image: Depiction of the 166-degree ergonomic design and scissor-switch mechanism for comfortable typing.

MAINTENANCE

- Keep the keyboard clean by wiping it with a soft, dry cloth.
- Avoid exposing the keyboard to liquids, extreme temperatures, or direct sunlight.
- Store the keyboard in its folded position when not in use to protect the keys and conserve battery.
- Charge the keyboard regularly, even if not used frequently, to maintain battery health.

TROUBLESHOOTING

Problem	Possible Solution
Keyboard does not power on.	Ensure the keyboard is unfolded. Check battery level and charge if necessary.

Problem	Possible Solution
Cannot pair the keyboard with my device.	<p>Ensure the keyboard is in pairing mode (blue LED blinking after pressing Fn+T).</p> <p>Make sure Bluetooth is enabled on your device.</p> <p>Ensure the keyboard is within the Bluetooth range (typically 10 meters).</p> <p>Forget previous Bluetooth connections on your device and try pairing again.</p> <p>Restart both the keyboard (fold and unfold) and your device.</p>
Keys are not responding or typing incorrectly.	<p>Check if the keyboard is properly connected via Bluetooth.</p> <p>Ensure the correct operating system mode is selected (Fn+Q for Android, Fn+W for Windows, Fn+E for iOS).</p> <p>Recharge the keyboard if the battery is low.</p> <p>Clean any debris from under the keys.</p>
Keyboard disconnects frequently.	<p>Ensure the keyboard is fully charged.</p> <p>Move closer to your device to ensure a strong Bluetooth signal.</p> <p>Avoid interference from other wireless devices.</p> <p>Try re-pairing the keyboard.</p>

SPECIFICATIONS

- **Brand:** MoKo
- **Model Number:** 840034676839
- **Connectivity Technology:** Bluetooth
- **Keyboard Description:** Wireless, Foldable
- **Compatible Devices:** Laptops, Tablets, Smartphones (iOS, Android, Windows)
- **Color:** Silver Gray
- **Style:** 64 Keys
- **Product Dimensions (Unfolded):** 12.9"L x 4"W x 0.23"H
- **Product Dimensions (Folded):** 6.2"L x 4"W x 0.5"H
- **Item Weight:** 6.2 ounces (176 g)
- **Material:** Acrylonitrile Butadiene Styrene
- **Power Source:** Rechargeable Battery
- **Battery Life:** Up to 60 hours continuous use, 30 days standby
- **Charging Time:** Less than 2 hours
- **Switch Type:** Scissor-Switch
- **Keyboard Layout:** QWERTY

WARRANTY AND SUPPORT

This product is sold without an explicit warranty. For any support inquiries or issues not covered in this manual, please refer to the retailer or manufacturer's customer service channels.

