



[Manuals.plus](#) /

› [Nillkin](#) /

› Nillkin CamShield Pro Series Case for iPhone 13 Pro Max User Manual

Nillkin HJ Pro -i13 Series

Nillkin CamShield Pro Series Case for iPhone 13 Pro Max User Manual

Model: HJ Pro -i13 Series | **Brand:** Nillkin

1. INTRODUCTION

This manual provides essential information and instructions for the Nillkin CamShield Pro Series Case, designed specifically for the iPhone 13 Pro Max. This case offers robust protection and enhanced privacy features for your device.



Figure 1: The Nillkin CamShield Pro Series Case in black, designed for the iPhone 13 Pro Max, featuring a textured back and a sliding camera cover.

2. PRODUCT FEATURES

- **Slide Camera Cover:** Protects the camera from scratches and enhances privacy. Features a 0.2mm lifted bezel for added camera protection.
- **Advanced Technology:** Processed with advanced technology for a delicate touch feeling and anti-fingerprint, anti-oil stain properties.
- **Accurate Cutouts:** Ensures tactile buttons for solid feedback and easy pressing, along with precise cutouts for ports and speakers.
- **Wireless Charging-friendly:** Supports wireless charging without needing to remove the case.
- **Impact Resistant Bumper:** Designed with impact-resistant airbags on four corners to absorb and

disperse shock.



Figure 2: This image highlights the unique sliding camera cover mechanism and the subtle 0.2mm raised bezel, designed to protect the iPhone's camera lenses from scratches and provide privacy.



Impact resistant bumper

Impact resistant airbag on four corners.
Helps adsorb and disperse shock.

Figure 3: An illustration showing the case's impact-resistant bumper design, featuring internal airbags at the four corners to absorb and disperse shock from drops.

3. SETUP: CASE INSTALLATION

To install the Nillkin CamShield Pro case on your iPhone 13 Pro Max, follow these general steps:

1. Ensure your iPhone 13 Pro Max is clean and free of dust or debris.
2. Align the top edge of your iPhone with the top edge of the case, ensuring the camera module fits correctly into the case's camera cutout.
3. Gently press the phone into the case, working your way around the edges until all sides are securely fitted.
4. Verify that all buttons (power, volume) and ports (charging, speakers) are accessible and functional.

For a visual guide on case installation, please refer to the video below:

Video 1: A step-by-step video tutorial on how to properly install a phone case similar to the Nillkin CamShield Pro, ensuring a secure fit and optimal protection.

4. OPERATING INSTRUCTIONS

4.1 Using the Slide Camera Cover

The integrated slide camera cover is designed for quick access and protection. To use your camera, simply slide the cover horizontally to expose the lenses. When not in use, slide it back to cover the lenses, protecting them from scratches and maintaining your privacy.

Video 2: Official video demonstrating the Nillkin CamShield Pro case for iPhone 13 series, highlighting the functionality of the sliding camera cover and overall design.

4.2 Wireless Charging

The Nillkin CamShield Pro case is compatible with wireless charging. Place your iPhone (with the case installed) directly onto a compatible wireless charging pad. Ensure proper alignment for efficient charging. There is no need to remove the case for wireless charging.



Figure 4: Nillkin CamShield Pro case with an iPhone 13 Pro Max, placed on a wireless charging pad, illustrating its wireless charging compatibility.

5. MAINTENANCE

To keep your Nillkin CamShield Pro case in optimal condition:

- Clean the case regularly with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- Ensure the sliding camera cover mechanism remains free of dust and debris to maintain smooth

operation.

- Periodically remove the case to clean your iPhone and the inside of the case.

6. TROUBLESHOOTING

6.1 Sliding Camera Cover Not Moving Smoothly

If the camera cover becomes stiff or does not slide smoothly, check for any trapped dust or small particles in the track. Gently clean the track with a soft brush or a dry cloth. Avoid applying excessive force.

6.2 Case Fit Issues

Ensure the case is correctly aligned and snapped onto all edges of your iPhone. A proper fit is crucial for protection and functionality. If the case appears loose or misaligned, remove it and re-install, ensuring all corners are seated correctly.

7. SPECIFICATIONS

Attribute	Value
Product Dimensions	8.27 x 5.91 x 0.79 inches
Item Weight	10.6 ounces
Item Model Number	HJ Pro -i13 Series
Special Features	Wireless Charging Compatible, Slide Camera Cover
Form Factor	Bumper
Color	Black
Compatible Phone Models	iPhone 13 Pro Max
Material	Plastic, Silicone

8. WARRANTY AND SUPPORT

For warranty information or product support, please contact Nillkin directly through their official website or the retailer from whom the product was purchased. Keep your proof of purchase for any warranty claims.

You can visit the official Nillkin store for more information: [Nillkin Store](#)