

[Manuals.plus](#) /

› [VASAGLE](#) /

› VASAGLE LBS803B01 Shoe Cabinet Instruction Manual

VASAGLE LBS803B01

VASAGLE LBS803B01 Shoe Cabinet Instruction Manual

Model: LBS803B01

INTRODUCTION

Thank you for choosing the VASAGLE LBS803B01 Shoe Cabinet. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The VASAGLE LBS803B01 shoe cabinet, featuring a rustic brown finish and black metal frame, positioned in a modern entryway with a coat rack and decorative items.

Safety Information

- **Anti-Tipping Kit:** For safety, it is essential to fix this shoe cabinet to the wall using the included anti-tipping kit. Failure to do so may result in serious injury.
- **Children:** Children are prohibited from climbing on or playing with the product.
- **Weight Capacity:** Do not exceed the maximum static load capacity of 20 kg for the top surface and 5 kg for each compartment.
- **Placement:** Place the product on a level surface.



Image: Close-up showing the adjustable feet for stability and the anti-tipping kit bracket for wall attachment, along with the open storage shelf.

SETUP AND ASSEMBLY

This product requires assembly. Please follow the steps outlined in the separate assembly manual provided in the packaging. Ensure all components are present before starting assembly.

Before Assembly:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Verify that all parts listed in the assembly manual are present. If any parts are missing or damaged, please contact customer support.
3. Gather the necessary tools as indicated in the assembly manual (usually a screwdriver and hammer, not included).

Assembly Steps:

Refer to the detailed, step-by-step instructions and diagrams in the included assembly manual. Pay close attention to the orientation of each piece.

Anti-Tipping Kit Installation:

After assembling the cabinet, securely attach it to the wall using the provided anti-tipping kit. This is a critical safety measure to prevent the unit from falling over, especially in households with children or pets. Follow the specific instructions for the anti-tipping kit in your assembly manual.

OPERATING INSTRUCTIONS

Shoe Storage:

The cabinet features 4 tilt-out compartments designed to store shoes neatly and keep them dust-free. Each compartment can hold multiple pairs of shoes, depending on their size and style.

Adjustable Dividers:

Each tilt-out compartment includes adjustable dividers. These can be repositioned or removed to accommodate different types of footwear, such as ankle boots or high heels. To adjust, gently slide the divider out of its current slot and place it into a different slot or remove it entirely.



Image: A visual representation of the tilt-out compartments with shoes, demonstrating how the internal dividers can be adjusted or removed to fit various shoe sizes, including boots and high heels.

Open Storage Shelf:

The top surface of the cabinet provides an open shelf for convenient storage of everyday items. This space is

ideal for keys, wallets, sunglasses, or decorative items like small plants and ornaments.

MAINTENANCE

Cleaning:

- Wipe the surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or rough sponges, as these can damage the finish.
- For spills, clean immediately to prevent staining or damage to the particleboard.

Care:

- Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- Keep the cabinet away from direct sunlight and excessive moisture to prevent warping or discoloration.
- Avoid placing hot items directly on the surface; use coasters or protective pads.

TROUBLESHOOTING

Cabinet is Unstable:

- Ensure all screws are tightened securely.
- Check that the cabinet is placed on a level surface. Use the adjustable feet to stabilize the unit if the floor is uneven.
- Confirm the anti-tipping kit is correctly installed and secured to the wall.

Parts Missing or Damaged:

- Review the parts list in the assembly manual.
- Contact VASAGLE customer support with details of the missing or damaged parts.

Tilt-Out Doors Not Functioning Smoothly:

- Check for any obstructions inside the compartments.
- Ensure the door hinges and mechanisms are correctly installed and tightened according to the assembly manual.

SPECIFICATIONS



Image: Technical drawing illustrating the key dimensions of the shoe cabinet: 98.3 cm length, 30 cm depth, and 95 cm height.

Feature	Detail
Model Number	LBS803B01
Brand	VASAGLE
Dimensions (L x W x H)	98.3 x 30 x 95 cm
Item Weight	26.6 kg
Color	Rustic Brown + Black
Material	Particleboard, Steel
Number of Doors	4 (Tilt-out)
Number of Compartments	4
Number of Shelves	4
Max. Weight Capacity (Top)	20 kg

Feature	Detail
Max. Weight Capacity (Each Compartment)	5 kg
Assembly Required	Yes
Special Features	Industrial Design, Open Shelf, Adjustable Feet, Anti-Tipping Kit



Image: A close-up of the shoe cabinet's top surface, indicating a maximum static load capacity of 20 kg, suitable for decorative items or small storage.

WARRANTY AND SUPPORT

For warranty information, product support, or to report missing/damaged parts, please contact VASAGLE customer service. Refer to the contact details provided in your purchase documentation or visit the official VASAGLE website.