

WINFLIKE AH59-02550B

WINFLIKE AH59-02550B Remote Control User Manual

For Samsung Home Theater Systems

INTRODUCTION

This manual provides comprehensive instructions for the WINFLIKE AH59-02550B replacement remote control. It is designed to operate various Samsung Home Theater Systems. This remote control requires no programming or setup; simply install batteries, and it is ready for use.

SETUP

Battery Installation

The remote control operates on two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





This image displays the rear view of the remote control. The battery compartment cover is removed, revealing two slots for AAA batteries. The cover is shown alongside the remote.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with compatible Samsung Home Theater Systems. Point the remote directly at your home theater system for optimal performance.





This image presents the front of the remote control from an angled view, highlighting the layout of all buttons, including power, volume, channel, navigation, and specific function keys for Samsung Home Theater Systems.

Key Functions

- **Power Button ():** Turns the home theater system on or off.
- **Source/Function:** Selects input sources (e.g., DVD, TV, AUX).
- **Volume (+/-):** Adjusts the master volume level.
- **Mute:** Silences the audio output.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.
- **Play/Pause, Stop, Fast Forward, Rewind:** Controls media playback.
- **Disc Menu/Title Menu:** Accesses disc or title menus.
- **Tools/Info:** Provides access to additional settings or information.
- **Return/Exit:** Navigates back or exits current menus.
- **Number Buttons (0-9):** Direct input for channels or tracks.
- **Color Buttons (A, B, C, D):** Specific functions depending on the content or system menu.

MAINTENANCE

Proper care ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Replace batteries when the remote's response becomes sluggish or inconsistent.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

- **Remote not responding:** Ensure the batteries are inserted correctly with the correct polarity. Replace old batteries with new AAA alkaline batteries.
- **Remote range is limited:** Check for any obstructions between the remote control and the home theater system's infrared receiver. Ensure the remote is pointed directly at the system.

- **Specific buttons not working:** Clean the remote control surface and ensure no debris is lodged around the buttons. If the issue persists, the button mechanism may be faulty.
- **No programming required:** This remote is a direct replacement and does not require any programming or pairing. If it does not work, verify compatibility with your specific Samsung Home Theater System model.

SPECIFICATIONS

Model Number	AH59-02550B
Compatible Brand	For Samsung
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared
Maximum Range	10 Meters
Material	ABS Material

COMPATIBLE MODELS

This remote control is compatible with the following Samsung Home Theater Systems:

- HT-F450K
- HT-F453K
- HT-F453HK
- HT-F445K
- HT-F455K
- HT-F450BK
- HT-F453RK
- HT-F450RK
- HT-F453HBK
- HT-F453HRK
- HT-F455BK
- HT-F455RK
- HT-F453BK

WARRANTY INFORMATION

Please refer to the retailer or manufacturer's website for specific warranty details regarding this product. General warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

SUPPORT

For further assistance or inquiries, please contact the retailer from whom you purchased this product. You may also visit the WINFLIKE brand's official support channels if available.

