

manuals.plus /

- › [Canon](#) /
- › [Canon PIXMA TR4720 All-in-One Wireless Printer User Manual](#)

Canon 5074C002

Canon PIXMA TR4720 All-in-One Wireless Printer User Manual

Model: PIXMA TR4720 BK Printer (5074C002)

PRODUCT OVERVIEW

The Canon PIXMA TR4720 is a versatile all-in-one wireless printer designed for home use, offering print, copy, scan, and fax functionalities. It features an auto document feeder, mobile printing capabilities, and automatic two-sided printing for enhanced efficiency.



Image: Front view of the Canon PIXMA TR4720 All-in-One Wireless Printer, showing paper loaded in the front tray and the auto document feeder.

SETUP AND INSTALLATION

Unboxing and Initial Setup

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the printer. Connect the power cord to the printer and a wall outlet.

Ink Cartridge Installation

The PIXMA TR4720 is designed for easy ink cartridge installation. Open the front cover to access the cartridge slots. Insert the black (PG-275) and color (CL-276) ink cartridges into their respective slots until they click into place. Close the cover.

Paper Loading

Load paper into the 100-sheet capacity front paper cassette. Adjust the paper guides to fit the paper size securely.

Wireless Connection

Follow the on-screen instructions on the printer's 2-line LCD display to connect to your wireless network. Alternatively, download the Canon PRINT Inkjet/SELPHY App on your smartphone or tablet for guided setup. The printer supports Wi-Fi connectivity for seamless integration with your devices.



EASY WIRELESS PRINTING

Print on-the-go with Canon Print App,
Apple® AirPrint®, and Mopria™ Print Service.

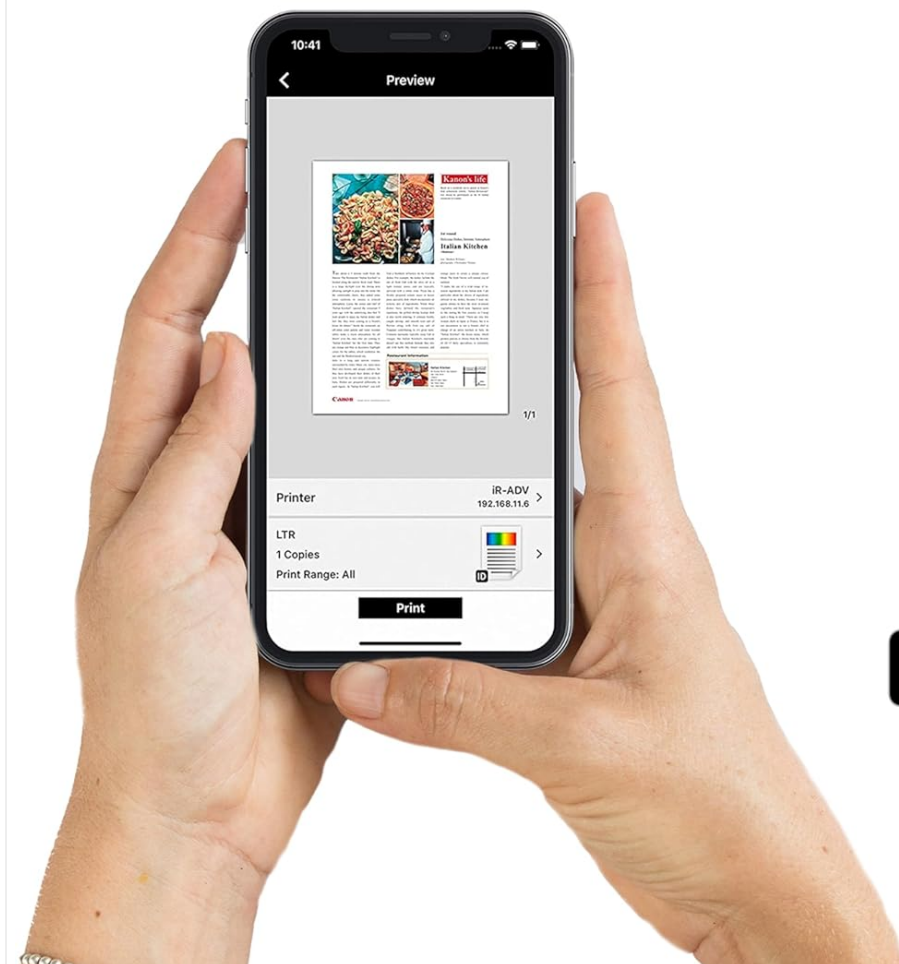


Image: A mobile phone displaying the Canon Print App interface next to the Canon PIXMA TR4720 printer, illustrating easy wireless printing setup.

OPERATING INSTRUCTIONS

Printing Documents and Photos

The printer supports printing documents and borderless photos up to 8.5" x 11". Print speeds are approximately 8.8 ipm for black and white, and 4.4 ipm for color. Utilize the automatic two-sided printing feature for letter-size documents to save paper.

Copying

Place documents on the flatbed scanner or use the 20-sheet auto document feeder (ADF) for multi-page copying. Select the copy function from the printer's control panel and adjust settings as needed.

Scanning

Scan documents and images using the flatbed scanner or the ADF. Scanned files can be saved to your computer or mobile device via the Canon PRINT Inkjet/SELPHY App.

Faxing

The built-in fax functionality allows you to send and receive faxes. Connect an RJ-11 telephone/modem cable to the printer and your phone line. Follow the instructions on the LCD display for fax operations.

Mobile Printing

Print directly from your mobile devices using the Canon PRINT Inkjet/SELPHY App, Apple AirPrint®, or Mopria™ Print Service. This allows for convenient printing from anywhere within your wireless network.

COMPACT & STYLISH DESIGN

Built in AUTO DUPLEX PRINTING
for convenience & paper savings



WIRELESS | PRINT | COPY | SCAN | FAX

Image: Diagram highlighting key features of the Canon PIXMA TR4720, including the 2-line LCD display, 20-sheet Auto Document Feeder, Auto Duplex Printing, and 100-sheet Front Paper Cassette.

MAINTENANCE

Ink Cartridge Replacement

When ink levels are low, the printer will display a warning. Replace cartridges (PG-275 Black, CL-276 Color) as needed.

Ensure you use genuine Canon ink cartridges for optimal performance and print quality.

Cleaning

Regularly clean the exterior of the printer with a soft, damp cloth. For print quality issues, perform print head cleaning or deep cleaning from the printer's maintenance menu or through the printer driver settings on your computer.

TROUBLESHOOTING

Common Issues and Solutions

- **Printer Not Responding:** Check power connections, ensure the printer is turned on, and verify wireless network connectivity. Restart both the printer and your computer/mobile device.
- **Poor Print Quality:** Check ink levels. Perform print head cleaning or alignment from the printer's maintenance settings. Ensure you are using appropriate paper types for your print job.
- **Paper Jams:** Carefully remove any jammed paper following the instructions in the printer's display or the full user manual. Ensure paper is loaded correctly and not overfilled.
- **Wireless Connection Issues:** Verify your Wi-Fi password. Ensure the printer is within range of your wireless router. Restart your router and printer.

For more detailed troubleshooting steps, refer to the official Canon support website or the comprehensive user guide available online.

SPECIFICATIONS

Feature	Specification
Product Dimensions	11.7"D x 17.2"W x 7.5"H
Connectivity Technology	Wi-Fi, USB
Printing Technology	Inkjet
Functions	Print, Copy, Scan, Fax
Print Speed (Black)	8.8 ipm
Print Speed (Color)	4.4 ipm
Max Print Resolution	4800 x 1200 Dots Per Inch
Paper Capacity	100 sheets
Auto Document Feeder (ADF)	20 sheets
Duplex Printing	Automatic
Display Type	LCD (2-line)
Power Consumption	7 Watts (Operating)
Item Weight	12.7 pounds

WARRANTY AND SUPPORT

The Canon PIXMA TR4720 All-in-One Wireless Printer comes with a 1-year limited warranty. For warranty claims or technical assistance, please contact Canon customer support.

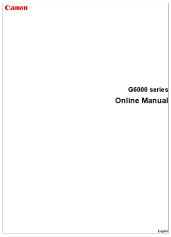

An official Instructions for Use (IFU) PDF document is available for download:[Download User Guide \(PDF\)](#).

For additional support and resources, visit the official Canon website.



Related Documents - 5074C002

	<p>Canon PIXMA G3420 All-in-One Printer: Features and Specifications</p> <p>Detailed overview and specifications for the Canon PIXMA G3420 All-in-One printer, highlighting its high-volume, low-cost printing, speed, quality, maintenance, design, and connectivity features.</p>
	<p>Canon PIXMA MX490 Series Online Manual</p> <p>Comprehensive online manual for the Canon PIXMA MX490 series printer, covering setup, printing, copying, scanning, faxing, wireless connectivity, maintenance, and troubleshooting.</p>
	<p>Canon G3000 Series Online Manual: Printing, Scanning, and Maintenance Guide</p> <p>Comprehensive online manual for the Canon G3000 series printers, covering setup, printing, scanning, cloud services like PIXMA/MAXIFY Cloud Link, maintenance, and troubleshooting.</p>
	<p>Canon Quick Menu Онлайн-руководство: функции, настройка и устранение неполадок</p> <p>Подробное руководство пользователя для Canon Quick Menu, охватывающее его функции, настройку ярлыков, запуск приложений и решение распространенных проблем. Информация для пользователей Windows.</p>

	<p>Canon G6000 Series Online Manual</p> <p>Comprehensive online manual for the Canon G6000 series printers, covering setup, operation, network connectivity, maintenance, and troubleshooting.</p>
	<p>Canon PIXMA E3470 Wi-Fi Installation Guide for Windows</p> <p>This guide provides step-by-step instructions for wirelessly connecting and installing the Canon PIXMA E3470 printer on a Windows computer using Wi-Fi. It covers app installation, driver download, and the setup process.</p>