

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER dustbuster® AdvancedClean™ Slim Cordless Hand Vacuum, 12V Max \(HLVC320J01\) User Manual](#)

BLACK+DECKER HLVC320J01

BLACK+DECKER dustbuster® AdvancedClean™ Slim Cordless Hand Vacuum User Manual

Model: HLVC320J01

1. INTRODUCTION

The BLACK+DECKER dustbuster® AdvancedClean™ Slim Cordless Hand Vacuum, 12V Max (HLVC320J01), is designed for quick and efficient cleanup of everyday spills and messes. Its compact and lightweight design makes it ideal for various household and automotive tasks.

Key Features:

- **3X More Suction Power:** Engineered to deliver significantly more suction compared to standard handheld vacuums.
- **Built-in Extra-Wide Nozzle:** Facilitates quick cleanup of larger debris.
- **Extended Runtime:** Provides up to 14 minutes of continuous operation per charge.
- **Ultra-Compact & Lightweight Design:** Ensures easy handling and storage.
- **Easy Empty Dustbin:** Features a twist-off bowl and washable filter for convenient maintenance.



Figure 1: The BLACK+DECKER dustbuster® AdvancedClean™ Slim Cordless Hand Vacuum (Gray).

2. SETUP

2.1 Initial Charging

Before first use, fully charge the vacuum. The unit comes with a charging base for convenient power replenishment.

1. Connect the charging adapter to a standard wall outlet.
2. Place the vacuum onto the charging base. Ensure the contacts align properly.
3. A blue indicator light on the vacuum will illuminate, indicating that it is charging.
4. Allow approximately 4 hours for a full charge. The indicator light may change or turn off once fully charged, depending on the model.



Figure 2: The handheld vacuum placed on its charging stand. The blue light indicates charging status.

2.2 Attaching Accessories

The vacuum includes various attachments for specialized cleaning tasks:

- **Crevice Tool:** For reaching tight spaces and corners.
- **Brush Tool:** For agitating debris on upholstery or delicate surfaces.

To attach an accessory, simply align it with the vacuum's nozzle and push firmly until it clicks into place. To remove, pull the accessory straight off.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

To turn the vacuum on, slide the power switch located on the handle forward. To turn it off, slide the switch backward.

3.2 Using the Nozzle

The dustbuster features a built-in extra-wide nozzle that can be adjusted for different cleaning needs:

- For general cleaning of larger debris, use the nozzle in its standard wide position.
- To access tighter areas or concentrate suction, the nozzle can be extended or retracted by pulling/pushing the front section.

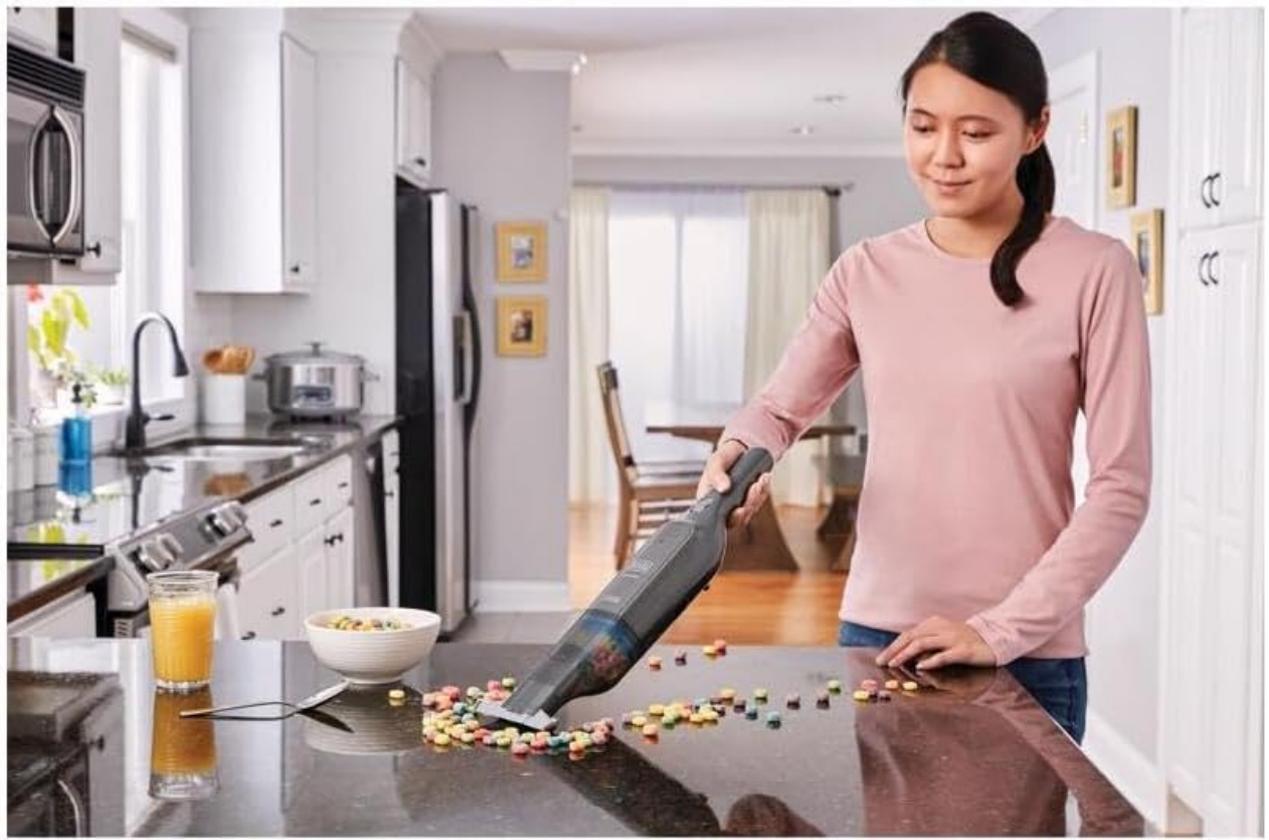


Figure 3: Efficiently cleaning up kitchen counter spills with the wide nozzle.

3.3 Recommended Uses

This handheld vacuum is versatile and suitable for:

- Quick cleanups of dry spills on hard surfaces or carpets.
- Vacuuming car interiors, including seats, floor mats, and crevices.
- Cleaning upholstery, pet messes, and small debris around the house.



Figure 4: The compact design allows for easy cleaning of car interiors.

4. MAINTENANCE

4.1 Emptying the Dustbin

For optimal performance, empty the dustbin regularly, especially after each significant use.

1. Ensure the vacuum is turned off.
2. Twist the dustbin counter-clockwise to detach it from the main unit.
3. Carefully remove the filter assembly from the dustbin.
4. Empty the collected debris into a trash receptacle.



Figure 5: Emptying the dustbin is a quick and hygienic process.

4.2 Cleaning the Filter

The vacuum uses a washable pleated filter (HLVCF10) for sustained performance.

1. After emptying the dustbin, separate the filter from the filter assembly.
2. Rinse the filter under running water until clean.
3. Allow the filter to air dry completely (for at least 24 hours) before reinserting it into the vacuum. Do not use the vacuum with a wet filter.
4. Reassemble the filter and dustbin, then reattach to the vacuum.



Figure 6: The washable filter ensures long-term efficiency and reduces replacement costs.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum fully (refer to Section 2.1).
Reduced suction power.	Dustbin is full or filter is clogged.	Empty the dustbin and clean the filter (refer to Section 4).
Reduced suction power.	Nozzle or hose is blocked.	Inspect and clear any blockages from the nozzle or internal hose.

Problem	Possible Cause	Solution
Battery not holding charge.	Battery life cycle reached.	Lithium-Ion batteries have a finite lifespan. If the issue persists after proper charging, battery replacement may be necessary (contact customer support).

6. SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	HLVC320J01
Power Source	Cordless (Lithium-Ion Battery)
Voltage	12V Max*
Wattage	30 watts
Runtime	Up to 14 minutes
Filter Type	Cloth (Washable pleated filter HLVCF10)
Dustbin Capacity	Bagless
Product Dimensions (L x W x H)	10"L x 10"W x 17.32"H
Item Weight	2.35 pounds
Noise Level	70 dB
Included Components	(1) Washable pleated filter

*Maximum initial battery voltage (measured without a workload) is 12 volts. Nominal voltage is 10.8 volts.



7. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official BLACK+DECKER website or the full user manual provided with your product.


- **Official User Manual (PDF):** [Download PDF Manual](#)
- **Manufacturer:** BLACK+DECKER
- **Online Store:** [Visit the BLACK+DECKER Store on Amazon](#)

Extended protection plans may be available for purchase separately. Please check product listings or contact your retailer for details.

Related Documents - HLVC320J01

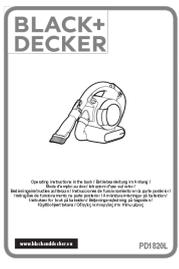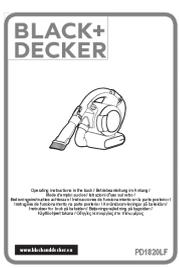	<p>Black+Decker BDH2000L CHV1410L Cordless Hand Vac Instruction Manual</p> <p>Comprehensive instruction manual for the Black+Decker BDH2000L CHV1410L Cordless Hand Vac, covering intended use, important safety instructions, operation, cleaning, maintenance, troubleshooting, and warranty information.</p>
	<p>BLACK+DECKER Cordless Hand Vacs Instruction Manual and Safety Guide</p> <p>This comprehensive manual provides instructions for operating, maintaining, and troubleshooting BLACK+DECKER Cordless Hand Vacs (models HLVA315J, HLVA320J, HLVA320JS, HLVA325J). It includes safety warnings, assembly steps, usage guidelines, and warranty information.</p>
	<p>Black+Decker PD1820L Dustbuster: Operating Instructions and Safety Guide</p> <p>Comprehensive guide for the Black+Decker PD1820L Dustbuster handheld vacuum cleaner, covering intended use, safety warnings, inspection, maintenance, battery care, and environmental disposal.</p>
	<p>BLACK+DECKER Cordless Hand Vacs Instruction Manual - HLVA315J, HLVA320J, HLVA320JS, HLVA325J</p> <p>Comprehensive instruction manual for BLACK+DECKER Cordless Hand Vacs (models HLVA315J, HLVA320J, HLVA320JS, HLVA325J), covering safety, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>BLACK+DECKER Dustbuster PD1820LF: Operating Instructions and User Guide</p> <p>Comprehensive user guide for the BLACK+DECKER Dustbuster PD1820LF handheld vacuum cleaner. Includes safety, operation, maintenance, and troubleshooting tips.</p>

BLACK+
DECKER

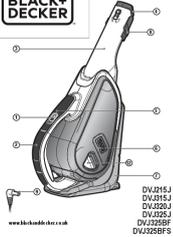

DVJ215J
DVJ215J
DVJ220J
DVJ225J
DVJ225BF
DVJ225BFS

www.blackanddecker.com

[Black+Decker Dustbuster Handheld Vacuum Cleaner Manual](#)

User manual for Black+Decker Dustbuster handheld vacuum cleaners, including models DVJ215J, DVJ315J, DVJ320J, DVJ325J, DVJ325BF, and DVJ325BFS. Covers intended use, safety instructions, charging, maintenance, and technical specifications.