

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EBODA](#) /

› [EBODA Waterproof Bluetooth Speaker User Manual \(Model: fe8d3d8d-8f52-48a6-b514-3517159610f4\)](#)

EBODA fe8d3d8d-8f52-48a6-b514-3517159610f4

EBODA Waterproof Bluetooth Speaker User Manual

Model: fe8d3d8d-8f52-48a6-b514-3517159610f4

INTRODUCTION

Thank you for choosing the EBODA Waterproof Bluetooth Speaker. This manual provides essential information for the safe and efficient use of your speaker. Please read it thoroughly before operation and retain it for future reference.



Image: Two EBODA waterproof Bluetooth speakers, one pink and one gray, demonstrating their water resistance with splashing water.

PACKAGE CONTENTS

- EBODA Waterproof Bluetooth Speaker
- Power Adapter
- Carrying Pouch
- User Manual (this document)

IMPORTANT SAFETY INFORMATION

- Do not disassemble or modify the speaker.
- Keep away from extreme temperatures and direct sunlight.
- Ensure the charging port cover is securely closed when near water to maintain waterproofing.
- Use only the provided power adapter for charging.
- Do not expose the speaker to corrosive liquids.

SETUP

1. Charging the Speaker

1. Connect the provided power adapter to the speaker's charging port.
2. Plug the adapter into a power outlet.
3. The LED indicator will show charging status (e.g., red for charging, off when fully charged).
4. Allow approximately 2-3 hours for a full charge.

2. Powering On/Off

- To power on: Press and hold the Power button for 3 seconds.
- To power off: Press and hold the Power button for 3 seconds.

3. Bluetooth Pairing

1. Ensure the speaker is powered on. The LED indicator will flash, indicating it's in pairing mode.
2. On your device (smartphone, tablet, computer), enable Bluetooth.
3. Search for available Bluetooth devices and select "EBODA Speaker" from the list.
4. Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing.



Image: A pink EBODA speaker demonstrating its waterproof capabilities, suitable for various environments.

OPERATION

Basic Controls

Button	Function
Power Button	Press and hold to Power On/Off. Short press to Play/Pause music.
Volume +	Short press to increase volume. Long press for next track.
Volume -	Short press to decrease volume. Long press for previous track.
Light Mode Button	Short press to cycle through 5 LED light patterns. Long press to turn lights off.

True Wireless Stereo (TWS) Pairing

To achieve a stereo sound experience, you can pair two EBODA Waterproof Bluetooth Speakers together.

1. Ensure both speakers are powered off and not connected to any Bluetooth device.
2. Power on both speakers. They will enter Bluetooth pairing mode.
3. On one speaker, double-press the Power button. It will search for the other speaker.
4. Once connected, both speakers will emit a confirmation sound, and their LED indicators will sync.
5. Now, connect your device to one of the speakers via Bluetooth as described in the "Bluetooth Pairing" section. Both speakers will play audio in stereo.

2 Simultaneous Playback

Paired two speaker at the same time

 TWS



Image: Two EBODA speakers paired together, demonstrating the True Wireless Stereo functionality for enhanced audio.

Hands-Free Calling

When connected to your smartphone, the speaker can be used for hands-free calls.

- **Answer Call:** Short press the Power button.
- **End Call:** Short press the Power button during a call.
- **Reject Call:** Long press the Power button.

MAINTENANCE

Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Ensure the charging port cover is closed before cleaning with water.

Waterproofing Care

- Always ensure the charging port cover is firmly sealed before exposing the speaker to water.
- The speaker is rated IP67, meaning it can withstand immersion in up to one meter of water for 30 minutes. Avoid prolonged submersion or exposure to high-pressure water jets.
- After exposure to saltwater or chlorinated water, rinse the speaker with fresh water and dry thoroughly.

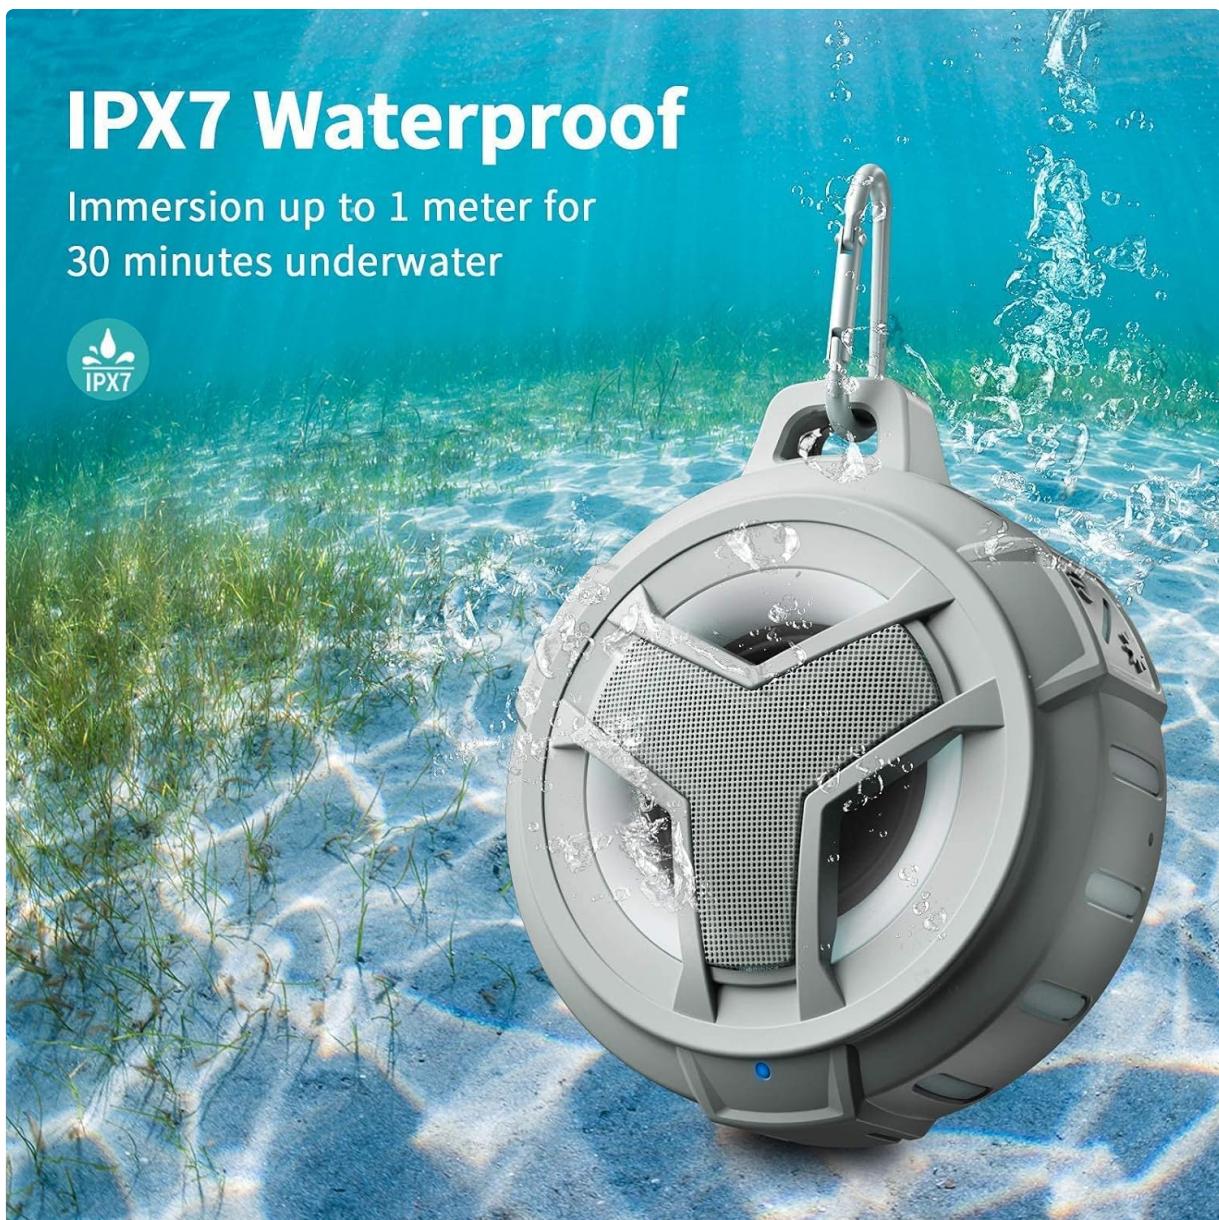


Image: The EBODA speaker underwater, demonstrating its IPX7 waterproof capability for use in aquatic environments.

Battery Care

- Charge the speaker regularly, even if not in use, to maintain battery health.
- Avoid fully discharging the battery frequently.
- Store the speaker in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

No Power

- Ensure the speaker is fully charged.
- Check if the power button is pressed and held for 3 seconds.

Cannot Pair via Bluetooth

- Ensure the speaker is in pairing mode (LED flashing).
- Make sure Bluetooth is enabled on your device.
- Move the speaker closer to your device (within 33 feet/10 meters).
- Forget "EBODA Speaker" from your device's Bluetooth list and try pairing again.
- Ensure no other devices are currently connected to the speaker.

No Sound or Low Volume

- Increase the volume on both the speaker and your connected device.
- Ensure the speaker is properly paired and connected.
- Check if the audio source on your device is playing.

TWS Pairing Issues

- Ensure both speakers are fully charged and powered off before starting TWS pairing.
- Follow the TWS pairing steps carefully, ensuring you double-press the power button on only one speaker.
- Keep the speakers close to each other during the TWS pairing process.

SPECIFICATIONS

Feature	Detail
Model Number	fe8d3d8d-8f52-48a6-b514-3517159610f4
Brand	EBODA
Connectivity Technology	Bluetooth 5.0
Waterproof Rating	IP67
Power Source	Battery Powered (2000mAh)
Driver Output	5W
Bluetooth Range	Up to 33 feet (10 meters)
Material	Rubber
Special Feature	Portable, LED Light Show, Floating, True Wireless Stereo

WARRANTY AND SUPPORT

EBODA products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official EBODA store. Official EBODA Store: [EBODA Store on Amazon](#)

© 2023 EBODA. All rights reserved.