

Mattel HFY35

Mattel Disney Pixar Toy Story Roundup Fun Woody HFY35 - Instruction Manual

Model: HFY35

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Safety](#)

[Information](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The Mattel Disney Pixar Toy Story Roundup Fun Woody figure brings the beloved character to life. This large talking figure stands approximately 12 inches (30 cm) tall and features over 30 authentic phrases from the Disney and Pixar Toy Story films. Woody is designed with a soft fabric body and iconic cowboy outfit, complemented by a plastic head, hat, boots, and hands, making him ready for imaginative play and adventures.



Image 1.1: Woody figure held by a child, demonstrating its size and appeal.



CUERPO SUAVE, ATUENDO WESTERN ICÓNICO ¡HECHO DE TELA!

Image 1.2: Detailed view of the Woody figure, highlighting its soft body and classic cowboy attire.

2. SETUP

2.1 Battery Installation

The Woody figure requires 3 LR44 button cell batteries, which are included with the product. To install or replace batteries:

1. Locate the battery compartment, typically on the back or bottom of the figure.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 new LR44 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

Warning: Button cell batteries are hazardous. They can cause severe injury if swallowed or inserted into any part of the body. Keep batteries (new and used) away from children. Dispose of used batteries immediately. If you suspect a child has swallowed a battery or inserted it into any body part, seek immediate medical attention.

2.2 Initial Activation

Before first use, ensure the pull-string mechanism is free from any packaging ties or obstructions. The figure is ready for operation once batteries are correctly installed.

3. OPERATING INSTRUCTIONS

3.1 Activating Phrases

To hear Woody speak, simply pull the string located on his back. Each pull will activate one of over 30 authentic phrases. Ensure the string is pulled gently and released to allow the mechanism to retract fully.



¡SOLO TIRA DE LA LENGÜETA CORTA EN SU ESPALDA PARA ESCUCHAR MÁS DE 30 FRASES!

Image 3.1: Illustration of the pull-string mechanism on Woody's back for activating phrases.

3.2 Interactive Play

Woody is designed for imaginative play. Recreate scenes from the Toy Story movies or invent new adventures. The figure's soft body and articulated plastic parts allow for various poses and interactions.

Your browser does not support the video tag.

Video 3.1: Official video demonstrating interactive talking action figures from Disney Store ES, showcasing similar product functionality.

4. MAINTENANCE

4.1 Cleaning

To clean the Woody figure, gently wipe the plastic parts with a damp cloth. For the fabric areas, use a mild soap solution on a cloth and dab gently. Avoid saturating the fabric or getting water into the electronic components. Do not machine wash or tumble dry.

4.2 Storage

Store the figure in a cool, dry place away from direct sunlight and extreme temperatures to prevent damage to materials and electronics. If storing for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Woody does not speak when the string is pulled.	<ul style="list-style-type: none">Batteries are depleted or incorrectly installed.Pull string mechanism is jammed or damaged.	<ul style="list-style-type: none">Check battery installation and replace with new LR44 batteries if necessary.Ensure the pull string is not obstructed. If the mechanism appears damaged, contact customer support.
Sound is distorted or too quiet.	<ul style="list-style-type: none">Low battery power.Speaker obstruction.	<ul style="list-style-type: none">Replace batteries with new LR44 batteries.Ensure the speaker area (if visible) is clear of debris.

6. SPECIFICATIONS

- Model Number:** HFY35
- Brand:** Mattel
- Product Dimensions:** 12.7 x 8.89 x 31.12 cm (5 x 3.5 x 12.25 inches)
- Weight:** 453.59 g (1 lb)
- Material:** Plush fabric body, plastic head, hat, boots, and hands
- Power Source:** 3 x LR44 button cell batteries (included)
- Recommended Age:** 4 - 8 years (Manufacturer's recommendation)
- Features:** Over 30 authentic phrases, pull-string activation
- Character:** Woody from Toy Story



Image 6.1: Product packaging displaying key features and branding.

7. SAFETY INFORMATION

- **WARNING:** Not suitable for children under 36 months. May generate small parts.
- **WARNING:** Button cell batteries are dangerous. Button cell batteries can cause severe injury if swallowed or inserted into any part of the body.
 - Keep batteries (new and used) away from children.
 - Dispose of used batteries immediately.
 - If you suspect a child has swallowed a battery or inserted it into any body part, seek immediate medical attention.
- Adult supervision is recommended during play.

- Do not modify or disassemble the product.

8. WARRANTY AND SUPPORT

This Mattel product comes with a manufacturer's warranty of 2 years. For warranty claims, technical support, or any product-related inquiries, please contact Mattel customer service. Retain your proof of purchase for warranty validation.

For further assistance, please visit the official Mattel website or refer to the contact information provided on the product packaging.