

brori WS02-WP

brori Ladies Electric Shaver WS02-WP User Manual

Model: WS02-WP

1. INTRODUCTION

Thank you for choosing the brori Ladies Electric Shaver WS02-WP. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new shaver. Please read these instructions thoroughly before first use and retain them for future reference.



Image 1.1: Overview of the brori Ladies Electric Shaver WS02-WP, highlighting its key features such as IPX7 waterproof rating, full-body use, safety lock, LED display, speed adjustment, and noise reduction.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following safety precautions:

- Do not use the shaver if the blade head is damaged or broken, as this may cause skin irritation or injury.
- Keep the device out of reach of children.
- Ensure the charging port is dry before connecting the USB cable.
- Do not attempt to disassemble or repair the shaver yourself. Contact customer support for assistance.
- Avoid using the shaver on irritated, damaged, or infected skin.
- This appliance is designed for personal use only.

3. PRODUCT COMPONENTS

The brori Ladies Electric Shaver WS02-WP package typically includes the following items:

- brori Ladies Electric Shaver Unit
- USB Charging Cable
- Cleaning Brush
- Protective Cap for Shaver Head
- Charging Stand
- Storage Pouch
- Replacement Blade (if included in specific package)
- User Manual

4. SETUP

Before using your shaver for the first time, please follow these setup steps:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the shaver and accessories for any signs of damage. If any damage is found, do not use the device and contact customer support.
3. **Initial Charge:** Fully charge the shaver before its first use. Refer to the "Charging" section for detailed instructions.
4. **Familiarize:** Take a moment to understand the different parts of the shaver, including the power button, display, and blade head.

5. CHARGING

The brori Ladies Electric Shaver is equipped with a rechargeable lithium-ion battery. Follow these steps to charge your device:

1. Ensure the shaver is turned off.
2. Connect the USB charging cable to the shaver's charging port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., power bank, car charger, computer USB port, or AC adapter).
4. The display will indicate the charging status. A full charge typically takes approximately 1.5 hours.
5. Once fully charged, the display will show 100%. Disconnect the shaver from the charging cable.

A full charge provides up to 80 minutes of continuous use.

充電式シェーバー

さまざまな充電方法、外出や自宅で充電可能！



1.5時フルス
ピード充電

- 満電状態で80分間連続使用可
- 充電中、**99**と **0000**が点灯
- 充電完了、**100**を表示

brori女性シェーバー



プラグ



車載USBソケット



モバイル電源



USBポート

Image 5.1: The shaver can be conveniently charged using various USB power sources, including a wall adapter, car USB socket, power bank, or computer USB port.

6. OPERATING INSTRUCTIONS

6.1 General Use

1. **Power On/Off:** Press and hold the power button for a few seconds to turn the shaver on or off.
2. **Speed Mode:** The shaver may have different speed settings. Refer to the display for current

speed mode.

3. **Child Safety Lock:** To activate or deactivate the child safety lock, press and hold the power button for 3 seconds. The display will show a lock icon when activated.

6.2 Shaving Technique

The shaver features a 3-in-1 hypoallergenic cutter head designed for efficient and gentle hair removal on various body parts.



Image 6.1: The 3-in-1 cutter head features a straight trimmer for longer hairs, a net blade for close shaving, and curved trimmers for delicate areas like the bikini line.

- **Dry Shaving:** Ensure your skin is clean and dry. Move the shaver gently against the direction of hair growth.
- **Wet Shaving:** Apply shaving foam or gel to the desired area. Move the shaver gently against the direction of hair growth. The IPX7 waterproof design allows for safe use in the shower.
- **Optimal Angle:** For best results, hold the shaver at a 45-degree angle to your skin.
- **Sensitive Areas:** The central net blade is designed for delicate parts, while the aloe vera strips on both sides help reduce friction and protect sensitive skin.

全身に使える女性用シェーバー

普段シェービングやVIO前処理に使用可



Image 6.2: The brori shaver is suitable for full-body hair removal, including the face, underarms, arms, legs, back, and bikini area.

6800回/分女性シェーバー

安全、刺激がなく、効果的に無駄な毛を剃る



IPX7防水仕様

泡剃り、乾剃り対応



直接すすぎ
便利で迅速

Image 6.3: The shaver provides effective hair removal without irritation. Its IPX7 waterproof rating allows for both dry shaving and wet shaving with foam, and it can be rinsed directly under water for cleaning.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your shaver and ensure optimal performance.

1. **Turn Off:** Always turn off and disconnect the shaver from any power source before cleaning.
2. **Remove Blade Head:** Gently press the release button (if applicable) or pull the blade head

upwards to detach it from the shaver body.

3. **Clean Blades:** Use the provided cleaning brush to remove any trapped hairs from the blades and inside the shaver head.
4. **Rinse:** Since the shaver is IPX7 waterproof, you can rinse the blade head and the shaver body under running water. Ensure all hair and debris are washed away.
5. **Dry:** Allow all parts to air dry completely before reattaching the blade head and storing the shaver.
6. **Storage:** Store the shaver in a cool, dry place, preferably with the protective cap on the blade head.



Image 7.1: The shaver head can be easily detached and rinsed under water for thorough cleaning. Use the cleaning brush to remove stubborn hairs.

8. TROUBLESHOOTING

If you encounter any issues with your brori Ladies Electric Shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery or child safety lock is active.	Charge the shaver fully. Deactivate the child safety lock by pressing and holding the power button for 3 seconds.
Poor shaving performance.	Blades are dull or clogged with hair.	Clean the blade head thoroughly. Consider replacing the blade head if performance does not improve (recommended every 6-8 months).
Display shows a cleaning reminder.	Shaver head needs cleaning.	Clean the shaver head as described in the "Maintenance and Cleaning" section.

Problem	Possible Cause	Solution
Shaver makes unusual noise.	Hair caught in the motor or blade mechanism.	Turn off the shaver, remove the blade head, and clean thoroughly. If the noise persists, contact customer support.

If the problem persists after trying these solutions, please contact brori customer support for further assistance.

9. SPECIFICATIONS

Feature	Detail
Model Number	WS02-WP
Brand	brori
Power Source	Battery Powered
Battery Type	1 Lithium Ion Battery (included)
Charging Time	Approx. 1.5 hours
Operating Time	Up to 80 minutes (fully charged)
Waterproof Rating	IPX7 (Full-body washable)
Blade Type	3-in-1 Hypoallergenic Cutter Head
Display	LED (Battery level, cleaning, clog, speed, child lock)
Dimensions (Package)	18.4 x 9.4 x 7.2 cm
Weight (Package)	260 g

10. WARRANTY AND SUPPORT

brori products are manufactured with high-quality standards. For information regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official brori website.

If you require technical support, have questions about your product, or need to report an issue, please contact brori customer service through the retailer where you purchased the product or via the contact information provided on the official brori website.

