

WINFLIKE AKB73635402

WINFLIKE AKB73635402 Replacement Remote Control User Manual

Model: AKB73635402

INTRODUCTION

This manual provides comprehensive instructions for the WINFLIKE AKB73635402 replacement remote control. Designed for various LG Cinema 3D Sound Blu-ray Home Theater Systems, this remote offers a direct replacement solution without the need for complex programming. Please read this manual thoroughly to ensure proper use and longevity of your remote control.

Compatible LG Home Theater System Models:

- BH9320H (S92H1-S, S92T1-C/W)
- BH7220BW (S72B1-F/S/C/W, W2, T2)
- BH7520TW (S72T1-S/W, S72B1-C, W2, T2)
- BH9520TW (S92T1-S/W, S92T1-C, T2, W2)
- BB5520A (SHX56-D)

SETUP

The AKB73635402 replacement remote control is designed for immediate use with compatible LG Home Theater Systems. No programming or pairing is required.

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by the arrow to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The remote control is now ready for use.



Figure 1: Front view of the AKB73635402 remote control, showing all buttons.

OPERATING INSTRUCTIONS

Point the remote control directly at your LG Home Theater System's infrared receiver. Ensure there are no obstructions between the remote and the system.

Key Functions:

- **Power (●):** Turns the home theater system on or off.
- **Number Pad (0-9):** Used for direct input of track numbers or other numerical selections.
- **VOL (+/-):** Adjusts the master volume level.
- **MUTE:** Silences the audio output.
- **HOME:** Accesses the main menu or home screen of the system.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **PLAY/PAUSE (▶ ||), STOP (■), SKIP (◀◀ / ▶▶), SCAN (◀◀ / ▶▶):** Standard media playback controls.
- **BACK:** Returns to the previous screen or menu.
- **TITLE/POP UP:** Displays the disc title menu or pop-up menu.
- **DISC MENU:** Accesses the main menu of the loaded disc.
- **SUBTITLE:** Toggles subtitle display.

- **AUDIO:** Changes audio tracks or language.
- **SLEEP:** Sets a sleep timer for the system.
- **AV/INPUT:** Selects the audio/video input source.
- **PR/CH (+/-):** Changes channels or presets.
- **Color Buttons (R, G, Y, B):** Functionality varies depending on the specific menu or content. Refer to your LG Home Theater System's manual for details.





Figure 2: Detailed view of the remote control's button layout.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface and buttons.

Battery Replacement:

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA alkaline batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

Storage:

- Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the remote or exposing it to excessive moisture.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Remote Control Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace both batteries with fresh AAA alkaline batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the infrared sensor on your LG Home Theater System.
- **Distance:** Ensure you are within the effective operating range (approximately 33 feet or 10 meters) of the home theater system.

- **System Power:** Confirm that your LG Home Theater System is powered on.

Specific Buttons Not Working:

- **Clean Remote:** Dust or debris might be interfering with button contacts. Refer to the "Maintenance" section for cleaning instructions.
- **Battery Check:** Even if some buttons work, low battery power can cause intermittent issues. Replace batteries.

If the problem persists after trying these steps, please contact customer support for further assistance.

SPECIFICATIONS

Brand	WINFLIKE
Model Name	AKB73635402
Connectivity Technology	Infrared (IR)
Compatible Devices	LG Home Theater Systems (specific models listed in Introduction)
Battery Type	2 x AAA batteries (not included)
Button Quantity	52
Maximum Range	33 Feet (approx. 10 meters)
Color	Black
Item Weight	3 Ounces (approx. 85 grams)
Item Dimensions (L x W x H)	5" x 1" x 0.5" (approx. 12.7cm x 2.54cm x 1.27cm)

SUPPORT

For any questions, concerns, or technical assistance regarding your WINFLIKE AKB73635402 replacement remote control, please contact our customer support. We are committed to providing further support to ensure your satisfaction.

Please refer to your purchase documentation or the retailer's website for specific contact details.