

## AIDITIYMI BN59-01315L

# AIDITIYMI BN59-01315L Replacement Remote Control User Manual

Brand: AIDITIYMI | Model: BN59-01315L

## 1. INTRODUCTION

This manual provides instructions for the AIDITIYMI BN59-01315L replacement remote control, designed for use with various Samsung LED, LCD, and Smart HDTV models. This remote functions as a direct replacement and typically requires no programming or pairing.

## 2. PACKAGE CONTENTS

- 1 x AIDITIYMI BN59-01315L IR Remote Control

*Note: Batteries and additional instructions are not included in the package.*

## 3. SETUP

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct placement for two AAA

batteries.

### 3.2 Initial Use

The AIDITIYMI BN59-01315L remote control is an infrared (IR) replacement unit. No programming or pairing is required. Once batteries are correctly installed, the remote is ready for immediate use with compatible Samsung TV models.

## 4. OPERATING INSTRUCTIONS

Point the remote control directly towards the infrared receiver on your Samsung TV. Ensure there are no obstructions between the remote and the TV. Press the desired button to perform the corresponding function.





Image: Front view of the remote control, displaying the layout of all functional buttons.

#### 4.1 Key Functions Overview

- **Power Button** (⏻): Turns the TV on or off.
- **Source Button**: Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9)**: Direct channel selection.
- **VOL (+/-)**: Adjusts volume up or down.
- **CH (▲/▼)**: Changes channels up or down.
- **MUTE**: Mutes or unmutes TV audio.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Navigates menus and selects options.
- **Home Button** (⌂): Accesses the Smart Hub or main menu.
- **Netflix, Prime Video, ZEE5 Buttons**: Direct access to streaming applications.
- **Return Button**: Goes back to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Color Buttons (A, B, C, D)**: Used for specific functions within certain applications or menus as indicated on the TV screen.

#### 5. COMPATIBILITY

This replacement remote control is compatible with a wide range of Samsung TV models, including but not limited to:

- UN43RU7100, UN55RU7300, UN65RU730D, UN55RU730D, UN43RU7200, UN50RU7100, UN43RU710D
- UN50RU7200, UN65RU7100, UN55RU7100, UN58RU7100, UN55RU7200, UN58RU710D, UN55RU710D
- UN65RU7200, UN58RU7200, UN65RU710D, UN75RU7100, UN65RU7300, UN75RU7200,

UN75RU710D

- UN50RU710D, UN55RU7200FXZA, UN43TU7000FXZA, UN65TU7000FXZA, UN55TU7000FXZA
- UN75RU7100FXZA, UN50TU7000FXZA, UN58TU7000FXZA, UN58RU7100FXZA, UN70TU7000FXZA
- UN82TU7000FXZA, UN58RU7200FXZA, UN50RU710DFXZA, UN55RU7100FXZA, UN65RU7200FXZA
- UN55RU7300FXZA, UN55RU710DFXZA, UN43RU7100FXZA, UN43RU7200FXZA, UN43RU710DFXZA
- UN50RU7100FXZA, UN50RU7200FXZA, UN58RU710DFXZA, UN65RU7100FXZA, UN65RU710DFXZA
- UN75RU7200FXZA, UN75RU710DFXZA, UN75TU7000FXZA

*If your Samsung TV model is not listed, please refer to the product listing or contact customer support to confirm compatibility.*

## 6. TROUBLESHOOTING

### 6.1 Remote Not Responding

- **Check Batteries:** Ensure the AAA batteries are new and inserted with correct polarity (+/-). Replace old batteries if necessary.
- **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the TV's infrared sensor.
- **Distance:** Operate the remote within a reasonable distance from the TV.
- **TV Sensor:** Ensure the TV's infrared sensor is clean and not obstructed.

### 6.2 Intermittent Functionality

- **Battery Power:** Weak batteries can cause intermittent operation. Replace them.
- **Interference:** Strong light sources or other electronic devices emitting infrared signals might interfere. Try using the remote in a different environment.

## 7. MAINTENANCE

### 7.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.

### 7.2 Battery Care

- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

## 8. SPECIFICATIONS

<b>Model Number</b>	ADASCTY-BN59-01315L-AD01 (also known as BN59-01315L)
<b>Product Dimensions</b>	7 x 2 x 0.6 inches
<b>Item Weight</b>	3 ounces

<b>Batteries Required</b>	2 x AAA (Alkaline recommended)
<b>Color</b>	Black
<b>Special Feature</b>	Ergonomic design
<b>Compatible Devices</b>	Samsung Televisions
<b>Manufacturer</b>	AIDITIYMI Factory

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation provided with your original purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.